# WiFi Trail Camera

## **User Manual**



#### I: Power Switch and SETUP

OFF: The camera power off;

SETUP: The screen will open, you can set the working mode and parameters etc.

ON: Press OK key, waiting 10s, the screen will close, the camera enters infrared detect mode.



Note: First push the switch to SETUP, setting MENU, and push the switch to ON!

## II: The instruction of operation keys (Push the switch to SETUP)

| MENU     | The screen is open, press the MENU, the left and right keys to translation, the |
|----------|---|
|          | up and down keys to select, the OK key to confirm.                              |
| REPLAY   | Press REPLAY to start replay mode, the up and down keys to select, press the    |
|          | OK key to play/pause, and then press Replay to exit.                            |
| SHOT     | Press SHOT to take / record pictures manually, press SHOT to exit.              |
| MODE     | Press MODE to manually switch the photographing / recording mode.               |
| $\wedge$ | Up  |
| V        | Down  |
| <        | Left  |
| >        | Right   |
| OK       | Confirm   |

## III: Recording mode setting

| Video Resolution | 2.7K/1080P/720P |
|------------------|-----------------|
| Video Length     | 5s-10Mins       |
| Audio Recording  | OFF/ON          |

**Note:** The audio recording function is synchronized with the recording, not recorded separately. If you select OFF, there is no sound in the video; Select ON, the video has sound.

#### **IV:** Photo mode setting

| Photo Quality | 48MP/42MP/36MP/32MP/24MP/20MP/16MP/8MP/4MP/2MP |
|---------------|--|
| Photo Burst   | 1P/2P/3P/4P/5P                                 |

## V: Menu setting

| Mode                       | Motion Detection/Time lapse normal/ Time lapse video                     |
|----------------------------|--|
| Work Time                  | Off/On   |
| Photo or Video             | Photo/Video/Photo + Video  |
| <b>Detection Delay</b>     | 5s-1Hour   |
| PIR sensitive              | Low/Middle/High  |
| <b>Motion Test</b>         | Testing PIR trigger function   |
| Fill Light Distance        | Near/Middle/Far  |
| Date/time                  | Set date/time  |
| Date Format                | D/M/Y or M/D/Y or Y/M/D  |
| Time Format                | 24H/12H  |
| Loop Recording             | On/Off   |
| Beep Sound                 | On/Off   |
| Memory card format         | Format SD card and delete all data                                       |
| Language                   | English/ Russian/Français /Deutsch/Italiano/Spanish/Chinese/Poland/Japan |
| <b>Password Protection</b> | Off/On   |
| Factory Reset              | Reset to default settings  |
| Version info               | Firmware and Bluetooth version number                                    |

#### VI: Quick operating instructions

- 1: Install 8pcs AA batteries (Pay a attention to the anode and cathode), and a 4GB~128GB memory card(Please format it before use);
- 2: Push the switch to SETUP, the screen is on, setting menu, mode, parameters, etc;
- 3: Push the switch to ON, press ok key, waiting 10s, the screen is going out, the camera will enter infrared detect mode. If it can detect objects, it will take pictures/videos and save them in the memory card. If it does not detect objects, then the camera will enters standby mode.
- 4: Push the switch to SETUP, the screen is on, press Replay, it can replay the photo and video files, Press MENU, you can choose to delete photo / video files.
- 5: Push the switch to OFF, and camera connect the computer by USB cable, the screen is on, you can browse the photo / video files of the memory card on the computer.
- 6: Google Play or APP store to searching APP name TrailCam Go, or scan these QR code to download the APP software and install it on phone.





(Android QR Code)

(IOS QR Code)

Installed the APP on phone, open the Bluetooth and APP, and add the camera to APP, and setting menu, review files, download, delete files with APP etc.

#### Note:

- 1: If setting password protection, forget the password, please install the batteries to camera, press UP and OK key at the same time, and push the switch to SETUP, will delete the password.
  - 2: The camera will auto power off when no any operation after 3mins.

#### VII: Parameters

| Lens             | 3MP 1/3 Sensor CMOS                            |
|------------------|--|
| Screen           | 2.0 inch LCD                                   |
| Video Resolution | 2.7K/1080P/720P                                |
| Video Format     | MP4  |
| Video Length     | 5s-10Mins                                      |
| Photo Resolution | 48MP/42MP/36MP/32MP/24MP/20MP/16MP/8MP/4MP/2MP |
| Image Format     | JPG  |
| Photo Burst      | 1P/2P/3P/4P/5P                                 |
| Trigger Time     | 0.3s-0.6s                                      |
| IR Distance      | 1-20 m   |
| PIR Angle        | 120 angle                                      |
| Lens Angle       | 100 angle                                      |
| IR LED           | 46pcs 940nm                                    |
| ISO              | Automatic                                      |

| Memory Card   | 4G~128GB                   |
|---------------|----------------------------|
| Battery       | 8pcs AA batteries or DC 6V |
| Standby Time  | 6 months                   |
| Waterproof    | IP66                       |
| Net weight    | 300g                       |
| Size          | 140*98*73MM                |
| Certification | CE,FCC,ROHS                |
| Working       | -10°C~+60°C/-14°F~+120°F   |
| Temperature   |                            |