
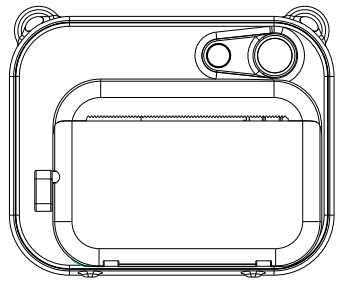
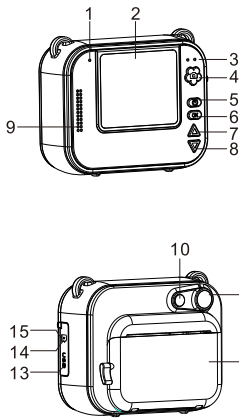


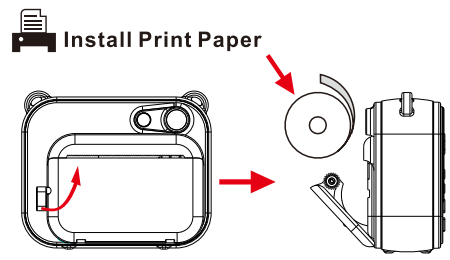

尺寸：70*100mm

<p>User Manual</p>  <p>DIY Instant Digital Camera</p>	<p>Function Button</p>  <ol style="list-style-type: none"> 1. Mic 2. Screen 3. Indicator 4. Shutter/Upward 5. Power /Menu 6. OK/Downward 7. Previous/Leftward 8. Next/Rightward 9. Speaker 10. Selfie Mirror 11. Lens 12. Paper Slot 13. USB 14. SD Card Slot 15. Power Switch 	<p>Print Mode</p> <p>Install Print Paper</p>  <ol style="list-style-type: none"> 1. Pay attention to the installation direction of the paper. 2. While closing the lid, make sure 5cm print paper is out of lid. <p>Printing While Taking Photo</p> <ol style="list-style-type: none"> 1. Press OK in photo-taking mode to turn on print mode, camera will automatically print while taking photo. 2. Choose suitable print density (in setting menu) at different situation to improve the print quality. 3. If camera doesn't print, please check whether fixed the paper in wrong way or not. 4. Turn print mode on in photo-taking mode, then press OK to print the photo in playback mode. 	<p>Operation Guide</p> <p>Power on/off</p> <ul style="list-style-type: none"> * Please Toggle the Power Switch to "ON" before starting the camera. * Long press Power for 3 seconds to power on/off. <p>Menu</p> <ul style="list-style-type: none"> * Press Power to enter menu, press Left/Right to select modes, press OK to enter the selected mode. <p>Photo-taking Mode</p> <ul style="list-style-type: none"> * Press Left/Right to select among photo modes, photo frame, filter effect and special effect. * Press OK to turn print mode on/off. * Press Camera to take one photo. * Press Power to go back to menu. <p>Video-taking Mode</p> <ul style="list-style-type: none"> * Press Camera to start or end taking video. * Press Left/Right to change filters. * Press Power to go back to menu.
<p>MP3 Mode</p> <ul style="list-style-type: none"> * Press Left/Right to select MP3 or Story, then press OK to enter the selected one. * Press Left/Right to switch songs/stories while playing, and OK to pause/continue. * Press Power to go back to menu. <p>Tips:</p> <ul style="list-style-type: none"> * Please insert SD Card to automatically build MP3 & story folders. * Please download music and stories to mp3 & story folders respectively. * Music and stories format required: MP3 format. <p>Playback Mode</p> <ul style="list-style-type: none"> * Press Left/Right to view videos and photos you took. * Press OK to start or stop playing video. * Long press OK to show Delete interface, press Left/Right to choose yes/no, then press OK to confirm. * Turn print mode on in photo-taking mode, then press OK to print the photo in playback mode. * Video format: AVI; Photo format: JPG. * Press Power to go back to menu. 	<p>Game Mode</p> <ul style="list-style-type: none"> * Press Left/Right to select games, press OK to enter selected game. <p>4 Games: Teris / Sokoban / Power Pinball / Gluttonous Snake.</p> <ul style="list-style-type: none"> * Left/Right move upward/rotate in teris; OK move downward/rotate in teris; Left/Right move rightward; Left/Right move leftward. * Press Power to exit game and go back to menu. <p>Settings</p> <ul style="list-style-type: none"> * Press Left/Right to choose settings, Press OK to enter the selected one and press Power to go back to settings menu. * Press OK again to show format/default setting interface, press Left/Right to choose YES/NO, press OK to confirm. 	 <ul style="list-style-type: none"> * Press Left/Right to select different configurations, press OK to confirm. * Press Left/Right to turn the volume up/down, press OK to confirm. * Press Camera to switch among year/month/day/hour etc, press Left/Right to adjust the value of year/month/day/hour etc, press OK to confirm and exit. <p>Warm Reminding:</p> <ol style="list-style-type: none"> 1. This Camera doesn't contain built-in memory. Please insert SD Card if you want to save photo and videos. Recommend to use high quality Class 10 Micro SD Card, max support 32 GB with FAT 32 format. 2. Don't loosen the USB connection and plug out the Micro SD card while downloading file from camera. 3. Do not recommend to use camera when it is in charging. 	 <p>Made in China</p>