

*Saving paper  
up to 100000*



#### SPECIFICATION

⑤ LANYARD HOLE    ③ ERASE BUTTON    ④ REPLACEABLE 3V BATTERY



② WRITING SURFACE

① STYLUS DOCK

#### How to use?

1. Pull out the pen ;
2. Writing on the writing area directly with the pen;
3. Press the remove button to erase the writing content;  
Remark: please replace a new battery when remove button without function.
4. How to replace the built-in battery?  
Losen the screw, pull out the battery pack to replace new battery.
5. In case of losing the pen, please use a lanyard to connect to the pen.

#### Warning

1. Do not use this product in humid conditions:  
Do not allow this product to get wet.  
Do not place water filled objects such as vases on top of this product.  
Do not place flame sources, such as candles on top of this product.  
Do not use liquid or aerosol cleaners.
2. Please use the pen which included in the product to write,  
please don't use other kinds of pens or other sharp objects.
3. In case of products damaged or liquid leaked, please place  
the product in a sealed bag and put in in the non-recyclable trash can,  
please wash your hands clearly if leaked liquid touched by the skin,  
if the situation is serious, immediately go to the hospital  
for better treatment.
4. Please don't open the products by yourself, please  
contact our service department if any help needed.
5. Please use the same type of battery when you replace a new one

CE RoHS

Made in china