


RUNNER II R1 A/B RUNNER II R1 C/D
RUNNER II R2 A/B RUNNER II R2 C/D

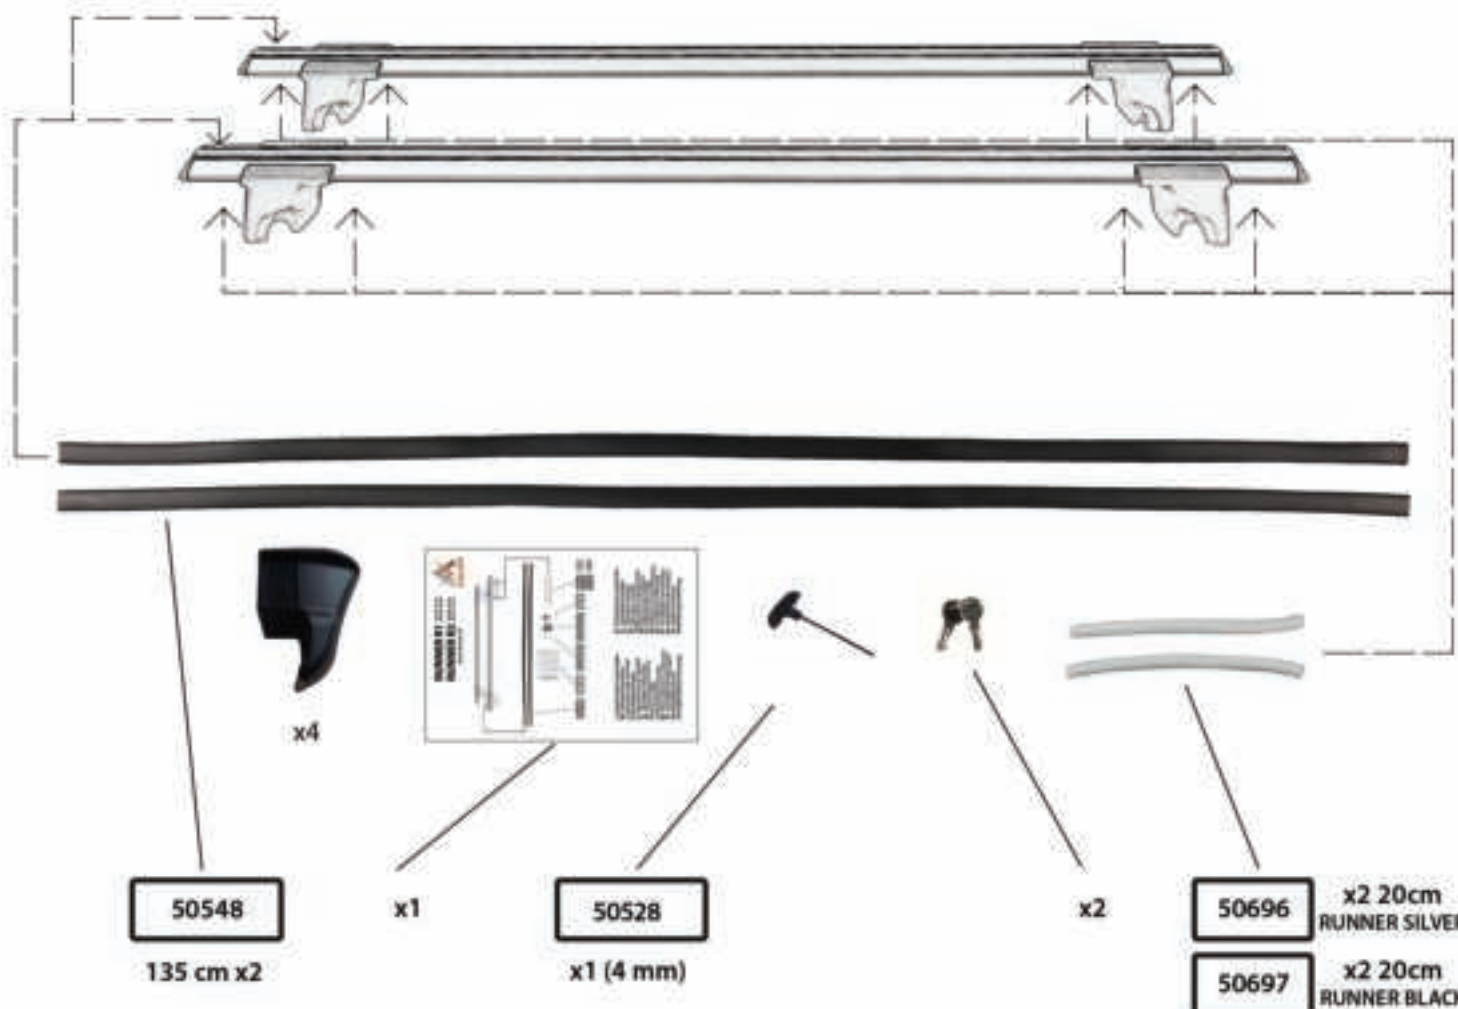

WWW.AGURI.EU




LIT Pritvirtinimo instrukcijos
 PL Instrukcja montażu
 CZ Návod na montáž
 SK Návod na montáž
 SLO Navodila za pritrjevanje
 HR Uputa za sastavljanje
 HU A felszerelés módja
 GR Οδηγίες συναρμολόγησης
 UA Інструкція з монтажу
 BY Інструкцыя па мантажы
 RO Instructiuni de montare
 TK Uydurma talimat
 N Monteringsveiledning


I Istruzioni per il montaggio
 GB Fitting instructions
 F Instructions de montage
 D Montageanleitung
 E Instrucciones de montaje
 NL Montage-instructies
 DK Monteringsinstruktion
 FIN Asennusohje
 S Monteringsanvisning
 RU Инструкция по установке
 PT Instruções de Montagem
 EST Paigaldusjuhend
 LAT Stiprināšanas instrukcija



RUNNER A/B

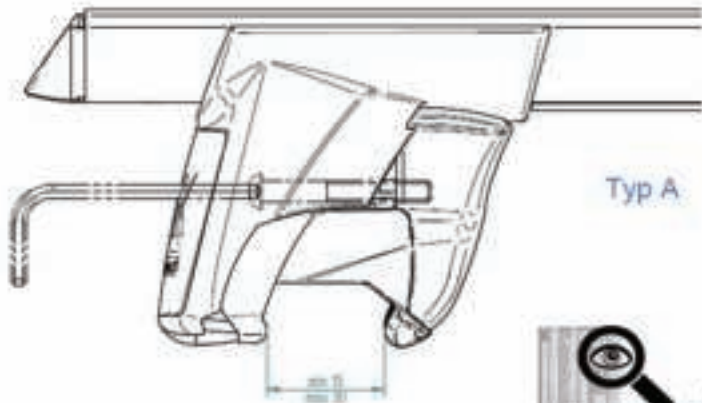

Typ A

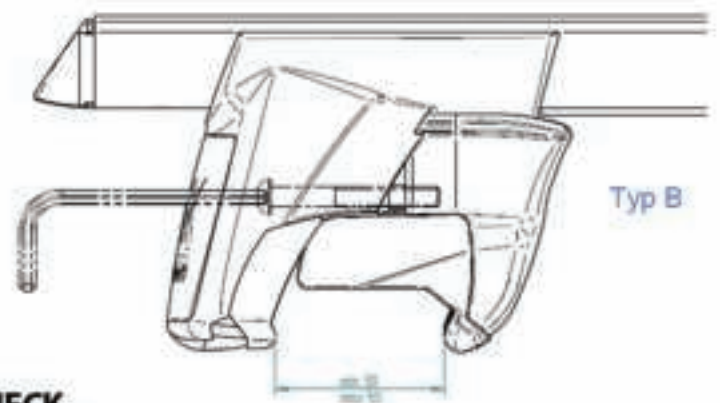

Typ B




CHECK APPLICATION


A

B

RUNNER C/D

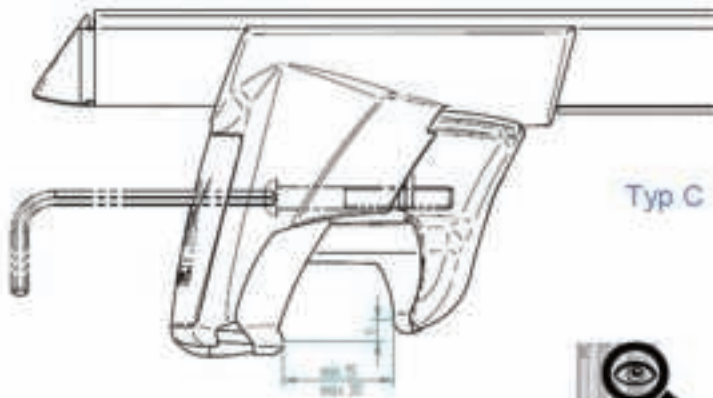

Typ C

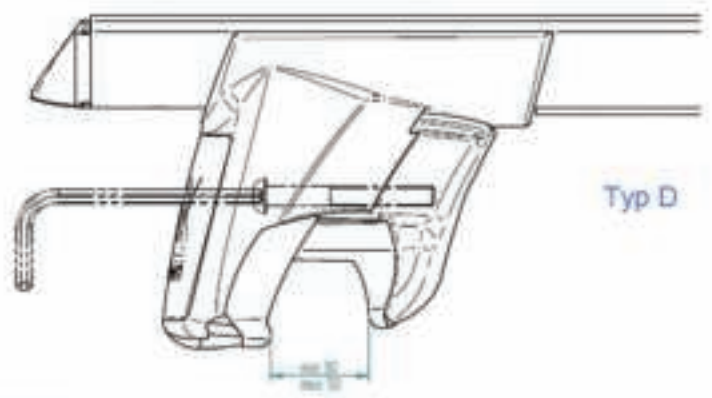



Typ D





CHECK APPLICATION


C

D

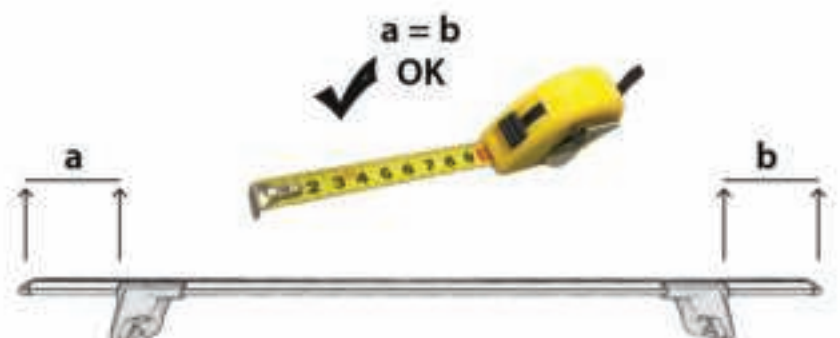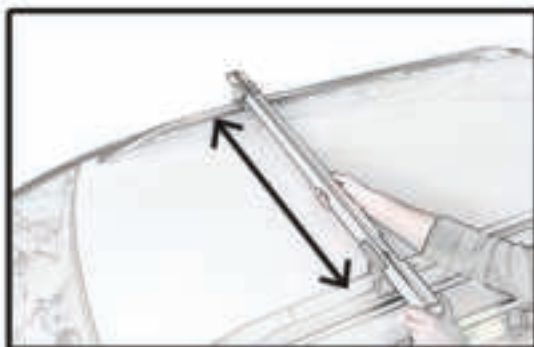


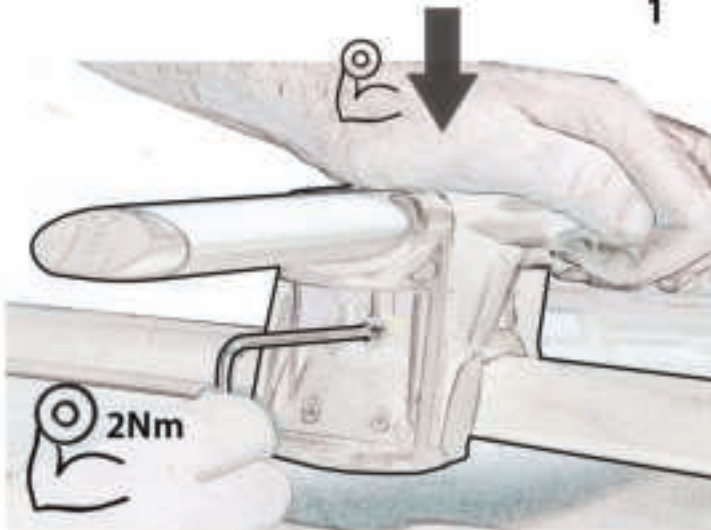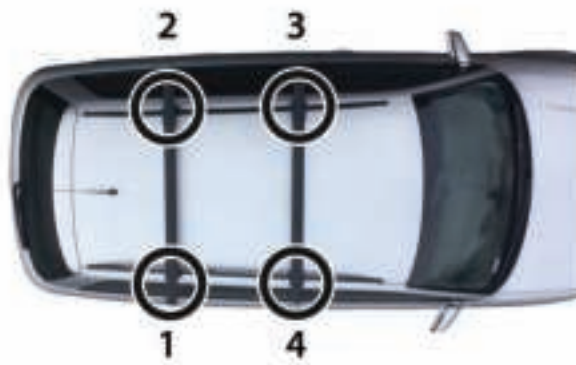


1 - 2 - 3 - 4

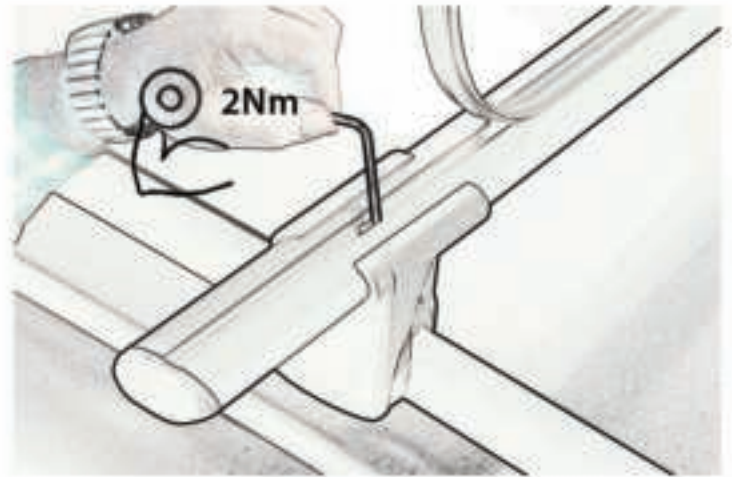


1 - 2 - 3 - 4

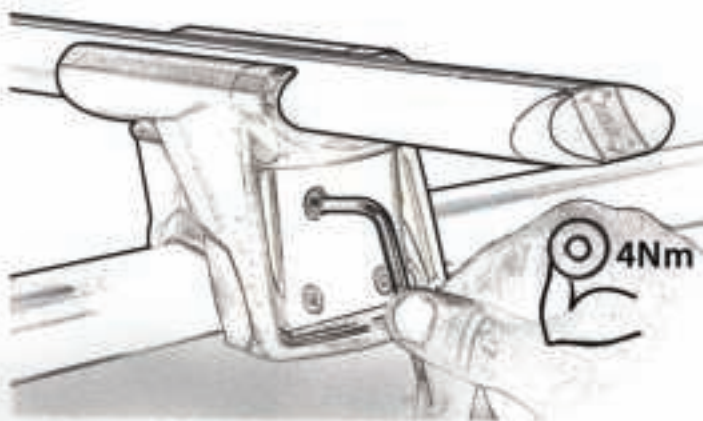

1 - 2 - 3 - 4

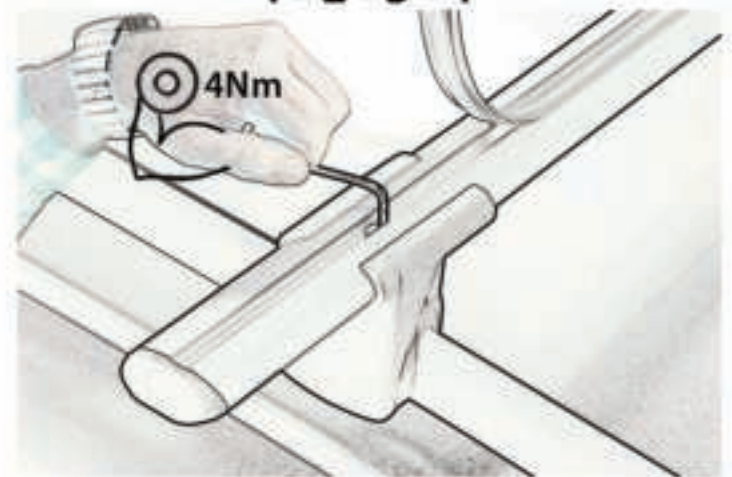


1 - 2 - 3 - 4

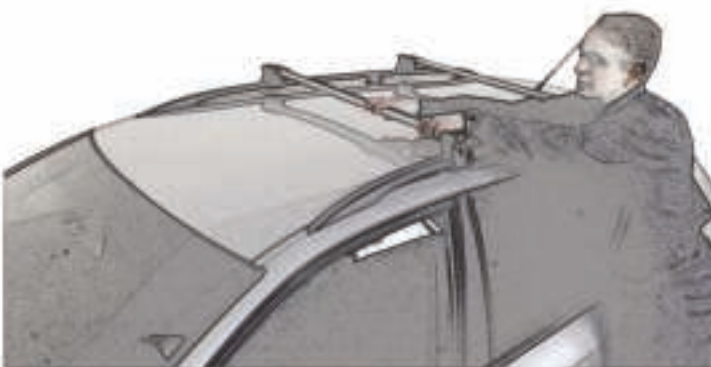

CHECK



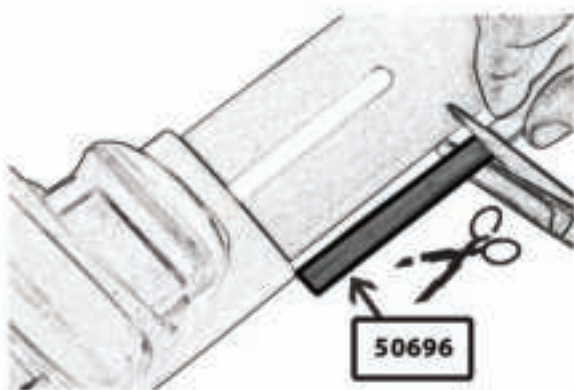

OPTIONAL ACCESSORIES



50443

