

Esiena iF360 - Home Music Centre

www.edifier-international.com
© 2010 Edifier International Limited. All rights reserved.
Printed in China

NOTICE:
For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior notice.
Products of Edifier will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. If any difference is found, the actual product prevails.

User manual

Important safety instruction

Thank you for purchasing this Edifier product. For generators, Edifier tries to provide powered speaker products to satisfy the need of our end users, with the most favorably way. This product can add to your home entertainment personal computer, and also have the great sound performance. Please read this manual carefully to obtain the best of this system.

CAUTION
To prevent the risk of electric shock, do not attempt to open (or modify) this case or enclosure. To ensure your used device, please use the return and collection of important operating and maintenance (warranty) instructions in the literature accompanying the product.

The enclosure point inside the triangle is intended to alert the user to the presence of important operating and maintenance (warranty) instructions in the literature accompanying the product.

The lightning bolt with crossed circle indicates a hazardous voltage for user. To prevent the risk of electric shock, do not attempt to open (or modify) this case or enclosure. To ensure your used device, please use the return and collection of important operating and maintenance (warranty) instructions in the literature accompanying the product.

SAFETY INSTRUCTIONS
Please read all the instructions before. Please retain this manual safely for future reference. Please acknowledge warranty.
Do not connect the apparatus to an AC extension.
Do not use the speaker near water, and do not immerse them in any liquid or pour any liquid on them.
Do not touch the safety purpose of the product if it is damaged. Do not attempt to open (or modify) this case or enclosure.
For added protection during lightning storms, unplug the speakers from the electrical outlet and turn off the computer.
Do not touch the speaker when the power is on, or when the speaker is hot. Prevent risk of fire or electric shock hazards, and provide sufficient space around the speakers for proper ventilation.
Do not touch the speaker or cable conductors that are not fully insulated before the speaker's body has cooled.
Unplug the speakers from the power outlet before cleaning them with a damp cloth.
Cleaning is required when the speaker has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the speaker, the speaker has been exposed to rain or moisture, does not operate normally, or has been dropped after a service by qualified person or agency.
Do not use the plug or the power cord to disconnect with mains.

Disposal
Dispose of the product. This marking indicates that this product should not be disposed with other household wastes. Throughout the EU, it is not possible to burn the environment or human health from uncontrolled waste disposal, recycle it responsibly to prevent the contamination of natural resources. To ensure your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take the product for environmental safe recycling.

This equipment is a Class B or double insulated electrical appliance. It has been designed such a way that it does not require a safety connection to electrical earth.

1
English

Box content

Box content

 
- a. iF360 Home Music Centre
- b. Remote control
- c. Power cord
- d. Wire antenna
- e. 9 pin dock adapter for iPod/iPhone
- f. 1.8m Hi-Load RCA connecting cable
- g. User manual



2
English


Product illustration and functional description

- 1. CD slot
- 2. Digital display panel
- 3. Speaker grille
- 4. CD ejection button
- 5. Bass & Treble knobs
- 6. Previous track/station select button
- 7. Rotary touch-sense volume control
- 8. Play/Pause button
- 9. Next track/station select button
- 10. Stop/Search button
- 11. Input selection button
- 12. iPod dock
- 13. iPod dock cover
- 14. Ventilation slots
- 15. FM wire antenna jack connector
- 16. USB port
- 17. SD card port
- 18. Video-out jack
- 19. RCA input jacks
- 20. Power cord receptacle
- 21. Power on/off switch

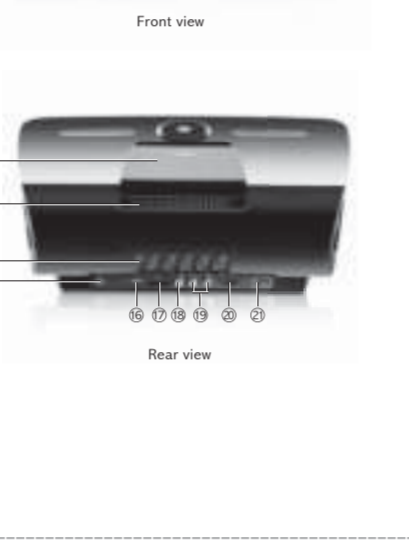

3
English

 Powering on

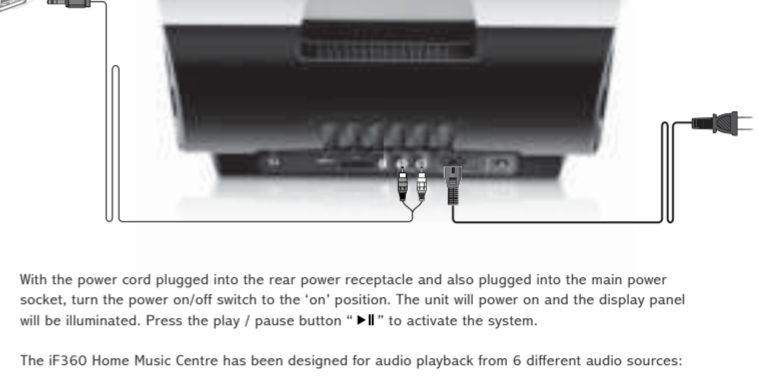

With the power cord plugged into the rear power receptacle and also plugged into the main power socket, turn the power on/off switch to the "on" position. The unit will power on and the display panel will be illuminated. Press the play / pause button "▶" to activate the system.


The iF360 Home Music Centre has been designed for audio playback from 6 different audio sources:

- iPod:** Lift up the iPod dock cover and insert
- CD:** Insert CD into the CD slot located below the display panel
- FM:** Connect wire antenna (supplied) to rear antenna jack for optimum FM sensitivity
- SD:** Plays recorded MP3 and WMA audio files
- USB:** Plays recorded MP3 and WMA audio files
- Aux-In:** Connects to an external source via dual RCA 3.5mm connector cable (supplied)

The iF360 Home Music Centre also provides a video-out connection. An extension cable (not supplied) can be connected between a television/display and the iF360 Home Music Centre to enable for iPod video or movies to be viewed on the television/display. Full iPod navigation is possible either via the remote control or from the unit itself.

4
English

 Illustration and functional description of control buttons

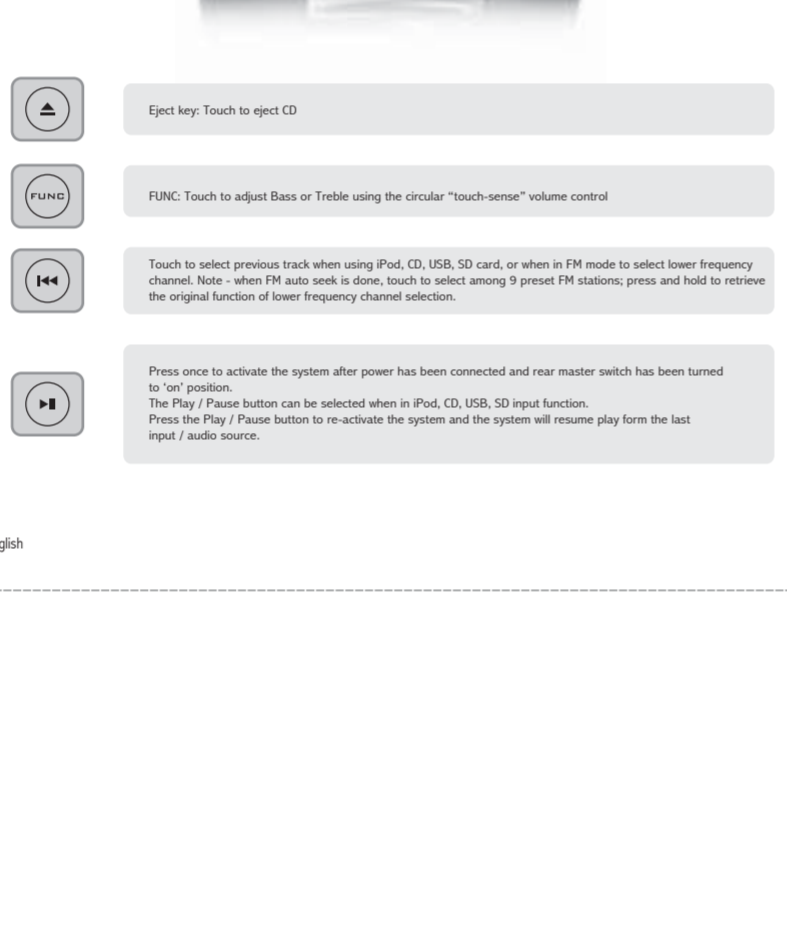

- ▶** Eject key: Touch to eject CD
- ▶** FM/CD: Touch to adjust Bass or Treble using the circular "touch-sense" volume control
- ▶** Touch to select previous track when using iPod, CD, USB, SD card, or when in FM mode to select higher frequency channel. Note: when FM each touch to select every 9 preset FM stations; press and hold to restore the original function of higher frequency channel selection.
- ▶** Press once to activate the system after power has been connected and rear master switch has been turned to "on" position. Press the Play / Pause button to be selected when in iPod, CD, USB, SD input function. Press the Play / Pause button to re-activate the system and the system will resume play from the last input / audio source.

5
English

Illustration and functional description of control buttons

- FM**: Touch to select next track when using iPod, CD, USB, SD card, or when in FM mode to select higher frequency channel. Note: when FM each touch to select every 9 preset FM stations; press and hold to restore the original function of higher frequency channel selection.
- iPod**: Touch to start audio FM search. Touch to stop iPod search. Note: the display panel will show the track played and CD capacity. Note: the display panel will show the track played and CD capacity.
- USB / SD**: Touch to select USB mode. Note: the display panel will show the track played and CD capacity.
- FM / CD**: Touch to switch between USB - SD - Aux input - iPod - FM - CD

6
English

How to use the remote control

The remote control will operate within a distance of 7m from the iF360 Home Music Centre. Pressing any button on the remote control will illuminate the red LED bulb in the control itself. Always point the remote in the direction to the front of the iF360 Home Music Centre.

- 1. **▶** Power on/Standby
- 2. **▶** Eject key: Press once to eject. Press again to cancel eject.
- 3. **▶** Eject key: Press to eject the CD disc.
- 4. **▶** Buttons keys "FM" / "CD"
 - a. When in CD mode, pressing the "FM" button will select the corresponding track number. Pressing the "SELECT" button will automatically play the selected track. Pressing the "SELECT" button in FM mode will select every 9 preset FM stations; press and hold to restore the original function of higher frequency channel selection.
 - b. To move on FM station. First time the required radio station using the frequency up "▲" or frequency down "▼" buttons. Once a station has been selected, press and hold a numeric "0-9" key for approx. 2 seconds to assign the selected station to that numeric key.
- 5. **▶** Input selection buttons: FM / Aux / USB / iPod
- 6. **▶** Select FM radio: USB / Aux / iPod
- 7. **▶** Select USB MP3 or WMA formatted audio: iPod / Aux / USB / iPod
- 8. **▶** Select CD audio: CD / USB / iPod
- 9. **▶** Select SD MP3 or WMA formatted audio: Aux / USB / iPod
- 10. **▶** Select AUX input audio from an external source such as MP3 player / external CD player / PC sound card



7
English

How to use the remote control

The remote control will operate within a distance of 7m from the iF360 Home Music Centre. Pressing any button on the remote control will illuminate the red LED bulb in the control itself. Always point the remote in the direction to the front of the iF360 Home Music Centre.

- 1. **▶** Power on/Standby
- 2. **▶** Eject key: Press once to eject. Press again to cancel eject.
- 3. **▶** Eject key: Press to eject the CD disc.
- 4. **▶** Buttons keys "FM" / "CD"
 - a. When in CD mode, pressing the "FM" button will select the corresponding track number. Pressing the "SELECT" button will automatically play the selected track. Pressing the "SELECT" button in FM mode will select every 9 preset FM stations; press and hold to restore the original function of higher frequency channel selection.
 - b. To move on FM station. First time the required radio station using the frequency up "▲" or frequency down "▼" buttons. Once a station has been selected, press and hold a numeric "0-9" key for approx. 2 seconds to assign the selected station to that numeric key.
- 5. **▶** Input selection buttons: FM / Aux / USB / iPod
- 6. **▶** Select FM radio: USB / Aux / iPod
- 7. **▶** Select USB MP3 or WMA formatted audio: iPod / Aux / USB / iPod
- 8. **▶** Select CD audio: CD / USB / iPod
- 9. **▶** Select SD MP3 or WMA formatted audio: Aux / USB / iPod
- 10. **▶** Select AUX input audio from an external source such as MP3 player / external CD player / PC sound card

8
English

How to use the remote control

The remote control will operate within a distance of 7m from the iF360 Home Music Centre. Pressing any button on the remote control will illuminate the red LED bulb in the control itself. Always point the remote in the direction to the front of the iF360 Home Music Centre.

- 1. **▶** Power on/Standby
- 2. **▶** Eject key: Press once to eject. Press again to cancel eject.
- 3. **▶** Eject key: Press to eject the CD disc.
- 4. **▶** Buttons keys "FM" / "CD"
 - a. When in CD mode, pressing the "FM" button will select the corresponding track number. Pressing the "SELECT" button will automatically play the selected track. Pressing the "SELECT" button in FM mode will select every 9 preset FM stations; press and hold to restore the original function of higher frequency channel selection.
 - b. To move on FM station. First time the required radio station using the frequency up "▲" or frequency down "▼" buttons. Once a station has been selected, press and hold a numeric "0-9" key for approx. 2 seconds to assign the selected station to that numeric key.
- 5. **▶** Input selection buttons: FM / Aux / USB / iPod
- 6. **▶** Select FM radio: USB / Aux / iPod
- 7. **▶** Select USB MP3 or WMA formatted audio: iPod / Aux / USB / iPod
- 8. **▶** Select CD audio: CD / USB / iPod
- 9. **▶** Select SD MP3 or WMA formatted audio: Aux / USB / iPod
- 10. **▶** Select AUX input audio from an external source such as MP3 player / external CD player / PC sound card

9
English

Listening to the FM radio

 
The remote control will operate within a distance of 7m from the iF360 Home Music Centre. Pressing any button on the remote control will illuminate the red LED bulb in the control itself. Always point the remote in the direction to the front of the iF360 Home Music Centre.

- 1. **▶** Power on/Standby
- 2. **▶** Eject key: Press once to eject. Press again to cancel eject.
- 3. **▶** Eject key: Press to eject the CD disc.
- 4. **▶** Buttons keys "FM" / "CD"
 - a. When in CD mode, pressing the "FM" button will select the corresponding track number. Pressing the "SELECT" button will automatically play the selected track. Pressing the "SELECT" button in FM mode will select every 9 preset FM stations; press and hold to restore the original function of higher frequency channel selection.
 - b. To move on FM station. First time the required radio station using the frequency up "▲" or frequency down "▼" buttons. Once a station has been selected, press and hold a numeric "0-9" key for approx. 2 seconds to assign the selected station to that numeric key.
- 5. **▶** Input selection buttons: FM / Aux / USB / iPod
- 6. **▶** Select FM radio: USB / Aux / iPod
- 7. **▶** Select USB MP3 or WMA formatted audio: iPod / Aux / USB / iPod
- 8. **▶** Select CD audio: CD / USB / iPod
- 9. **▶** Select SD MP3 or WMA formatted audio: Aux / USB / iPod
- 10. **▶** Select AUX input audio from an external source such as MP3 player / external CD player / PC sound card


10
English

Clock setting and alarm setting

Clock setting
Press the "ALARM TIME" button on the remote control and the display will show "CLOCK SETTINGS". Press the "SELECT" button on the remote control and the HOUR display will blink. Press the "▲" to increase the hour setting. Press the "▼" to decrease the hour setting. Press the "▶" to increase the minute setting. Press the "▲" to increase the minute setting. Press the "▼" to decrease the minute setting. Press the "▶" to increase the month setting. Press the "▲" to increase the month setting. Press the "▼" to decrease the month setting. Press the "▶" to increase the day setting. Press the "▲" to increase the day setting. Press the "▼" to decrease the day setting. Press the "▶" to increase the year setting. Press the "▲" to increase the year setting. Press the "▼" to decrease the year setting. When all the adjustments have been made, press the "SELECT" button once more to revert to original display.

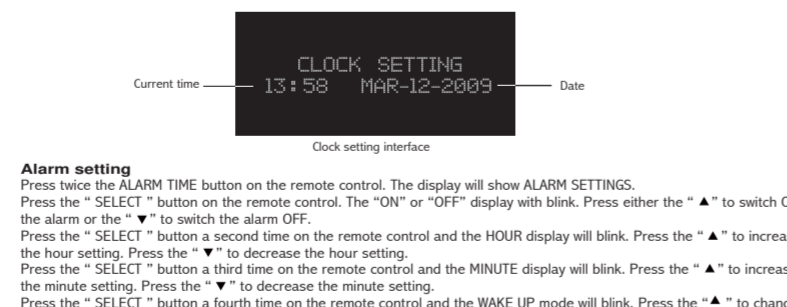


Alarm setting
Press the "ALARM TIME" button on the remote control. The display will show ALARM SETTING. Press the "SELECT" button on the remote control. The "ON" or "OFF" display will blink. Press the "▶" to switch ON the alarm or the "▼" to switch the alarm OFF.
Press the "SELECT" button on the remote control and the HOUR display will blink. Press the "▲" to increase the alarm setting. Press the "▼" to decrease the alarm setting. Press the "▶" to increase the minute setting. Press the "▲" to increase the minute setting. Press the "▼" to decrease the minute setting. Press the "▶" to increase the month setting. Press the "▲" to increase the month setting. Press the "▼" to decrease the month setting. Press the "▶" to increase the day setting. Press the "▲" to increase the day setting. Press the "▼" to decrease the day setting. Press the "▶" to increase the year setting. Press the "▲" to increase the year setting. Press the "▼" to decrease the year setting. When all the adjustments have been made, press the "SELECT" button once more to revert to the original display.

 


11
English

Clock setting and alarm setting

 Clock setting
Press the "ALARM TIME" button on the remote control and the display will show "CLOCK SETTINGS". Press the "SELECT" button on the remote control and the HOUR display will blink. Press the "▲" to increase the hour setting. Press the "▼" to decrease the hour setting. Press the "▶" to increase the minute setting. Press the "▲" to increase the minute setting. Press the "▼" to decrease the minute setting. Press the "▶" to increase the month setting. Press the "▲" to increase the month setting. Press the "▼" to decrease the month setting. Press the "▶" to increase the day setting. Press the "▲" to increase the day setting. Press the "▼" to decrease the day setting. Press the "▶" to increase the year setting. Press the "▲" to increase the year setting. Press the "▼" to decrease the year setting. When all the adjustments have been made, press the "SELECT" button once more to revert to original display.

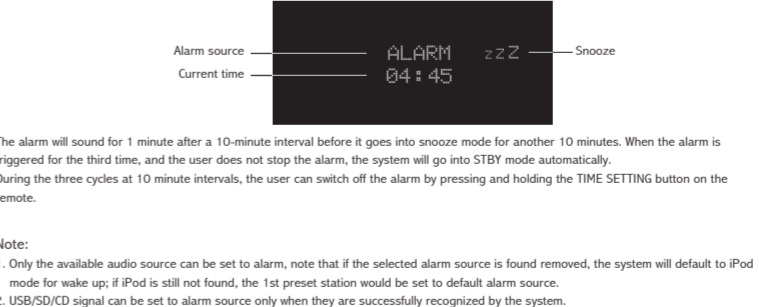

Alarm setting
Press the "ALARM TIME" button on the remote control. The display will show ALARM SETTING. Press the "SELECT" button on the remote control. The "ON" or "OFF" display will blink. Press the "▶" to switch ON the alarm or the "▼" to switch the alarm OFF.
Press the "SELECT" button on the remote control and the HOUR display will blink. Press the "▲" to increase the alarm setting. Press the "▼" to decrease the alarm setting. Press the "▶" to increase the minute setting. Press the "▲" to increase the minute setting. Press the "▼" to decrease the minute setting. Press the "▶" to increase the month setting. Press the "▲" to increase the month setting. Press the "▼" to decrease the month setting. Press the "▶" to increase the day setting. Press the "▲" to increase the day setting. Press the "▼" to decrease the day setting. Press the "▶" to increase the year setting. Press the "▲" to increase the year setting. Press the "▼" to decrease the year setting. When all the adjustments have been made, press the "SELECT" button once more to revert to the original display.

 

12
English

Specifications

Total power output:	RMS 20W x 2 (THD = 1%, 0.1% = 1kHz)
Input: nominal ratio:	≥90 dB(A) (THD = 1% = 1%)
Distortion:	≤0.5%
Frequency response:	50Hz - 20kHz
Input sensitivity:	750 mV ± 50 mV
Input type:	iPod / iPhone / SD / USB / AUX / CD / FM
Adjustment:	Adjusted by both the on-the-touch sense keys and the remote control device
Speaker units:	3 inch (76mm), magnetically shielded, 6Ω
System dimensions:	390 x 140 x 23 mm (W x H x D)
Net weight:	Approx. 4.7kg
Gross weight:	Approx. 6.0kg

13
English

Troubleshooting

- Not all speakers function:**
Please test check if the speaker wires are connected securely; then check the L/R connectors are reversed.
Check also if the audio source is faulty.
- One satellite speaker does not function when playing CD from the computer:**
This kind of phenomena is prone to happen on new computer systems that one satellite does not function when playing CD, but all right works fine when playing MP3 format files.
This is mainly due to the lack connection of CD-ROM and sound card; that one channel of CD-ROM and sound card; that one channel of CD-ROM and sound card is not connected.
- System does not work at all:**
 - 1. Please check if power is connected and if the wall outlet is switched on.
 - 2. Please check if the amplifier is still in STEREO mode.
 - 3. Please check if the remote control is turned to minimum.
 - 4. Please check if the audio input cable is connected correctly.
 - 5. Please check if there is signal from audio source.
- Noise coming from speakers:**
Amplifier crosstalk of this product generates noise, while the background noise of some VCD/DVD player or computer sound card are too high.
Please keep the system in active mode and remove the audio source. If a sound can be heard at 1 meter away from the system, then there is no problem with this product.
- Magnetic interference:**
The system is completely magnetically shielded, and can be placed near TV or monitor.
If there is slight effect of the magnetic field, some magnetic field is inevitable when the system is too close to the monitor, and it is recommended to keep a 1 meter distance between the speaker system and monitor or TV set.
- Poor FM reception:**
In certain circumstances, the reception of a local station is poor due to the weak FM signal and strong environmental interference. Try to move the system to another place to get better signal reception.

If you have any further questions or concerns regarding Edifier Products, please visit our website at: www.edifier.com, or email us for further assistance at: man@edifier.com. You may also contact us by phone, Toll Free: 1-877-4DBRBR (1334-3437).

14
English