


Dynter.

SK214 MANUAL

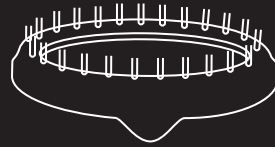


a




b




c



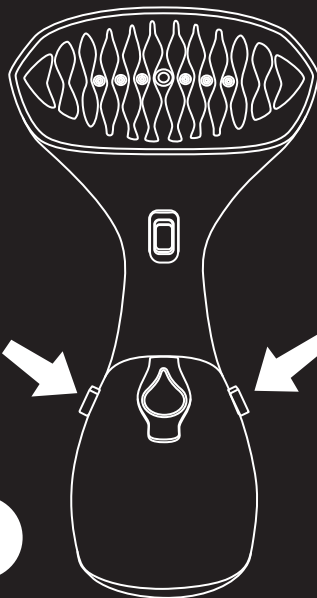




1

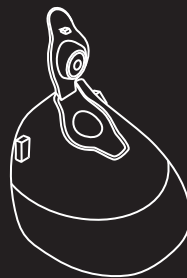

2

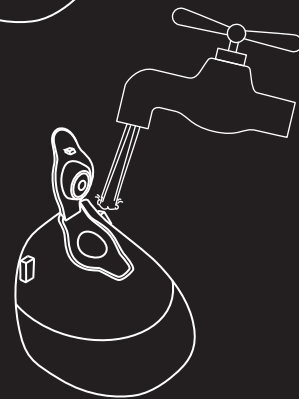


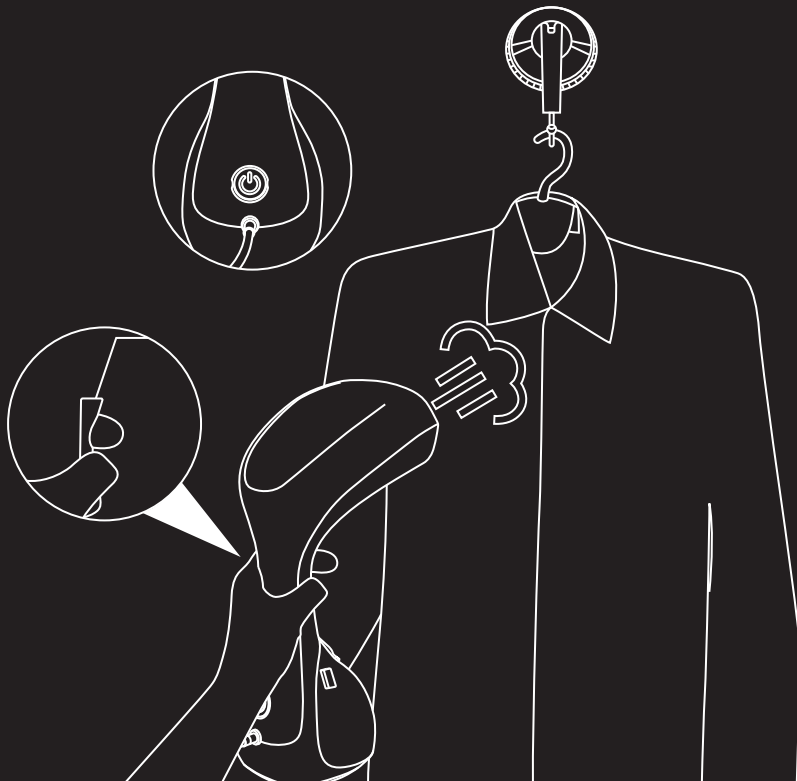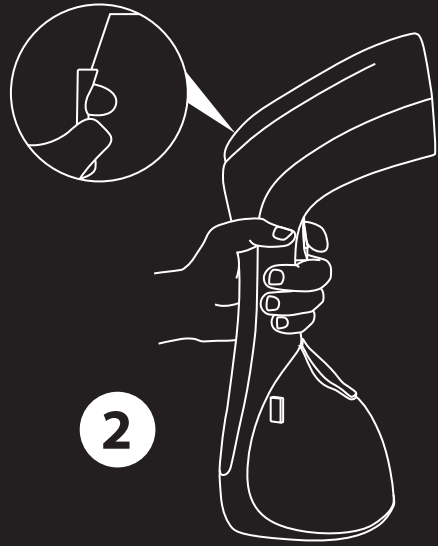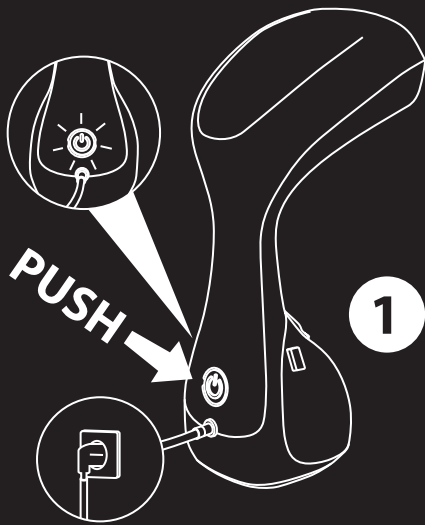

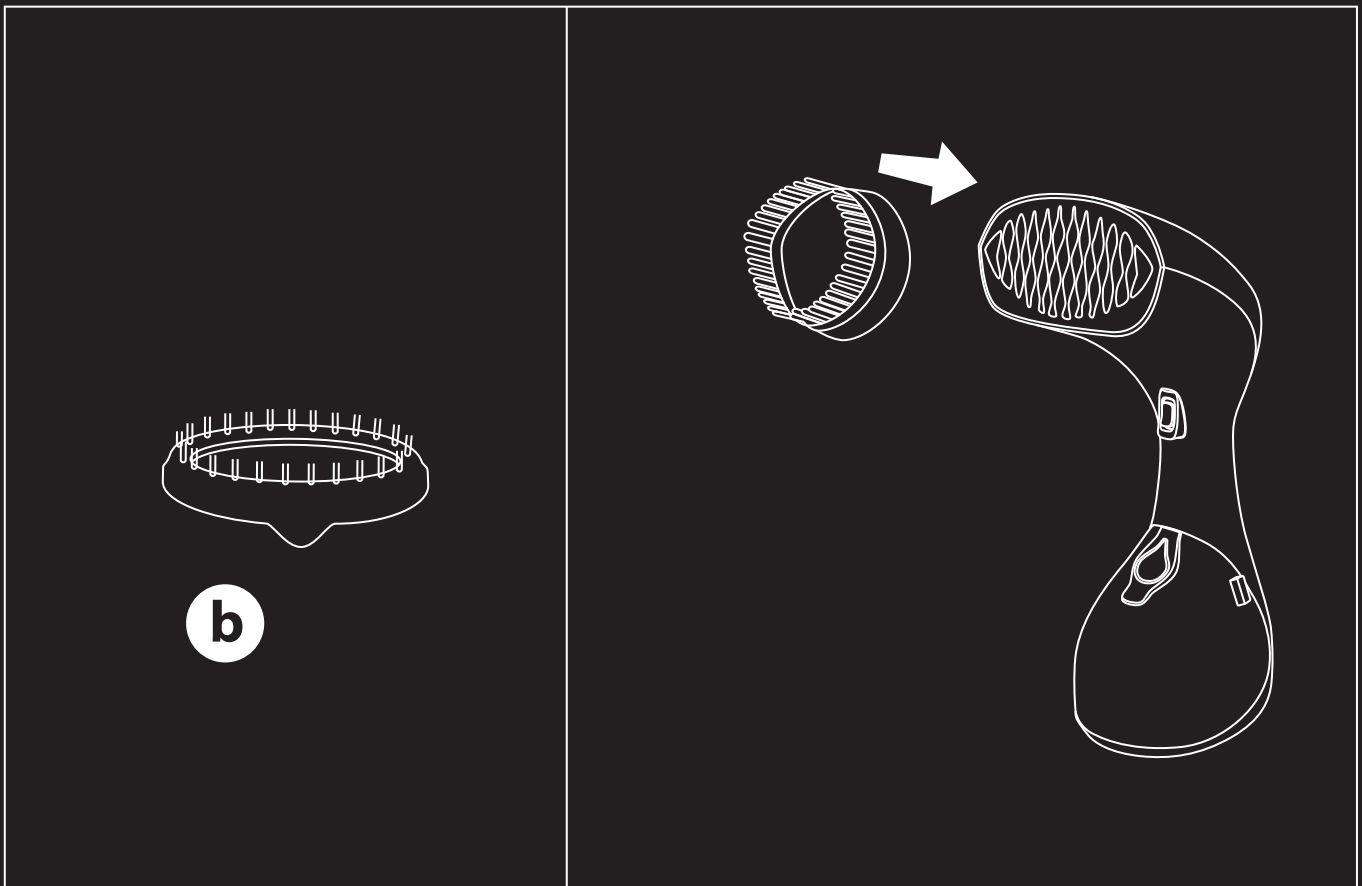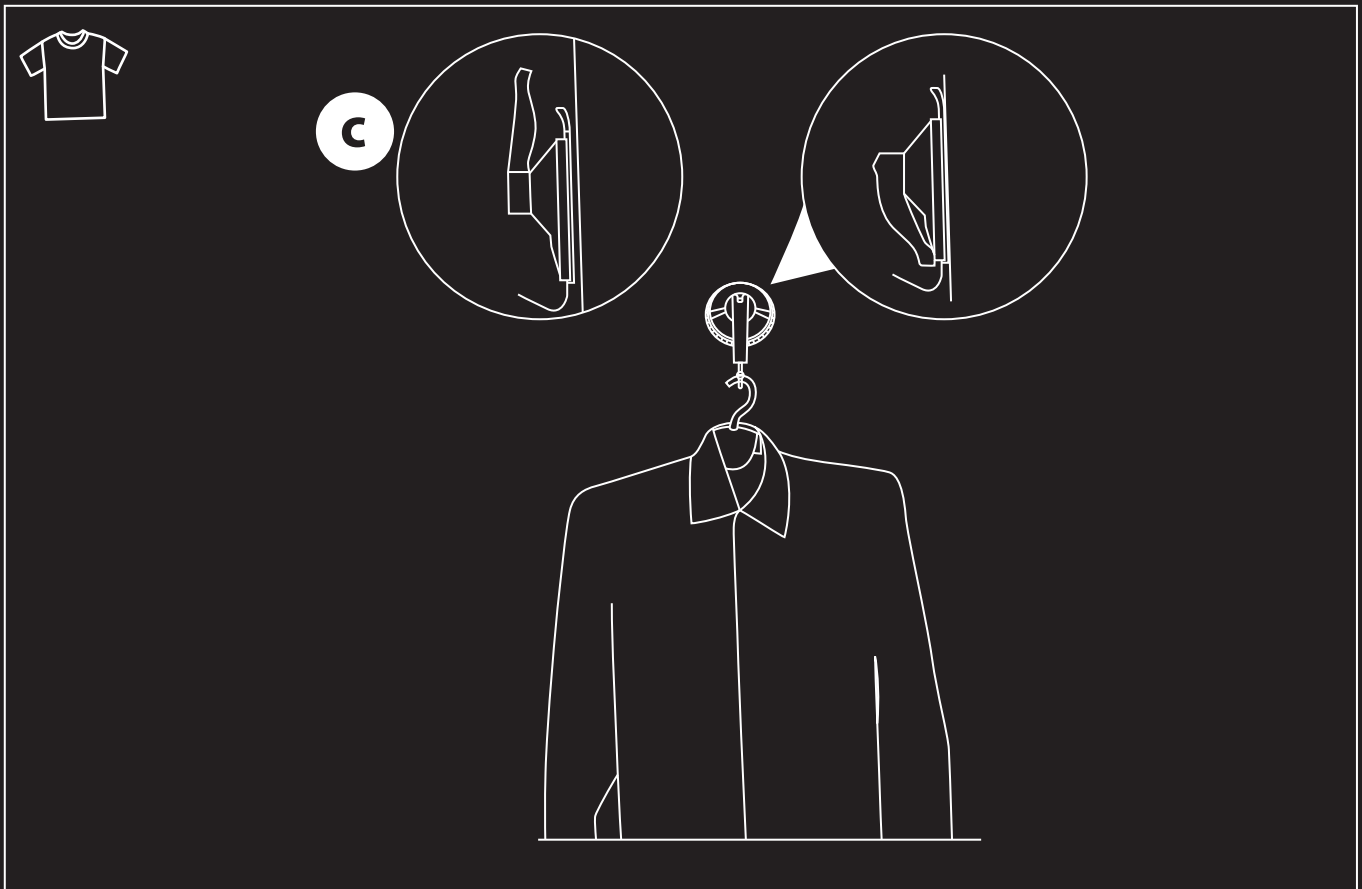




1

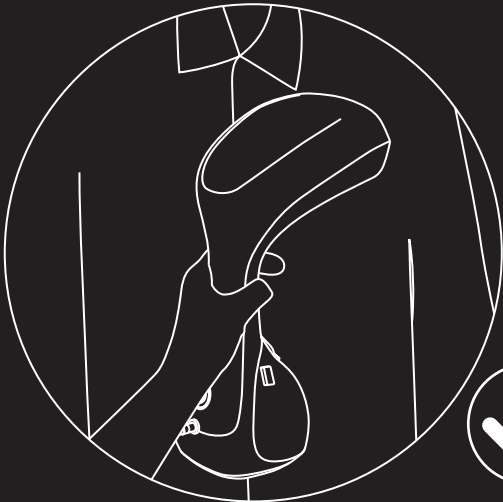

2

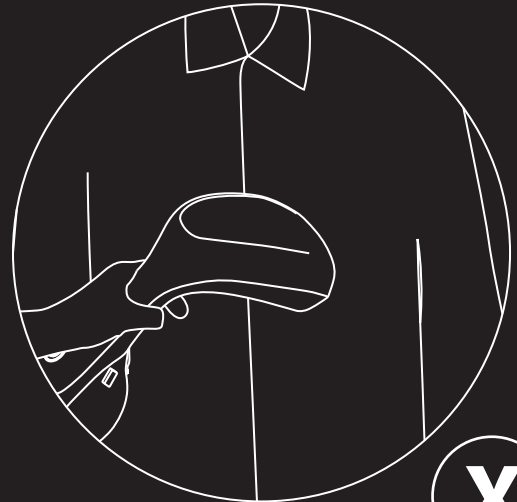


3





MAINTENANCE (DESCALE)

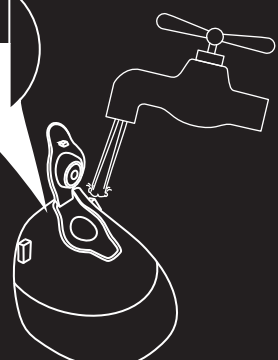


1




PUSH

2

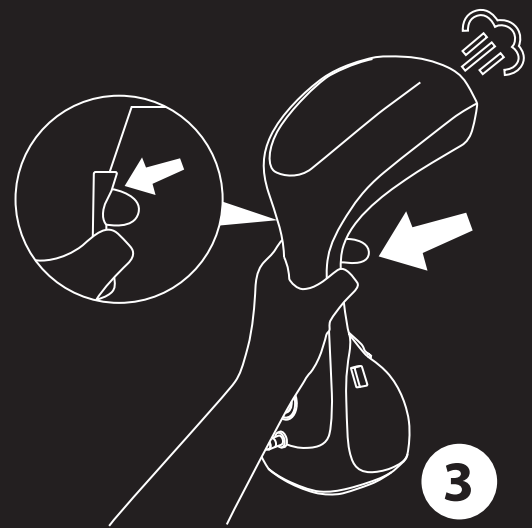


3

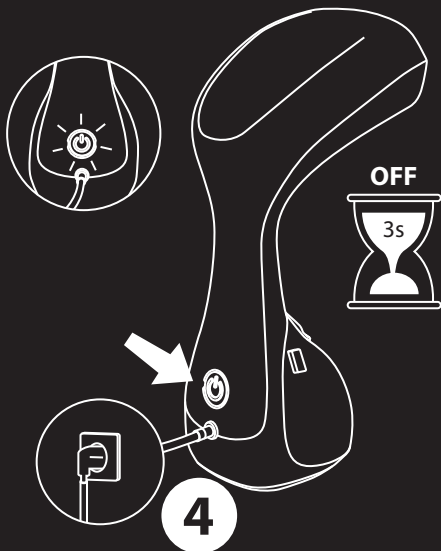

4



5

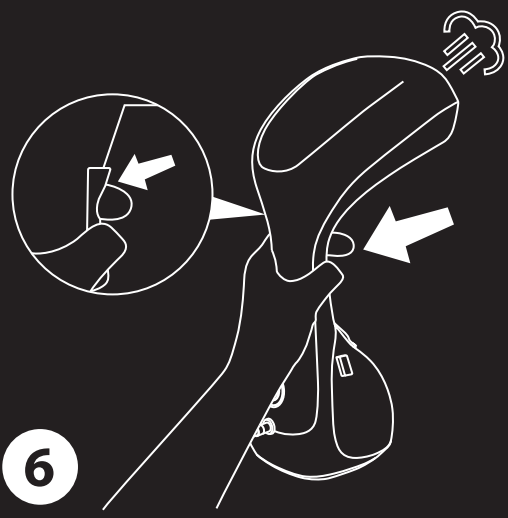

6

SK214 MANUAL

ATTENTION!

All our products are carefully tested. As a result, there may still be small water droplets in the tank, this is a residue from testing. Please read this manual carefully and keep it for future reference.

DANGER!

- Do not immerse this product in water or other liquids, and do not rinse under the faucet.
- Be careful of the hot steam generated by the ironing machine. The steam may cause burns.

WARNING!

- Before connecting the product to the power supply, please check whether the voltage marked by the product is consistent with the local power supply voltage.
- Never use the product again if the plug, power cord or product itself is obviously damaged, or the product has fallen or leaked.
- Products can only be sent to authorized repair centers for repair. Do not repair the product yourself, otherwise the warranty will be invalid.
- Users are not allowed to leave while the product is powered on.
- This product is not suitable for use by children aged 16 or below.
- Do not touch the steam head and hot surface when using. This product will generate high temperature steam during use.
- Do not aim at people and animals.
- Do not iron clothes worn on the body.
- Unplug the power plug before cleaning the product, installing or removing brush accessories or filling the water tank.
- Do not use this product if the water tank is empty.
- Do not inject perfume, detergent, ironing agent or other chemicals into the water tank, because these chemicals are not suitable for this product.

AFTER EVERY USE

1. Pull the power cord out of the power socket when it is stopped.
2. Take out the water tank, open the water inlet cover of the water tank and reverse the water tank to empty the remaining water in the tank.
3. Place it vertically on a flat desktop and wait for the product to cool down.

SK214 MANUAL

CARE, CLEANING & STORAGE

- Do not immerse this product in water or other liquids.
- Please do not try to disassemble electrical appliances.
- Avoid storing electrical appliances in damp places.
- Always ensure that the steam outlet holes are clean, free from scaling and unblocked.
- It is recommended to do descaling twice a year; put vinegar with water on a 1:2 ratio (1 part vinegar, 2 parts water) in the water tank. Turn on the steam switch and allow it to work for 5 minutes, then turn off the steam switch and pour out the remaining liquid in the water tank. After 10 hours, clean water can be filled for re-use.

TROUBLESHOOTING

The ironing machine does not heat up

- Check whether the plug is inserted correctly.
- Check the power supply.
- Check the power button.

The hand steamer does not generate steam

- Check whether the water level and water tank are loaded correctly or not.
- Press the steam button hard.

Water leaked from the water tank

- Ensure that the water does not exceed the maximum tank capacity line.
- Please ensure that the water tank inlet is properly

There is a loud buzzing sound

- Refill the water tank.



DAJA
LOGISTICS

Dynter.



CE



RoHS

FC



X

Dynter.