

PARTS DESCRIPTION

NEEDED TO START (EXCL.)

6mm

BOX CONTENT / INHALT / INHOUD DOOS / CONTENUS / CONTENUTO / CONTENIDO DE LA CAJA

1.	2.	3.	4.	5.	6.	7.	8.	9.
1x	1x	1x	2x	1x	1x	1x	1x	2x 2x 2x

DOORBELL / TÜRKLINGEL / DEURBEL / SONNETTE / CAMPANELLO / TIMBRE

- Camera Image Sensor
- Infrared LED
- Microphone
- WiFi Signal Indicator
- Call button
- TF Card Slot
- Speaker
- RESET Button
- USB Slot

INSTALLATION

MOUNTING THE DOORBELL / TÜRKLINGELMONTAGE / DE DEURBEL MONTEREN / MONTAGE DE LA SONNETTE / MONTAGGIO DEL CAMPANELLO / MONTAJE DEL TIMBRE

**A** Pre-drill holes in the wall. **B** Use the drill to create a hole for the cable. **C** Insert the mounting plate. **D** Secure the mounting plate with screws. **E** Attach the doorbell unit to the mounting plate. **F** Connect the power cable to the doorbell unit. **G** Push the doorbell unit into the wall. **H** Tighten the screws to secure the unit.

REPLACE ELECTRICAL INSTALLATION / ELEKTROINSTALLATION ERSETZEN / DE ELEKTRISCHE INSTALLATIE VERVANGEN / REMPLACEMENT DE L'INSTALLATION ÉLECTRIQUE / SOSTITUZIONE IMPIANTO ESISTENTE / SUSTITUCIÓN DE LA INSTALACIÓN ELÉCTRICA

Existing situation (marked with an X) vs. New situation (correct wiring).

ELECTRICAL INSTALLATION / ELEKTROINSTALLATION / ELEKTRISCHE INSTALLATIE / INSTALLATION ÉLECTRIQUE / CONNESSIONI ELETTRICHE / INSTALACIÓN ELÉCTRICA

min 8v- max 24v transformer (not included)

CHANGING MELODY INDOOR CHIME (NOT INCLUDED) / ÄNDERN DER MELODIE DER TÜRKLINGEL (NICHT ENTHALTEN) / MELODIE VAN BINNENDEURBEL (NIET MEEGELEVERD) WIJZIGEN / MODIFIER LA MÉLODIE DE LA SONNETTE INTÉRIEURE (NON INCLUSE) / MODIFICA DELLA MELODIA DEL CAMPANELLO INTERNO (NON INCLUSO) / CAMBIO DE MELODÍA DEL TIMBRE INTERIOR (NO INCLUIDO)


**A** Long press the call button. **B** Cycle through the melody options.

PAIRING A DBY COMPATIBLE DOORCHIME (OPTIONAL, EXCLUDED) / SYNCHRONISIEREN EINER DBY-TÜRKLINGEL (OPTIONAL, NICHT ENTHALTEN) / EEN DBY-COMPATIBELE DEURBEL KOPPELEN (OPTIONEEL, NIET MEEGELEVERD) / COUPLER UNE SONNETTE COMPATIBLE DBY (EN OPTION, EXCLUE) / ASSOCIAZIONE DI UN CAMPANELLO COMPATIBILE DBY (OPZIONALE, ESCLUSO) / EMPAREJAMIENTO DE UN TIMBRE DE PUERTA DBY COMPATIBLE (OPCIONAL, NO INCLUIDO)

**A** Plug the doorchime into the power outlet. **B** Press the call button within 20 seconds.

APP INSTALLATION / APP-INSTALATION / DE APP INSTALLEREN / INSTALLATION D'APPLI / INSTALLAZIONE APP /  
INSTALACIÓN DE LA APLICACIÓN

Android

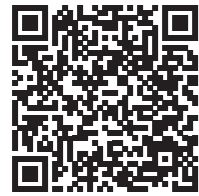

or

iOS



Byhome

Open the App Store (iOS) or Google Play (Android) on your mobile device. Then search for and install the "ByHome" APP, or scan the QR-code.

CREATING AN ACCOUNT / EIN PROFIL ERSTELLEN / EEN ACCOUNT AANMAKEN / CRÉER UN COMPTE / CREARE UN ACCOUNT / CREANDO UNA CUENTA

1



Byhome

Open the app

2



Choose sign up

3



Select your region and choose Next.

4




Enter your information to create an account. Mark the two boxes and choose Sign Up

5




Activate your account through email

6

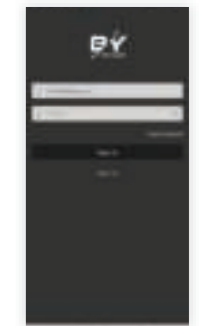

Sign in to your account

ADD A DEVICE / EIN GERÄT HINZUFÜGEN / EEN APPARAAT TOEVOEGEN / AJOUTER UN APPAREIL / AGGIUNGERE UN DISPOSITIVO / CÓMO AÑADIR UN DISPOSITIVO

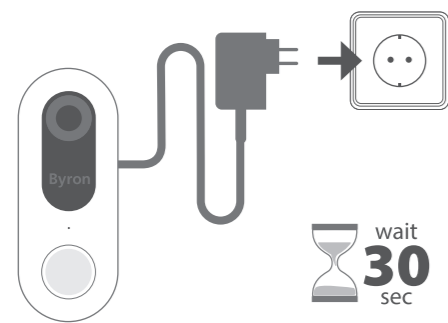


Plug in the doorbell and wait for 30 seconds



Byhome


Open the app

5

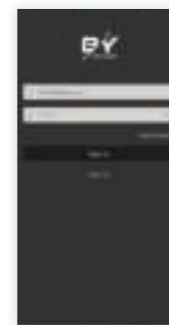

Sign in to your account

6

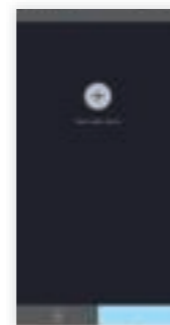

Choose the "+" icon

7




Choose the doorbell




Press the reset button until the voice prompts it is restoring factory settings. After 30 seconds it will prompt: waiting to configure Wifi.

8

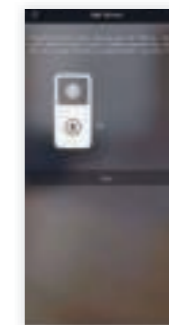

Choose Next


9

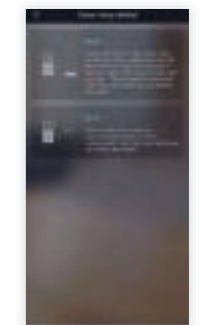

Choose WiFi

ADD A DEVICE / EIN GERÄT HINZUFÜGEN / EEN APPARAAT TOEVOEGEN / AJOUTER UN APPAREIL / AGGIUNGERE UN DISPOSITIVO / CÓMO AÑADIR UN DISPOSITIVO

10

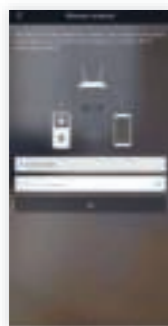

Enter your password and choose Next. (If your WiFi is 5GHz, set it to 2,4 GHz first)

11



Choose configure Wifi connection

12




Get the QR code in the app

13




Use the camera to scan the QR code

14

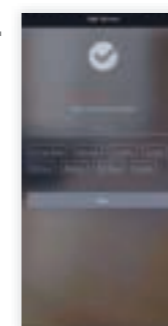

Set the device name and choose Save

15

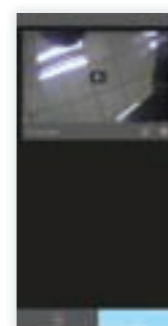

Choose the monitoring area

16



Set a username and password for your camera and choose Save

17




Device is added successfully

18



TROUBLESHOOTING / STÖRUNGSBESEITIGUNG / PROBLEMEN OPLOSSEN /  
DÉPANNAGE / RISOLUZIONE DEI PROBLEMI / SOLUCIÓN DE PROBLEMAS

Long  
press

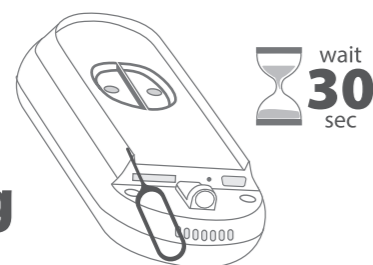

Press the reset button until the voice prompts it is restoring factory settings.

CONTACT INFORMATION / KONTAKTINFORMATIONEN / CONTACTGEGEVENS /  
CONTACTS / INFORMAZIONI DI CONTATTO / DATOS DE CONTACTO

WWW.CHBYRON.EU



Or contact us directly:

EU address:	UK address:
smartwares Europe Jules Verneweg 87 5015 BH Tilburg The Netherlands www.chbyron.eu	smartwares Safety and Lighting Ltd. Meriden House, 6 Great Cornbow Halesowen, West Midlands, B63 3AB United Kingdom

Find us on



SPECIFICATIONS / TECHNISCHE DATEN / SPECIFICATIEN /  
SPECIFICATIONS / SPECIFICHE / SPECIFICACIONES

Wired Wi-Fi Video Doorbell DSD-28119  
Power: 8-24V  
IP44 Weather Resistant  
Works with 2,4GHz WIFI ONLY

