

# User Manual

## RADIO OPERATION

- Rotate the volume control knob to turn on the radio and adjust volume.
- Select FM /AM with BAND button. Extend the antenna to get better signal.
- Rotate the tuning knob to select channel. Green turning indicator will turn on when a channel is properly selected.

### FLASHLIGHT

- Press the flashlight button to turn it on/off.


### SOS

- Double click the "SOS" button to turn it on. Single click the "SOS" button to turn it off.



## CONTENTS:

- RADIO OPERATION
- FLASHLIGHT
- SOS
- POWER YOUR RADIO
- POWER INDICATOR
- CHARGE EXTERNAL DEVICES
- WARRANTY
- SPECIFICATIONS
- SAFETY INSTRUCTIONS

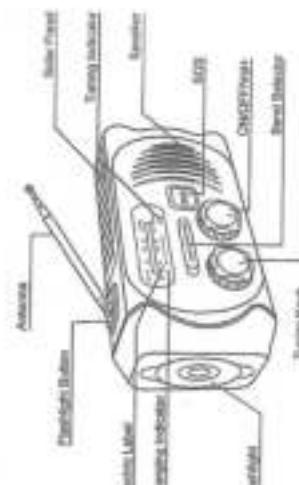

- 1 -

## POWER YOUR RADIO

Before you power your radio, make sure to read the SAFETY INSTRUCTIONS.

- A. SOLAR POWER
  - Place solar panel in direct sunlight.
  - Charging indicator will turn red as the battery charges. The charging indicator will stay blue as the battery fully charged.
  - It takes about 4 hours for the internal 18650 2000mAh Li-Ion battery to be fully charged.

### POWER INDICATOR

- Double click the "SOS" button to show the power capacity (C>Capacity).



- This unit has 4 blue power indicator lights to show the power capacity (C>Capacity).
  - 4 lights up: C>95%
  - 3 lights up: 50% < C < 95%
  - 2 lights up: 25% < C < 50%
  - 1 lights up: 5% < C < 25%
  - The first light (left): C<5%

- 4 -

## CHARGE EXTERNAL DEVICES

- This solar crank radio can charge USB devices by the Li-ion battery of the radio or by cranking at a speed of 130-150RPM.
- Insert the USB cable into the USB output port on the side of the radio and connect to the devices.
- The radio will go into charge mode and help to charge your devices.



- 2 -

## SPECIFICATIONS

Frequency range	AM 220-1710MHz FM 87-108MHz
Dimensions	14.5 x 9.25 cm
Weight	300g/0.67lb
Working voltage	2.7V-4.2V
Output voltage/current	5V/500mA
Water-resistant level	IPX3
LED Flashlight	1W/100LM
Power source	3.7V / 2000mAh 18650 Li-Ion
Charging time (USB)	About 4 hours
After fully charged, the device support	Radio play (medium volume): 15-18 h Flashlight: 10-12 h
One minute of working, the device support	Radio play (medium volume): 5-8 min Flashlight: 10-10 min

## SAFETY INSTRUCTIONS

- Dropping this radio can cause injury or damage. The unit will not resist strong impact or contact with corrosive liquids.
- Keep the unit dry as moisture and liquids can damage it.
- Wind the crank for 3-5 min before use to activate and keep the internal battery healthy.
- Change the radio once every 3 months.

## WARRANTY

- This crank radio has a full 12-month warranty against manufacturing defects.
- The warranty period begins from the date of purchase.



Made in China

- 8 -