

(included)


How to replace the batteries;

1. Make sure the switch is turned off
2. Loosen the screw
3. Open the lid
4. Change all batteries, then close battery compartment

3 ans.

Copyright DHINK/MTM

A13112

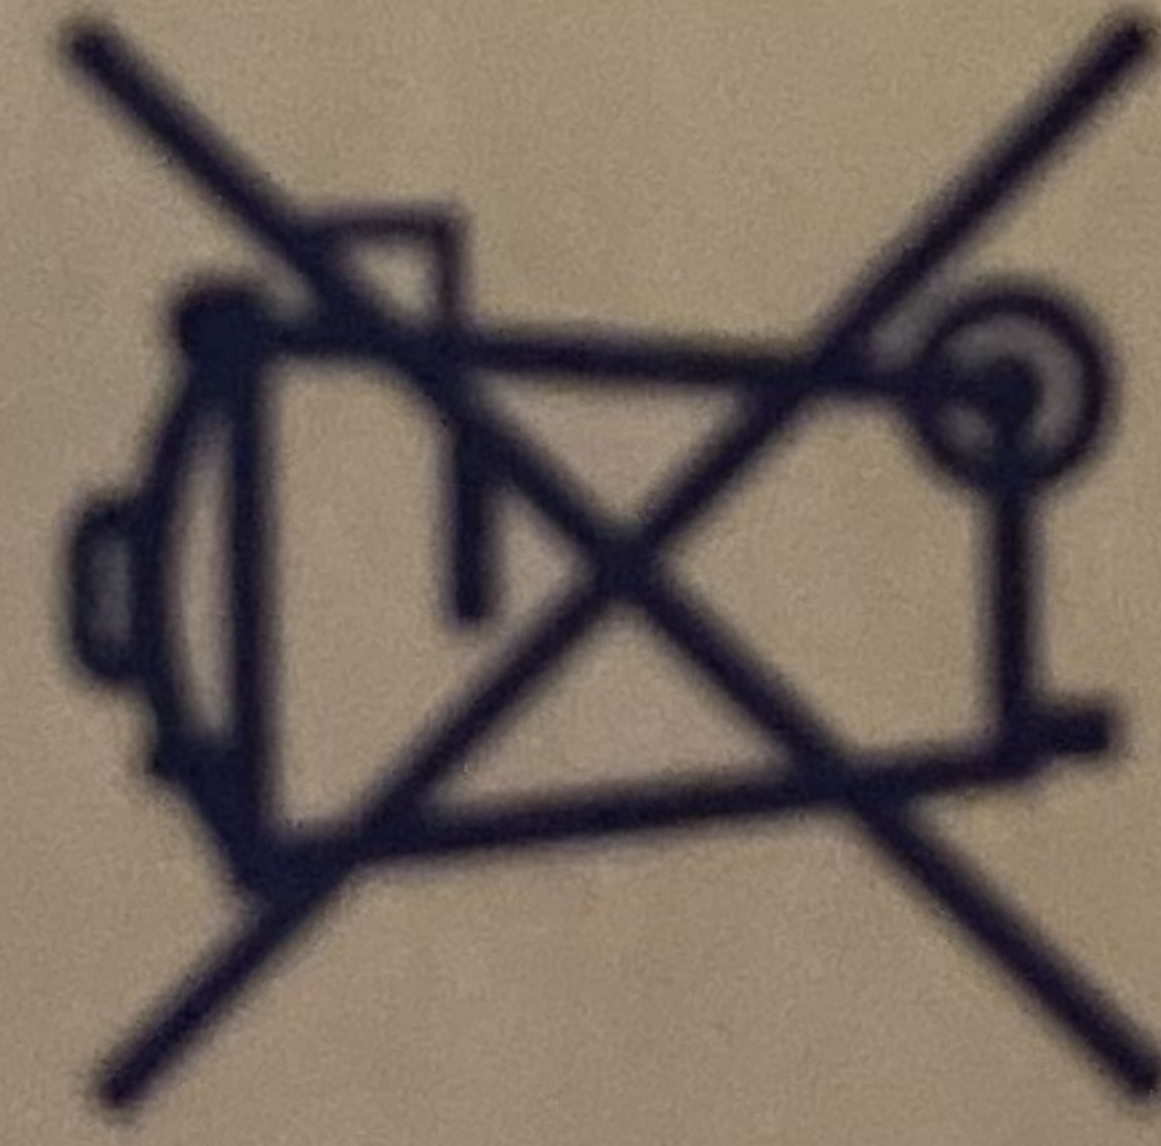

CE



FCC



oad, Wanchai, Hong Kong