
# ANC + ENC Wireless Stereo Earphones

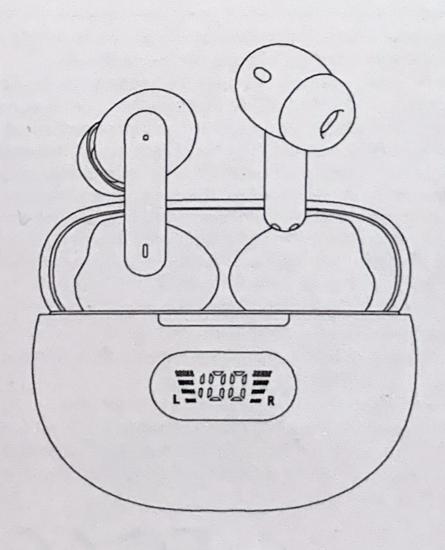

**User Manual** 

# **Product specification**

Bluetooth version: 5.3 Battery input: DC 5V

Earphone battery: 30mAh Charge case battery: 250mAh Working time: About 5-6hours

Sensitive: 103±3dB

Frequency: 20-20000Hz

Profile support: HSP/HFP/A2DP/AVRCP

# **Operation instructions**

#### **Binaural Function:**

Touch once: Play/Pause Answer/End a call

Touch twice on L: Previous song

Touch twice on R: Next song

Touch 3 times on R: Vol+

Touch 4 times on L/R: Wake up Voice Assistant


Touch and hold 2 sec on L: Switch Game mode or

Music mode


Touch and hold 2 sec on R: Switch ANC mode or

transparency mode

Touch and hold 3 sec on L/R: Reject the call

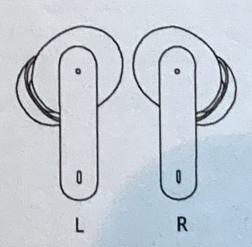

# Product schematic

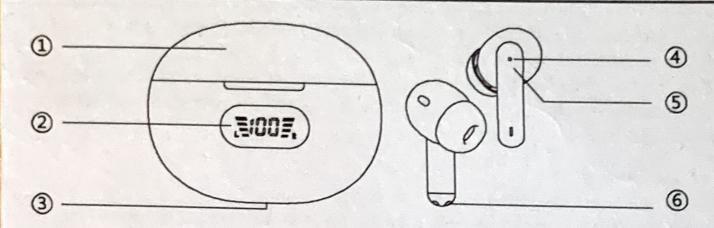

① Charge Case

- 2 LED Display
- Earphone Indicator
- ⑤ Touch Area

- 3 Charging Port
- 6 Earphone Charging Port


## Charge case

When charging: LED display flashes and shows real electricity

Full power: LED display shows 100% Charging time: about 1-1.5hours

## Warning:

- To ensure the battery life of the earphone, the earphones and the charge case should be charged once in a month.
- When charging with charge case please use the 5V/1A charger. Please don't use the fast charger which over 5V, to avoid damage on the charge case.

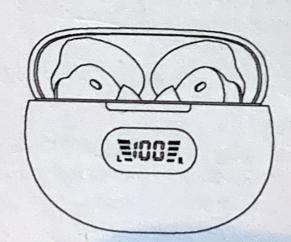

Pairing for operating

Step1. Open the lid of charge case or long touch earphones to turn them on, they will be automatically paired; After the pairing is successful, one earphone's LED will flash white, and the other earphone will not flash.

Step2. At this point, open the mobile phone's Bluetooth to search earphones' Bluetooth name then connect with it. Connected with mobile sucessfully, there are without light shiny on earphones.

# Turn on the earphone

Method A. Touch and hold the area for 3 seconds.

Method B. Open the lid of charge case, they will automatically power on, and enter automatic pairing.

\*When the earphones connect to the same device again, open the lid of charge case it will turn on automatically then reconnect with the device, voice prompt " Connected ".

# Turn off the earphone

Method A. Touch and hold the area for 5 seconds.

Method B. Put earphones into the charge case and close, they will automatically shut down and enter charging.

\*When the earphone disconnected for 3 minutes, it will automatically turn off.

## Calling

When connected with mobile phone, touch once any earphone to answer current call. Long touch for 2 seconds to reject the call. If you want to end the current call, touch once any earphone to stop.

## A. When the earphones can't be turned on

Check if the earphone has power (after the charge case is connected to the USB, and the earphone is charged in the charge case for more than 1 hour).

# B. When the earphones have only one side sound or earphones can't pair successfully

- 1. Make sure that both earphones are powered and can be turned on normally.
- Touch 3 seconds to turn on the earphones or open the lid of charge case (when the charge case is powered) the earphone will power on voluntarily, then you can connect with the device.

#### C. When the mobile phone cannot find the device

- 1. Confirm that the two earphones are turned on.
- Check if the earphone is connected to other devices.
- 3. Change a clear area and reconnect it again.

## D. When the earphone is stuck or disconnect while talking or playing music

- 1. The earphone is low on battery.
- 2. The distance between the mobile phone and the earphone is more than 10 meters.
- There is large area of signal obstruction between the mobile phone and the earphone, such as a wall.
- 4. The left and right ears are not paired and synchronized, and need to be shut down and re-paired.

# **Attention**

- 1. Please don't change the built-in battery by yourself.
- 2. Please don't put the headset under wet or rainy place.

- Please don't expose the headset under the blazing sun, event not close fire to avoid battery accident.
- 4. Please don't disassemble the headset if unprofessional.

#### **FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FC(E

Made in China