 


85.00 mm

255.00 mm

160.00 mm


Electric Knife Sharpener User Manual

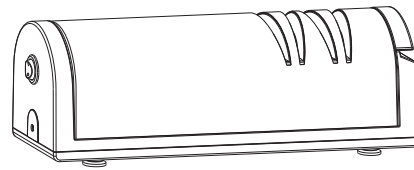

Please read this manual in detail before the first use.

Instructions for Sharpen Knives


1. Put the sharpener in a stable position, clean and dry the knives.
2. Connect the power supply and the sharpener with the adapter, then turn on the switch on the left side of the sharpener.
3. Follow the steps below to sharpen the knife:
 - ①Put the knife into the sharpening groove to make the blade touches the rotating grinding wheel.
 - ②Pull back slowly until the blade all passes through the grinding wheel.

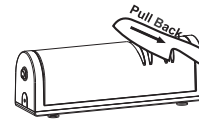

- ③Repeat steps ①② for 4 times.
- ④Change the knife to the neighboring sharpening groove.
- ⑤Repeat steps ①②③ to sharpen another side of the blade.
- ⑥Repeat steps ①②③④⑤ until the knife becomes sharp enough.

Tips


1. The sharpener has 2 different grinding wheels. The left wheel is rough, suitable for grinding blunt knives. The right wheel is smooth and suitable for grinding sharp knives.

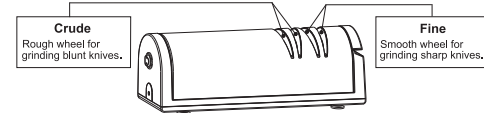

2. Turn on the sharpener first. Then put knives into the sharpening groove to avoid damage to knives.
3. DO NOT push knives forward when sharpening to avoid damage to knives.
4. DO NOT use the sharpener to sharpen thick knives, such as cleavers and axes, because this will make the blade very thin and easily damaged.
5. The sharpener is not suitable for grinding curved, thick, zigzag knives.

Instructions for Grinding Scissors

- ①Move one blade of the scissors slowly to touch the rotating scissors grinding wheel.
- ②Pull the scissors against the grinding wheel slowly.
- ③Repeat steps ①② for 4 times.
- ④Follow steps ①②③ to grind another blade of the scissors.
- ⑤Repeat steps ①②③④ until the scissors are smooth enough.

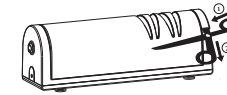


Tips: You only need to smooth the scissors, not sharpen them.

Precautions

1. Please use the Mobile phone charger of DC5V1A or above to charge the product. When finished, the light is blue.
2. Remove the grease and water from knives before sharpening.
3. DO NOT add water, oil or other substances when sharpening knives to avoid danger.
4. The sharpener is not suitable for grinding curved, thick, zigzag tools.
5. DO NOT allow water to flow into the sharpener to avoid damage.
6. In case the grinding wheel is stopped by knives, remove knives immediately to avoid damage to the sharpener.
7. Avoid using or touching by children to avoid accidents.
8. The sharpener must be placed in a dry area and away from high temperature.
9. Do not replace the wire without authorization. Unplug the wire immediately if there is any problem, and contact customer service.

Cleaning and Maintenance

1. Open the crumb bin at the bottom and pour out the crumbs after each use.

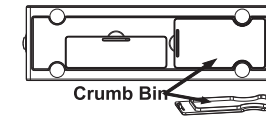

2. Unplug before cleaning.
3. Wipe the surface with a clean soft cloth.
4. DO NOT immerse the sharpener in water for cleaning.
5. Store the sharpener in a dry and ventilated place.

Warranty

provides all customers with 12 months free product-replacement services.
Thank you for understanding!

Specification

Model: QN - M866-1
Rated voltage: 3.7V
Rated power: 8W
Charging voltage: 5V \equiv
Charging current: 1A
Package Size: 10.7*4.0*4.2 in