


12" LCD Writing Tablet

of environmental protection

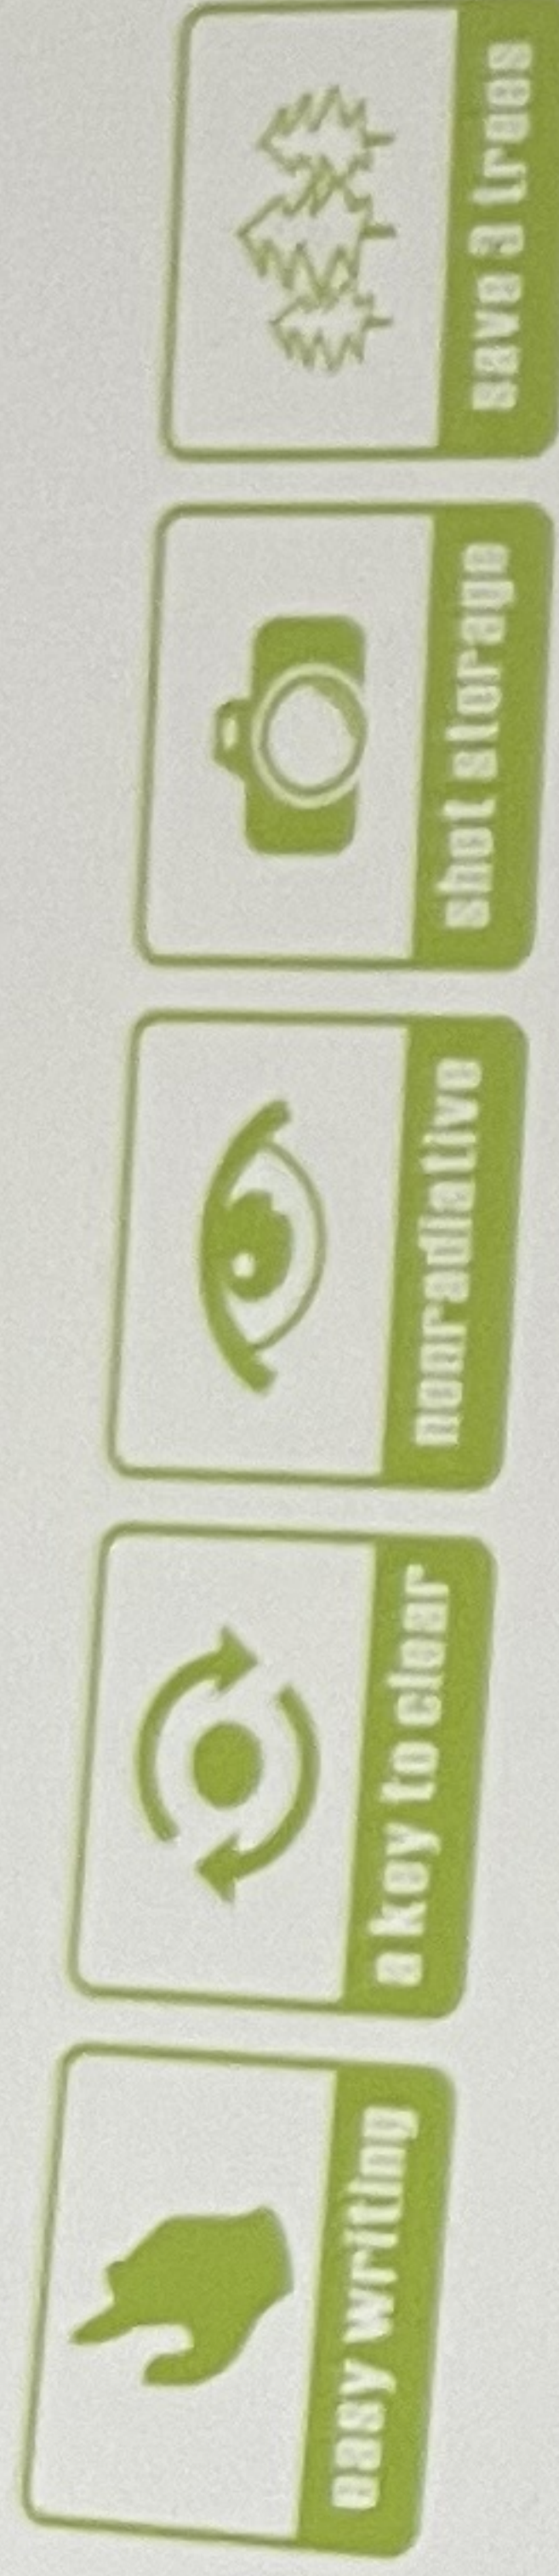

HOW TO USE



Pull out the pen:




Writing on the writing area directly with the pen:



Press the remove button to erase the writing content. Remark: please replace a new battery when remove button without function



How to replace the built-in battery? Loosen the screw, pull out the battery pack to replace a new battery

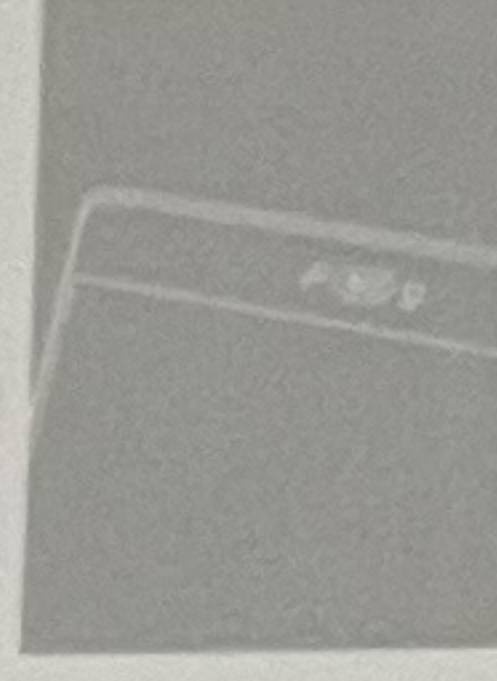

Erasing Lock

WARNING

- * Do not use this product in humid conditions:
Do not allow this product to get wet.
- Do not place water filled objects such as vases on top of this product.
- Do not place flame sources, such as candles on top of this product.
- Do not use liquid or aerosol cleaners.
- * Please use the pen which included in the product to write.
please don't use other kinds of pens or other sharp objects.
- * In case of products damaged or liquid leaked, please place the product in a sealed bag and put in the non-recyclable trash can, please wash your hands clearly if leaked liquid touched by the skin.
if the situation is serious, immediately go to the hospital for better treatment.
- * Please don't open the products by yourself, please contact our service department if any help needed.
- * Please use the same type of battery when you replace a new one.