

**EN Instructions:**

1. Turn the ailer when hanging out your washing, this will save you time and effort.
2. Load the drier evenly on all sides.
3. Do not use in strong wind.
4. Remove any earth, sand and water from the socket at regular intervals.
5. Store the drier inside during winter time. Close the ground spike using its cap to avoid dirt filling the socket.
6. Keep away from children.