


Getting Volume and Retention right

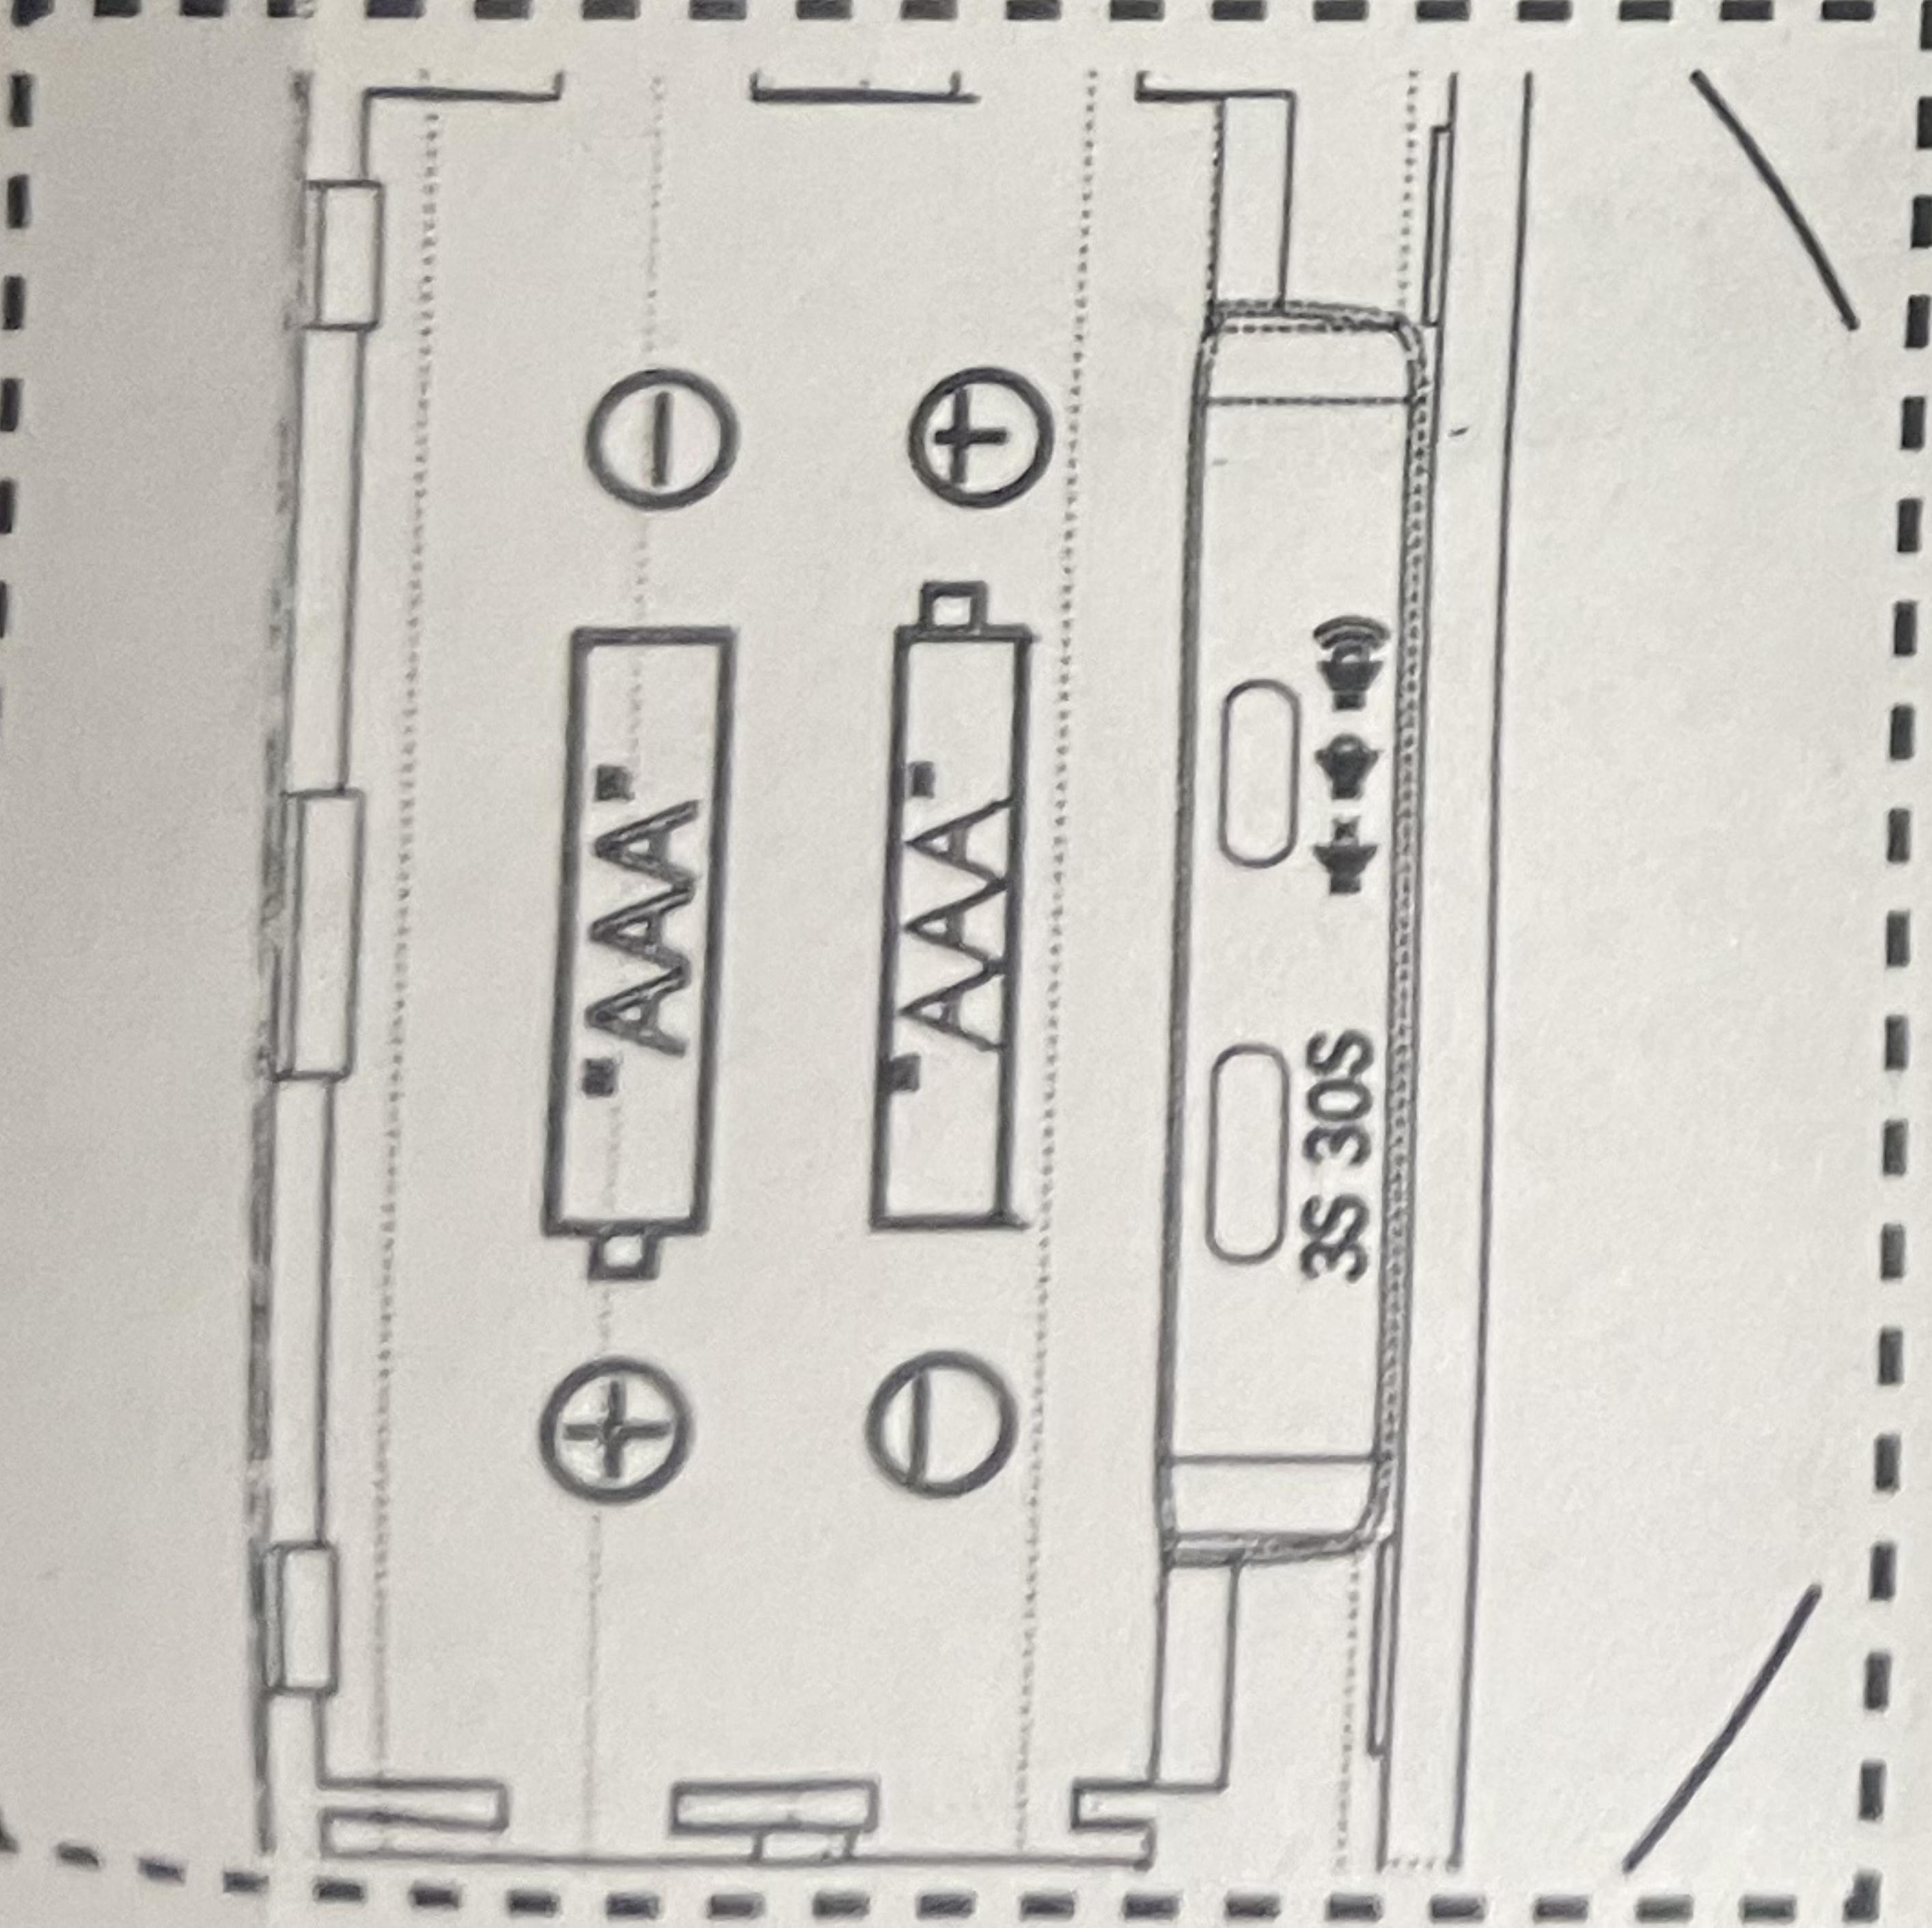

★ "3 0 0 30" 3 =alarm duration 3 sec
30 =alarm duration 30 sec

★  "x" =quiet mode
 ") " =low alarm volume
 ")) " =high alarm volume

Low-hat entertainment

When the battery level is low,
the light will be lit
till the batteries run out,
then the battery for using
change 2*AAA
to charge.

