


00 -alarm duration 00 sec

...turn the  
...clockwise  
...on the 0  
...wise the  
...be damaged.

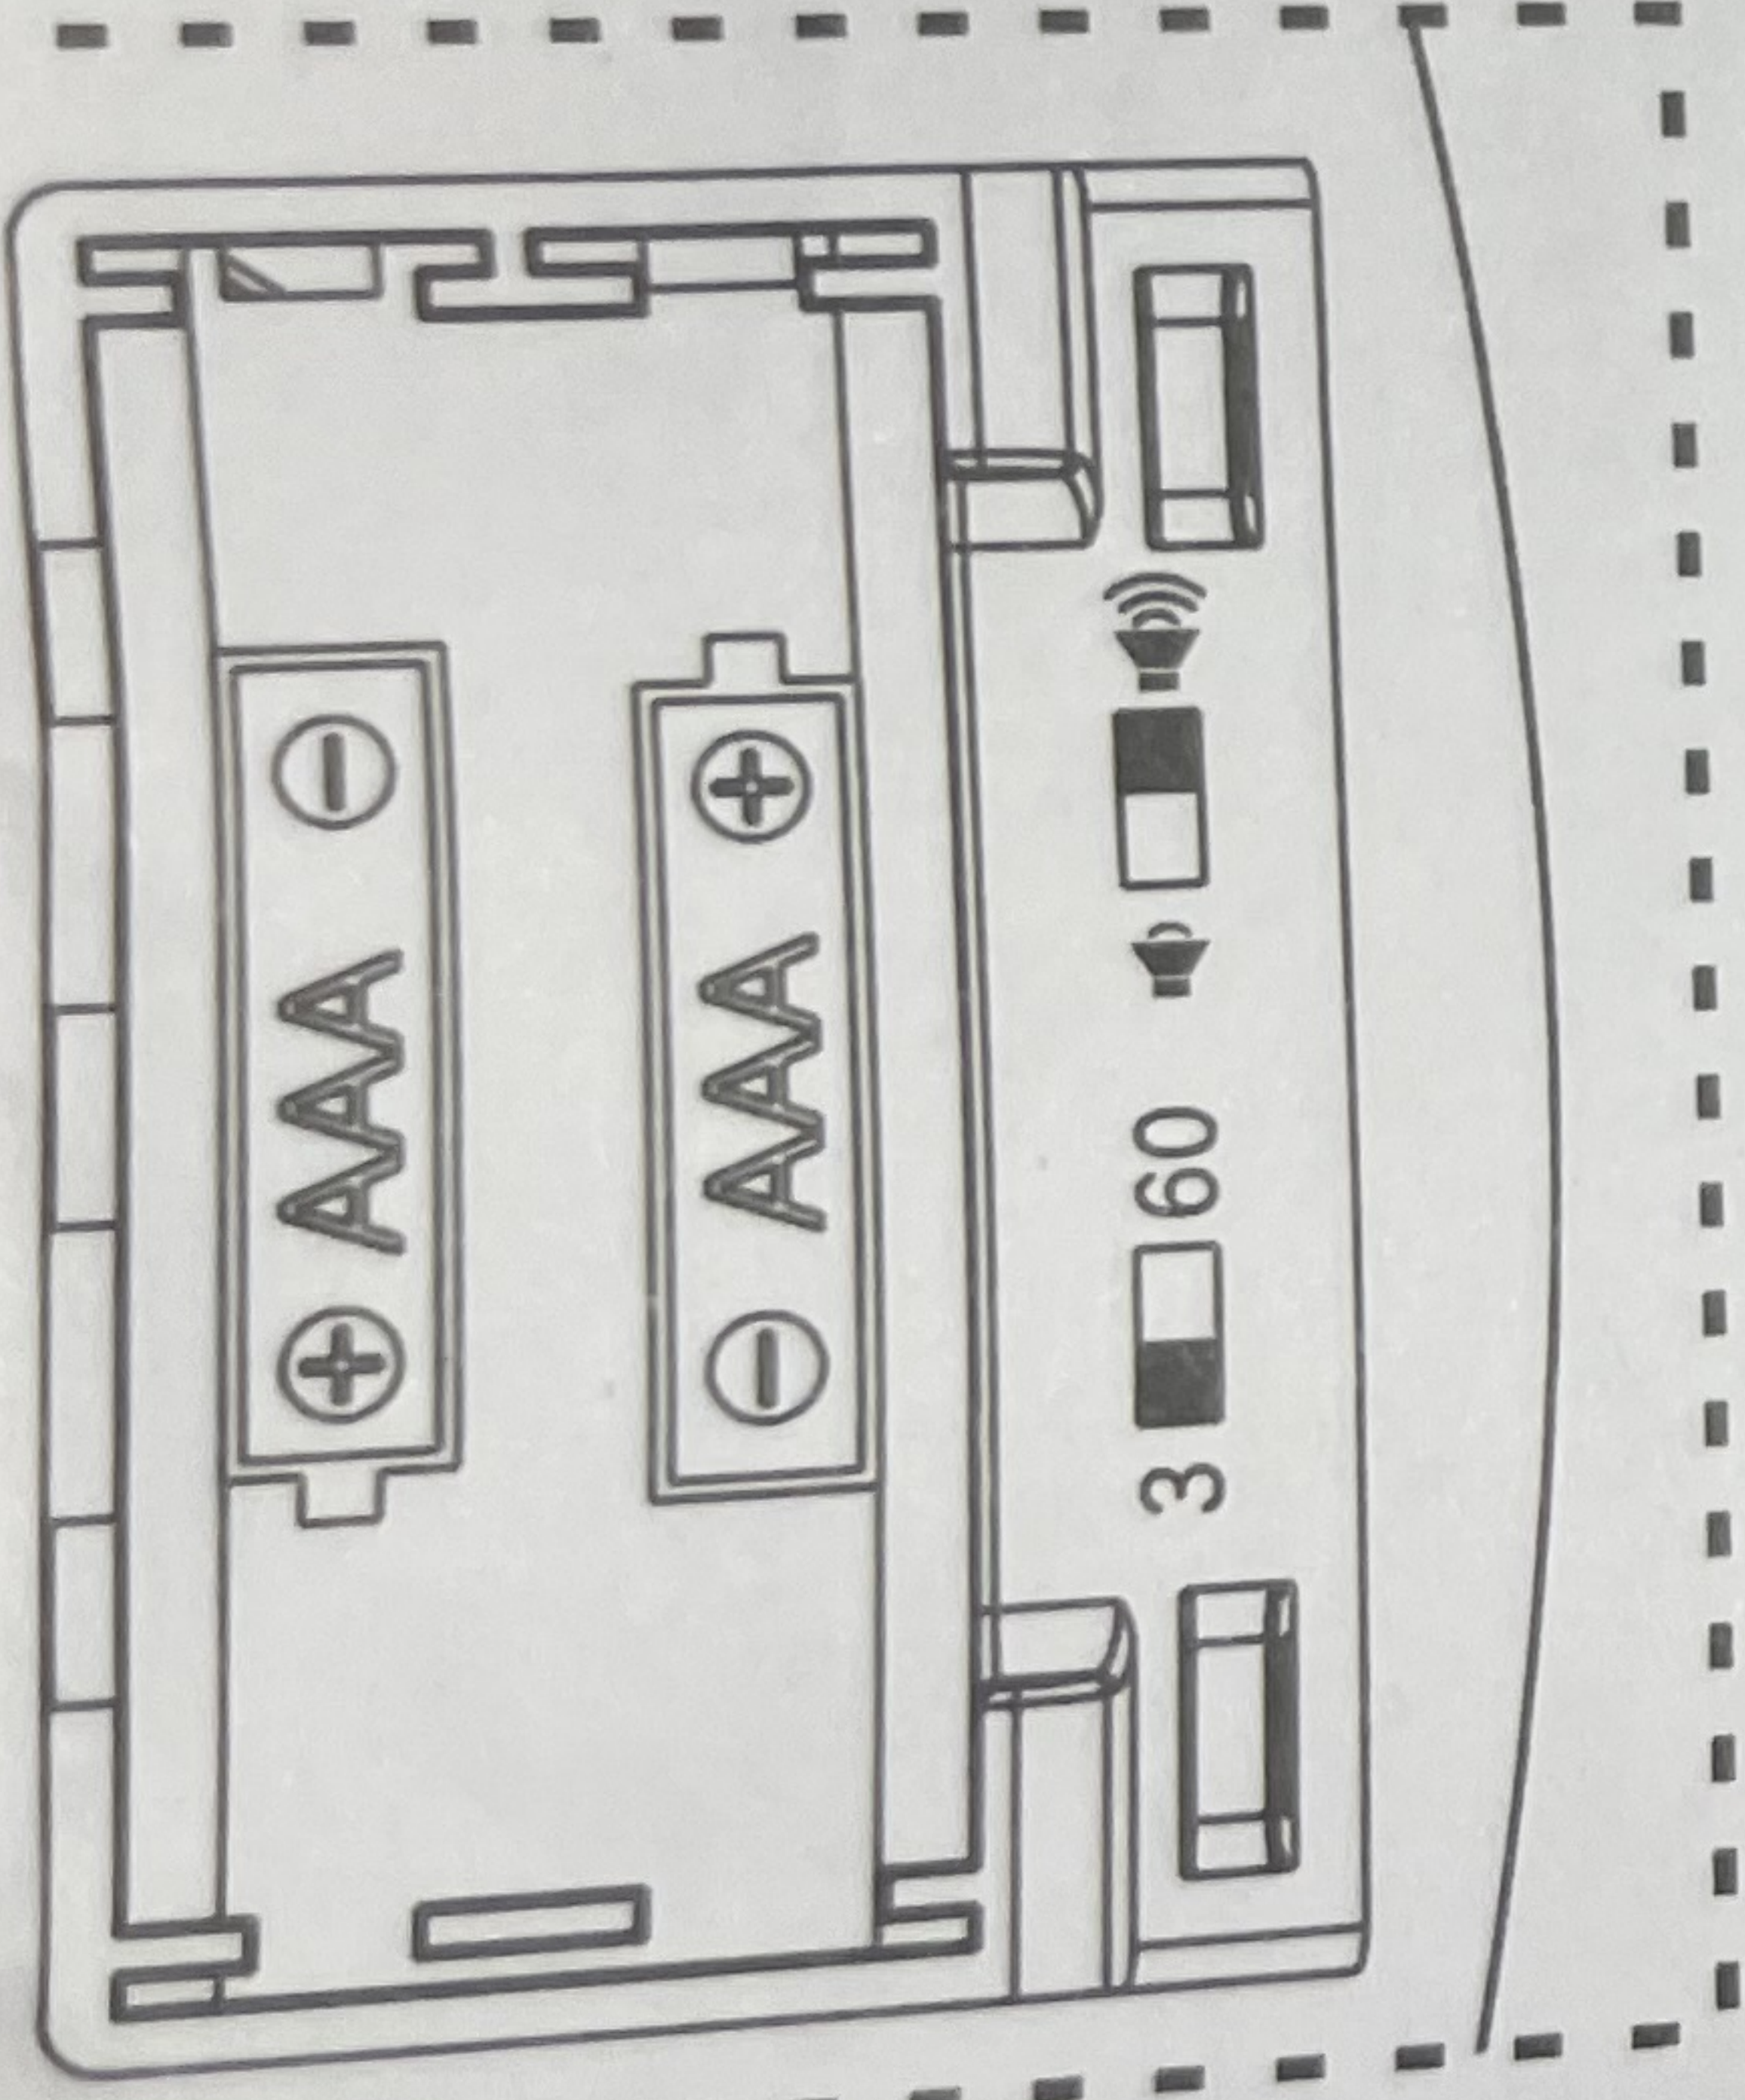

- ★ " [Speaker icon] [Battery level icon] " = alarm volume low
- [Speaker icon] [Battery level icon] = alarm volume high

**Maintenance**

- ★ Remove batteries during maintenance
- ★ Use dry cloth to clean the surface, don't use chemical cleaning agent or wash it in water.

operates on 2  
AAA batteries.

