 
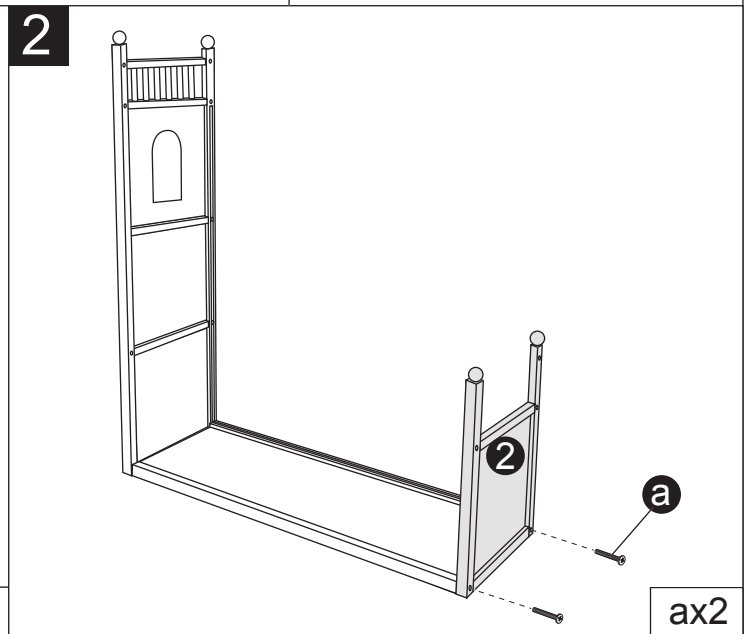 
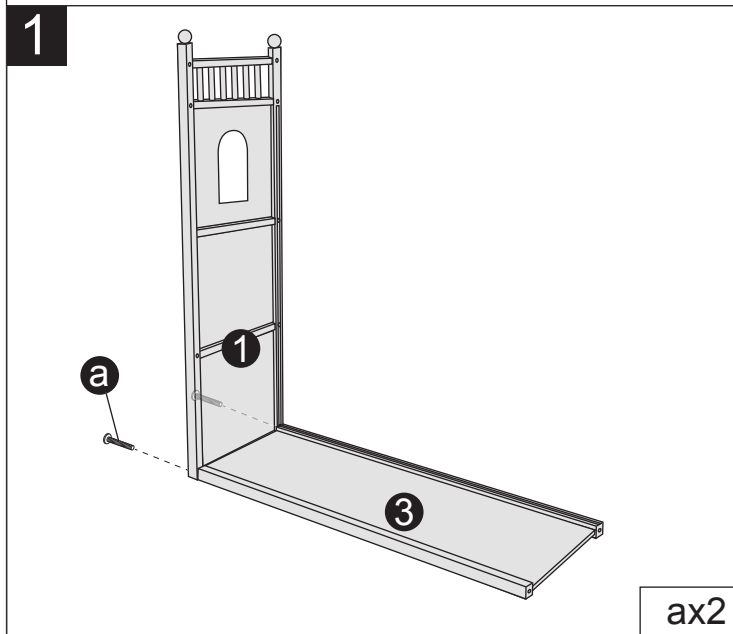 


# Wooden Doll House

## Assembly instructions

Please retain this information for future reference

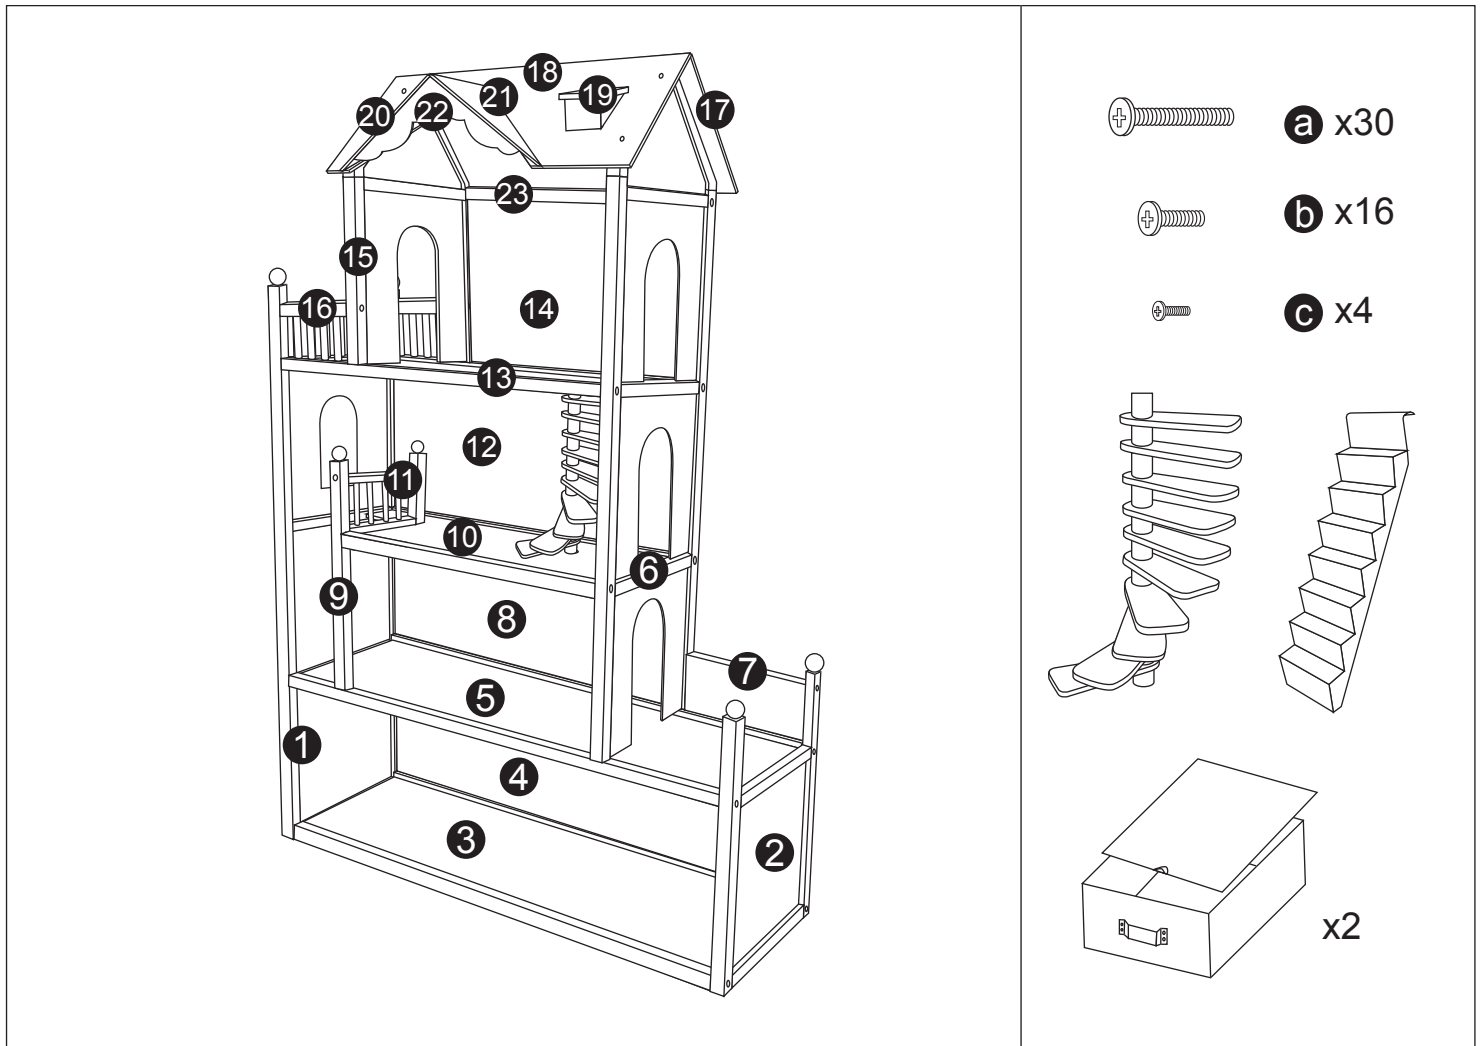

### WARNING:

 
 
 
 
 
 
ADULT ASSEMBLY REQUIRED.

Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state.


Keep unassembled parts away from children.

CHOKING HAZARD. Small parts and sharp points, not suitable for children under 3 years.



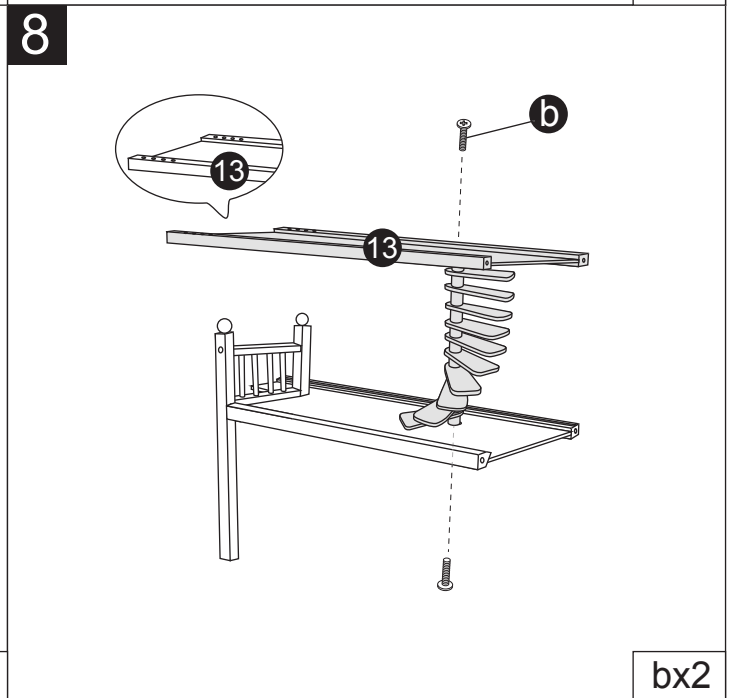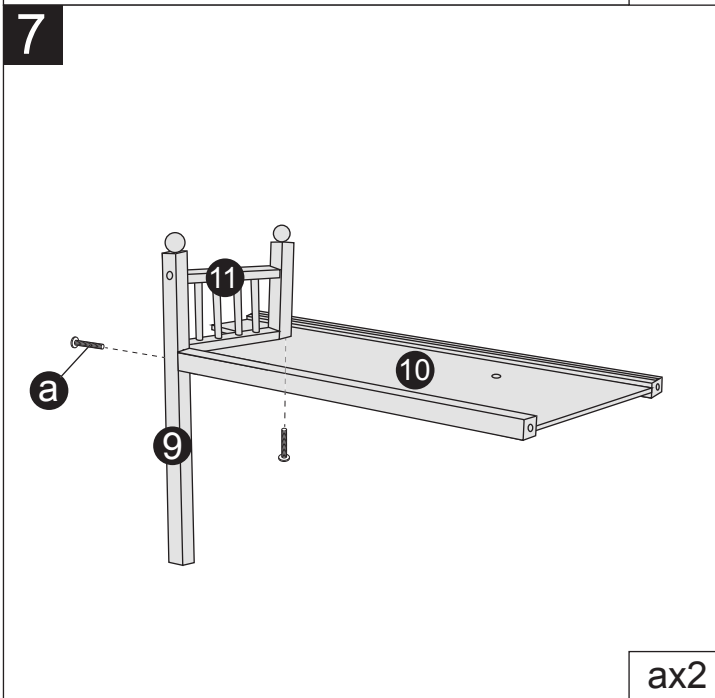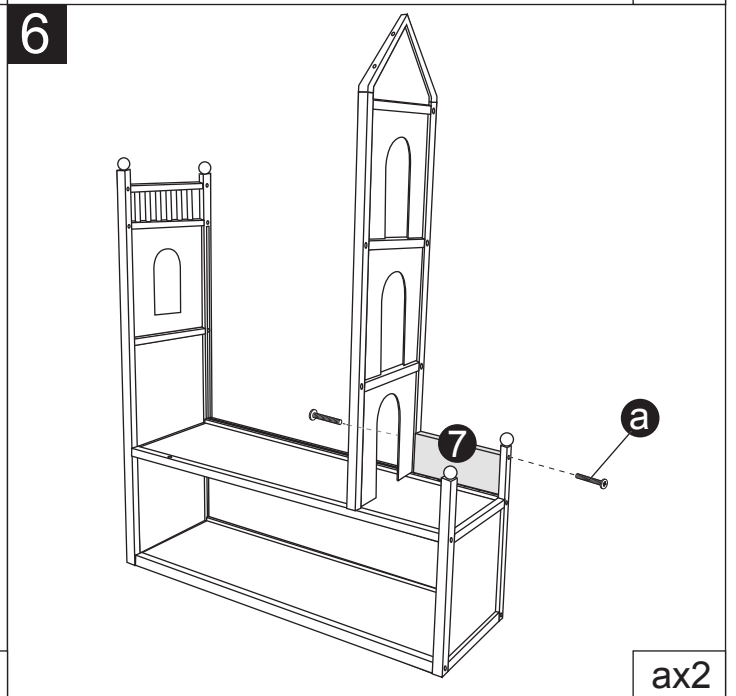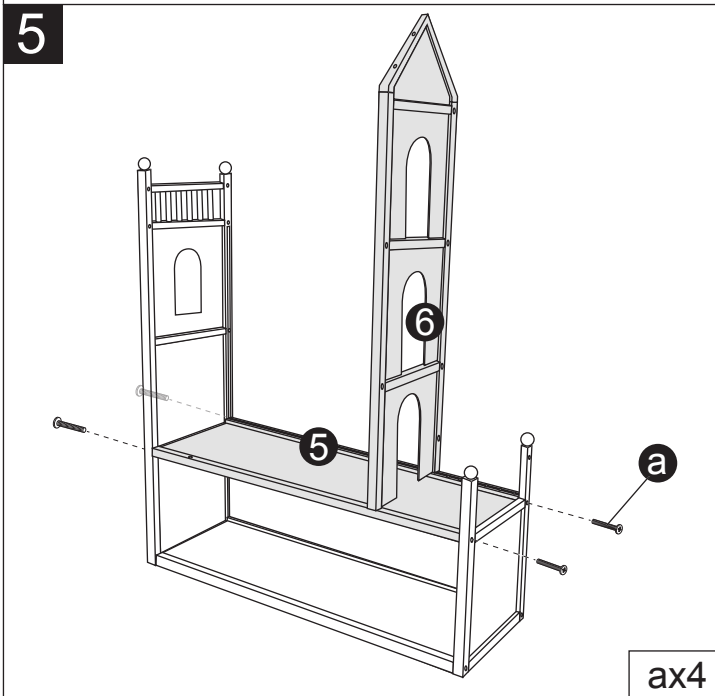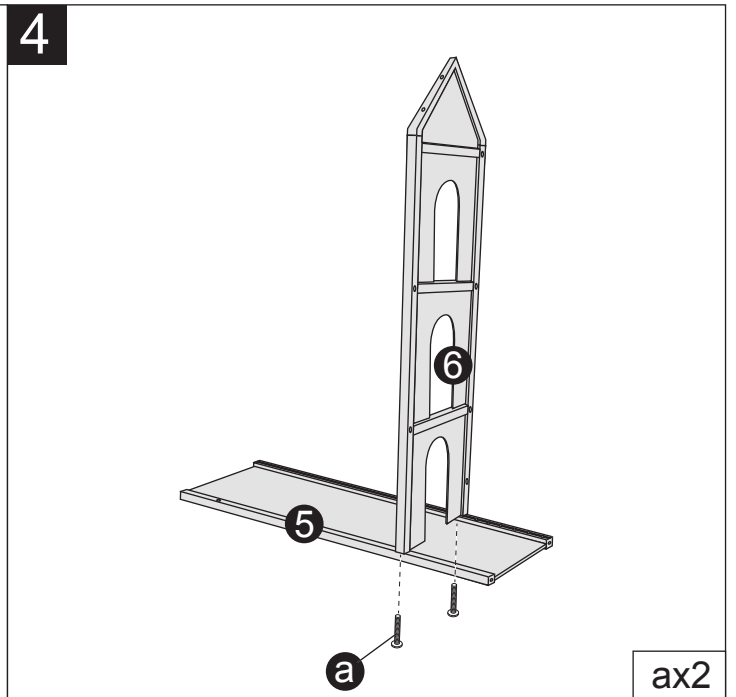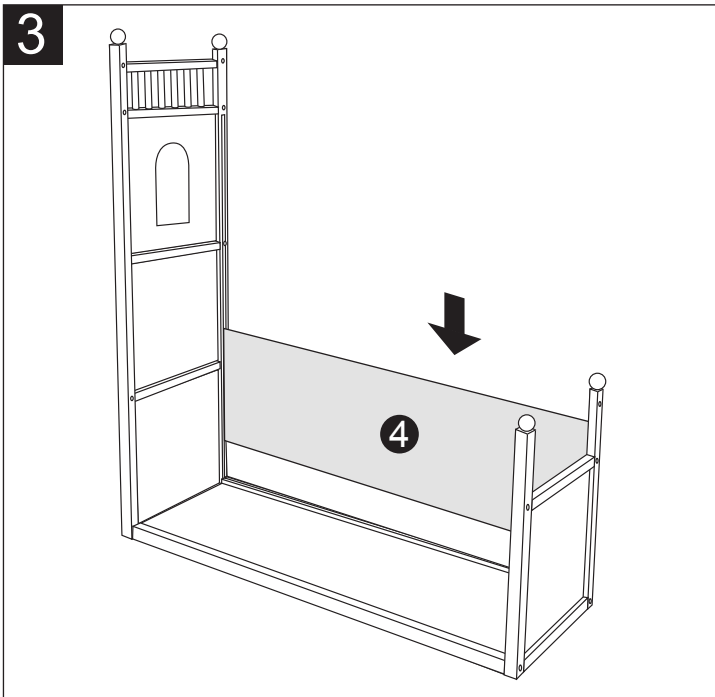


9

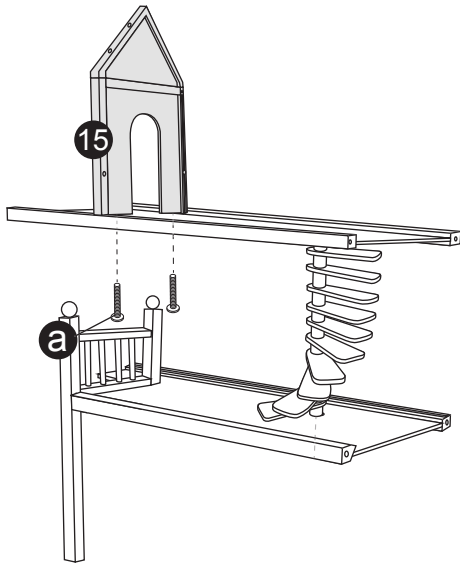 


ax2

 
10

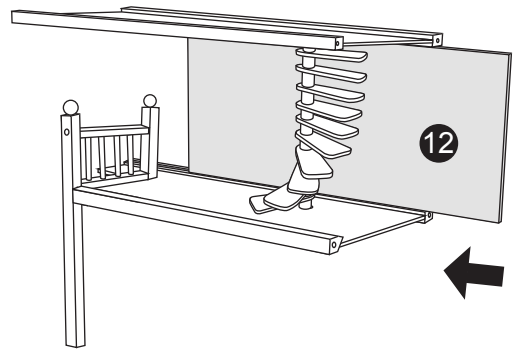

11

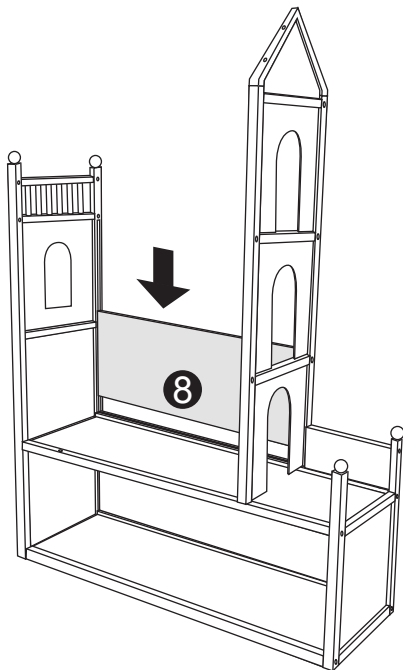 


12

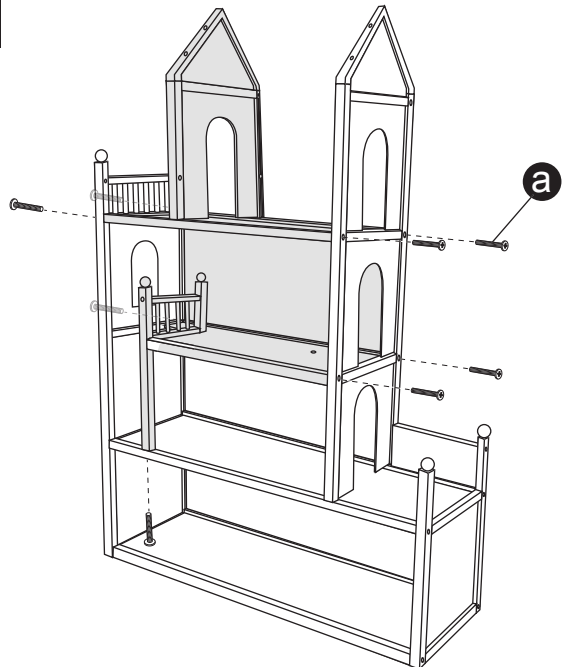 


ax8

 13

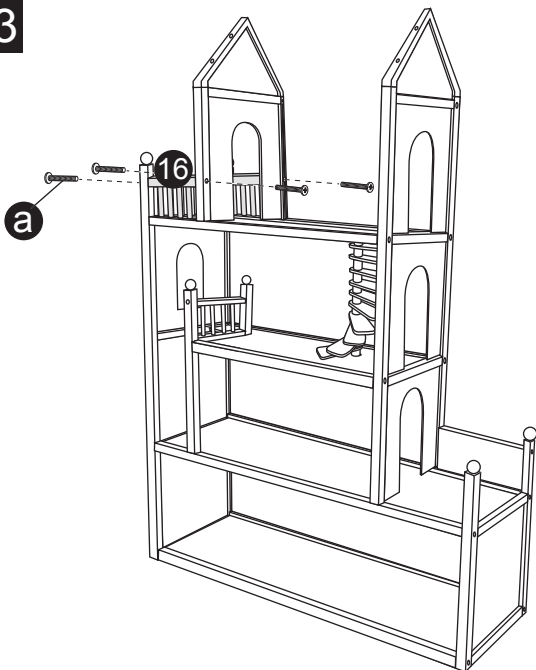


ax4

 14

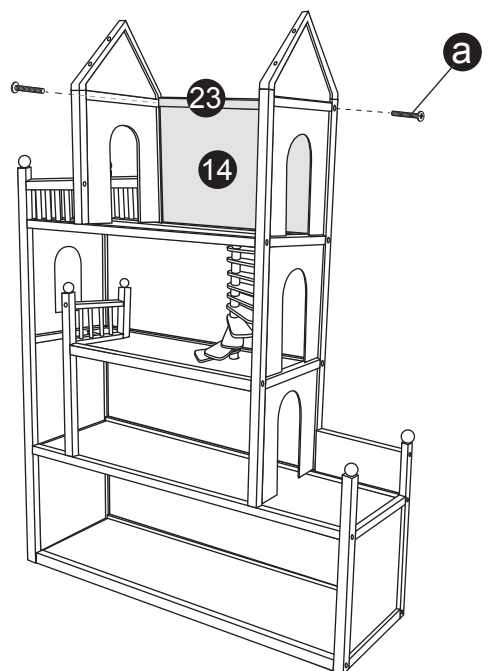


ax2

 15

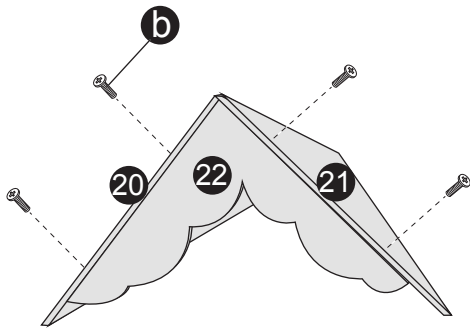


bx4

 16

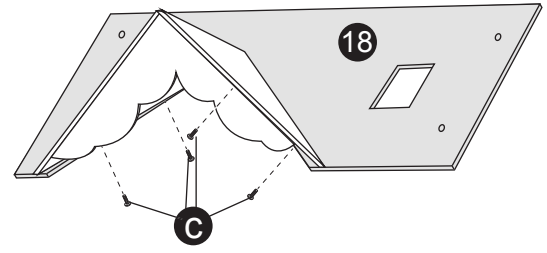

cx4

 17

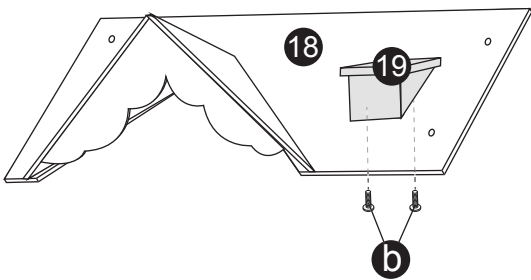


bx2

18



bx4

 19

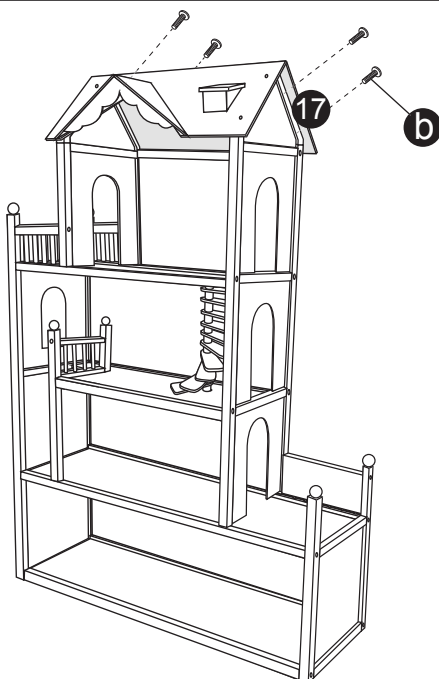

bx4

20

