



LK-G982 Safe box with voice

Features

- Automatic self-power recovery
- Approved 3-fingerpinch technology
- Approved for fire protection
- Anti-counterfeit design by ultraviolet light
- Class with voice announcement
- Alarm with voice announcement
- Non-destructive Chinese, English and Arabic
- Batteries for long battery life and the replaceable battery

Product preview

- A. Paper money tray
- B. Opening window
- C. Approval key matrix
- D. Fingerprint confirmation area
- E. Indicator of "low battery"
- F. Indication light
- G. LED light
- H. Micro-USB port
- I. Charging indicator
- J. The alarm piece of wire

Keyboard layout

- 1. Numeric buttons
- 2. On/Off switch for locking/unlocking
- 3. Check/lock
- 4. Alarm button
- 5. At any button
- 6. Power button
- 7. Configuration button
- 8. On/Off button
- 9. Function buttons for entering each button
- 10. Fingerprint search button
- 11. User Language inputs
- 12. Language input
- 13. Indicator light
- 14. Red/white light
- 15. Red/white light
- 16. Red/white light
- 17. Red/white light
- 18. Red/white light
- 19. Red/white light
- 20. Red/white light

Load batteries

Attention

This product has a built-in or an external battery. Please do not open the battery cover unless you are instructed to do so by the manufacturer.

Operation instructions

1. Preparation:
 - 1.1. Please read the manual carefully before using the safe.
 - 1.2. Please check the battery level before using the safe.
2. Opening the safe:
 - 2.1. Press the "On/Off" button to power on the safe.
 - 2.2. Press the "Check/lock" button to lock the safe.
 - 2.3. Press the "At any" button to unlock the safe.
3. Changing the password:
 - 3.1. Press the "Check/lock" button to lock the safe.
 - 3.2. Press the "At any" button to unlock the safe.
 - 3.3. Press the "Configuration" button to enter the password change mode.
 - 3.4. Press the "1-9" buttons to enter the new password.
 - 3.5. Press the "Check/lock" button to confirm the new password.
4. Power management:
 - 4.1. Press the "On/Off" button to power on the safe.
 - 4.2. Press the "Check/lock" button to lock the safe.
 - 4.3. Press the "At any" button to unlock the safe.
5. Alarm function:
 - 5.1. Press the "Alarm" button to activate the alarm.
 - 5.2. Press the "At any" button to deactivate the alarm.
6. Micro-USB port:
 - 6.1. Connect the Micro-USB cable to the port.
 - 6.2. Connect the other end of the cable to a computer or a power source.
7. Indicator of "low battery":
 - 7.1. When the indicator is lit, it means the battery is low.
 - 7.2. Please replace the battery when the indicator is lit.
8. Note:
 - 8.1. Please do not use the safe for storing flammable or explosive materials.
 - 8.2. Please do not use the safe for storing valuable items.
 - 8.3. Please do not use the safe for storing confidential information.
 - 8.4. Please do not use the safe for storing illegal items.

Trouble shooting

1. The safe does not open:
 - 1.1. Check the battery level.
 - 1.2. Check the password.
 - 1.3. Check the "At any" button.
2. The safe does not lock:
 - 2.1. Check the "Check/lock" button.
 - 2.2. Check the "At any" button.
3. The safe does not power on:
 - 3.1. Check the "On/Off" button.
 - 3.2. Check the battery level.
4. The safe does not power off:
 - 4.1. Check the "At any" button.
 - 4.2. Check the "Check/lock" button.
5. The safe does not power on after a long time:
 - 5.1. Check the battery level.
 - 5.2. Check the "On/Off" button.
6. The safe does not power on after a long time:
 - 6.1. Check the battery level.
 - 6.2. Check the "On/Off" button.

Attention

1. Please do not use the safe for storing flammable or explosive materials.
2. Please do not use the safe for storing valuable items.
3. Please do not use the safe for storing confidential information.
4. Please do not use the safe for storing illegal items.

WARNING

CHARGING INSTRUCTIONS: Please read the manual carefully before using the safe.

CE, RoHS, and other certification marks are shown at the bottom of the page.