

Men Shaver and Hair Remover Instruction Manual

EASY BLADE



USB CHARGING
(USB CHARGING CABLE INCLUDED)

IMPORTANT SAFETY INSTRUCTIONS

When using an electric product, basic precautions should always be followed, including the following:
Read all instructions before using this product.

DANGER

To reduce the risk of electric shock:

- Do not reach for a corded product that has fallen into water. Unplug immediately.
- The power cord and the accessories connected to it are not for immersion or for use in shower.
- Do not use an extension cord with this product.
- Do not place or store the product while plugged in where it can fall or be pulled into a tub or sink. Do not place or drop the product water or other liquid while plugged in.
- Always unplug this product from the electrical outlet immediately after (re)charging.
- Unplug and remove power supply cord from this product before cleaning.
- The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons: This appliance is for household use only. An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance. Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.

Use this appliance only for its intended use as described in this manual.

Keep the cord away from heated surfaces. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.

Never drop or insert any object into any of the appliance's openings.

Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered. Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).

Make sure the cord is disconnected from the groomer stand when storing.

Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.

Do not use an extension cord or a voltage converter with this appliance.

Do not wrap the cord around the appliance.

The power unit is intended to be correctly oriented in a vertical or floor mount position.

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

WARNING: Keep the appliance dry


- The appliance can be used by children aged from 3 years under supervision.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

WARNING:

- For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
- The appliance is only to be used with the power supply unit provided with the appliance.
- This appliance contains batteries that are non-replaceable.
- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- The battery is to be disposed of safely.
- Only remove the rechargeable battery when you are intending to discard the appliance and you have the rechargeable battery removed by a professional.
- Suitable for cleaning under open water tap. Suitable for use in a bath or shower.
- Detach the hand-held part from the supply cord before cleaning it in water.
- The parts that have to be fixed must be installed so that they cannot fall into water.

FEATURES

 Fig. 1

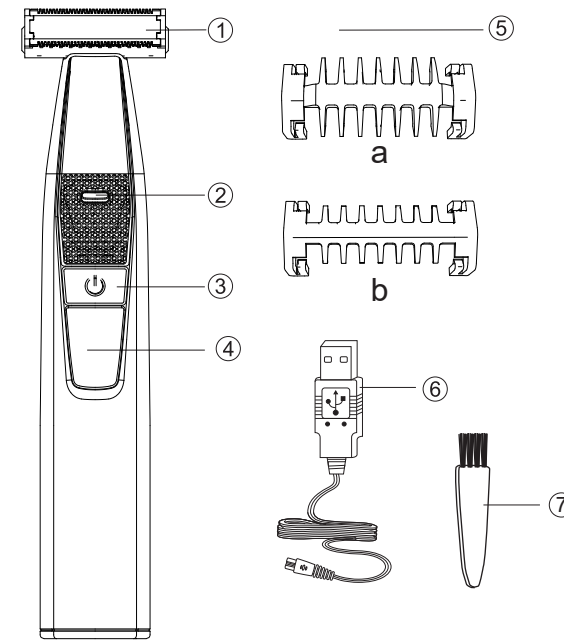

- Blade
- LED working light
- ON/OFF button
- Indicator light
- Guide combs (a.1mm b.3mm)
- USB cable
- Cleaning brush

CHARGING

- Charging takes approx. 2 hours.
- Charging or using the product at temperatures below 40°F (4,5°C) or higher than 95°F (35°C) adversely affects the lifespan of the battery.

Charging with the USB cable

- Ensure the product is switched off.
- Connect the charging USB cable to the product and then USB cable to the adaptor, then adaptor to the mains. The charging indicator will light up. Your product cannot be overcharged. However, if the product is not going to be used for an extended period time (2-3 months), unplug it from the mains and store. Fully recharge your personal groomer when you would like to use it again. To preserve the life of your batteries, let them run out every six months then recharge for 2 hours.

Operating time

When the product is fully charged, it has a cordless operating time of up to 120 minutes. Use an attachment plug adapter of the proper configuration for power outlet.

USING THE PRODUCT

Always check the product and all accessories before using. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type. This product is for use on facial hair, body parts or scalp hair.

- Use this product for its intended household use as described in this manual.
- For hygienic reasons, the product should only be used by one person.
- Trimming is easier when the skin and hair are dry.
- Be careful when trimming without a comb as the product will trim every hair it touches when it is turned on.
- Before using the product, always check the blade for damage or wear. If the blade is damaged or worn, do not use the product, as injury may occur.
- Replace a damaged blade before you use the product (see 'Replacement').
- Use the product to trim, edge or shave facial hair (beard, moustache and sideburns). Shave for a smooth result, trim to obtain a certain length and edge to create perfect edges and sharp lines.
- Take your time when you first start to use the product. You have to acquire practice with the product.

Turning the product on and off

Press the on/off button once to turn the product on or off.

 
Shaving

- Make sure that the blade is in full contact with the skin by placing it flat on the skin.
- For the best result, move the product against the grain.
- Make long strokes while pressing lightly.
- Use the product on face dry, no need gel or foam on face, even can use in shower.
- Shaving a clean beard and face gives the best results.

- Switch on the product.

- Place the blade on the skin and move the product up or against the grain in long strokes while pressing lightly (Fig.2).



- Switch off and clean the product after every use (see 'Cleaning').

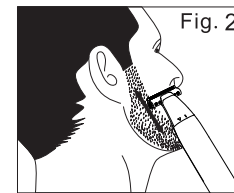

Edging


- Use both edges of the blade to create sharp lines and perfect edges.
- Hold the product in such a way that the blade is perpendicular to the skin and one of its edges touches the skin. This allows more precise detailing of sideburns and the area around the mouth and nose.

  - To use the blade for creating sharp edges and lines, use either edge of the blade (Fig. 3).
- Switch on the product.
- Make straight strokes while applying gentle pressure (Fig. 4).
- Switch off and clean the product after each use (see 'Cleaning').

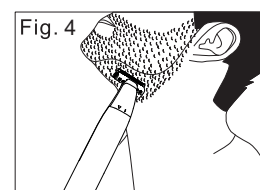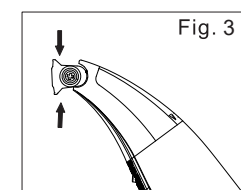


Trimming with comb

 - The product has two guide combs allows you to trim hair to different lengths. When you trim for the first time, start at the highest length comb 3mm to familiarize yourself with the product.

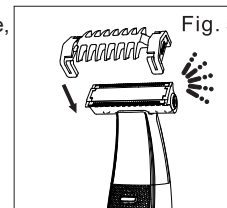

- Hold the two sides of the comb onto the blade and push the projection at the back of the comb into the product when hear "click". (fig.5)

 - Always trim in the direction of the teeth of the precision trimming comb making sure the flat part of the comb is in full contact with the skin for an even trimming result. (fig.6)

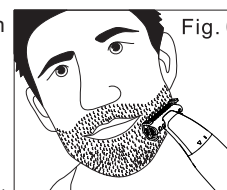

- To remove the comb, pull the back part off the product and then slide the comb off the blade.

 
 
CLEANING

Clean the product after every use. Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Do not tap the product or blade against a surface to remove hairs and water as this may cause damage to the product and blade. If the blade is damaged, replace immediately. Never dry the blade with a towel or tissue, as this may cause damage.

Cleaning the product

- Turn off the product.
 - Remove the comb from the blade (Fig. 7).
 - Blow off any hairs that have accumulated on the blade and/or comb.
 - Switch on the product briefly while rinsing the blade with tap water (Fig. 8).
 - Rinse the comb with tap water.
 - Carefully shake off excess water and let all parts air dry completely.
- Note: The blade is fragile. Handle it carefully. Replace the blade immediately if it is damaged.

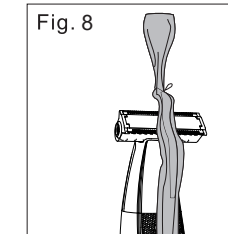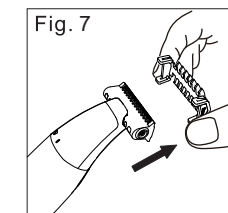

Storage

- Always attach the precision trimming comb on the blade to protect the blade from damage during traveling or storage.
- Be sure the product is turned off. Remove cord from outlet and the product before storing it in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap cord around the product when storing.
- Store cord in a safe location where it will not be cut or damaged.
- Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

 
 
REPLACEMENT

Replacing the blade

For optimal cutting and gliding performance, we advise you to replace the blade every 12 months or when it no longer provides the shaving or trimming results you expect. Depending on your usage behavior the exact lifetime of the blade could be longer or shorter. Similar to a manual blade, the blade becomes blunt over time, which results in increased hair pulling and reduced cutting performance.

Always replace the blade with original blade.

- Turn off the product.
- Carefully switch and pull the blade head from the product. (Fig.9)
- Hold the new blade and press and switch onto the product. (Fig.10)

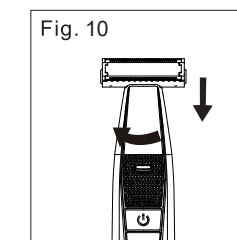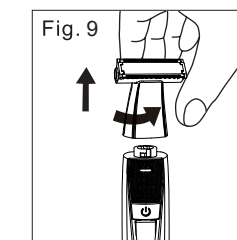

Disposal

This product contains a rechargeable lithium-ion battery which must be disposed of properly. Contact your local town or city officials for battery disposal information.

SPECIFICATIONS:

- Waterproof IPX5
- Power Consumption: 5W
- Motor Voltage: DC 3.7V
- Battery: Li-ion 600mAh x 1
- Blade: Stainless
- With LED light once working
- With charging indicator light
- Charging: Stay red; Full charged: Stay green
- With USB cable
- Input: DC 5V 1A
- Charging Time: 2 hours
- Working Time: 120 minutes.