



USER GUIDE

Gaming | Content Creation | Business & Productivity

USER GUIDE NOTEBOOK

Content

Copyright and Trademarks Notice	
Revision History	1-5
FCC-B Radio Frequency Interference Statement	
CE Conformity	
Battery Regulations	
WEEE Statement	
Chemical Substances Information	
RoHS Statement	
Japan JIS C 0950 Material Declaration	
India RoHS	
Turkey EEE regulation	
Ukraine restriction of hazardous substances	
Vietnam RoHS	1-9
Upgrade and Warranty	
Acquisition of Replaceable Parts	
Safety Instructions	1-11
MSI Highlights	1-14
Introductions	2-1
Introductions	
	2-2
Unpacking	2-2 2-3
Unpacking Product Overview	
Unpacking Product Overview Top-open View	
Unpacking Product Overview Top-open View Front Side View	
Unpacking Product Overview Top-open View Front Side View Right Side View	2-2 2-3 2-3 2-6 2-7 2-8
Unpacking Product Overview Top-open View Front Side View Right Side View Left Side View	2-2 2-3 2-3 2-3 2-6 2-7 2-7 2-8 2-9
Unpacking Product Overview Top-open View Front Side View Right Side View Left Side View Rear Side View	2-2 2-3 2-3 2-3 2-6
Unpacking Product Overview Top-open View Front Side View Right Side View Rear Side View Bottom Side View	2-2 2-3 2-3 2-3 2-6 2-7 2-8 2-9 2-9 2-10 2-11
Unpacking Product Overview Top-open View Front Side View Right Side View Left Side View Rear Side View Bottom Side View How to Use the Keyboard	2-2 2-3 2-3 2-3 2-6 2-7 2-8 2-9 2-9 2-10 2-11 2-11
Unpacking Product Overview Top-open View Front Side View Right Side View Left Side View Rear Side View Bottom Side View How to Use the Keyboard Windows Key	2-2
Unpacking Product Overview Top-open View Front Side View Right Side View Rear Side View Bottom Side View How to Use the Keyboard Windows Key Enable Quick Fn Launch Keys	2-2 2-3 2-3 2-4 2-6 2-7 2-8 2-9 2-10 2-10 2-11 2-11 2-11 2-12 2-12 2-12
Unpacking Product Overview Top-open View Front Side View Right Side View Left Side View Bottom Side View How to Use the Keyboard Windows Key Enable Quick Fn Launch Keys Use Quick Fn Launch Keys	
Unpacking Product Overview Top-open View Front Side View Right Side View Rear Side View Bottom Side View How to Use the Keyboard Windows Key Enable Quick Fn Launch Keys Use Quick Fn Launch Keys Screen Capture	2-2 2-3 2-3 2-6 2-6 2-7 2-8 2-9 2-10 2-11 2-11 2-11 2-11 2-12 2-12 2-12

How to Get Started	3-1
Begin to Use the Notebook	3-2
How to Use the Notebook Comfortably	3-3
How to Manage Power Supply	3-4
AC/DC Adapter	3-4
Battery	3-4
How to Set Up a Power Plan in Windows OS	3-6
Choose or Customize a Power Plan	3-6
Create Your Own Power Plan	3-9
How to Set Up Windows Hello (optional)	3-10
Create an Account's Password	3-10
Setting up Windows Hello PIN	3-12
Setting up Windows Hello Fingerprint	3-14
Setting up Windows Hello Face	3-16
How to Use the Touchpad	3-18
About HDD and SSD	3-19
About M.2 SSD Slot	3-19
How to Connect the Internet in Windows OS	3-20
Wireless LAN	3-20
Wired LAN	3-22
How to Set Up Bluetooth Connection in Windows OS	3-27
Activating Bluetooth Connection	3-27
How to Connect External Devices	3-30
How to Use USB Power Share Function (optional)	3-31
Video: How to Use RAID Function (optional)	3-32
Video: How to Restore Windows 10 Operating System on MSI Notebooks .	3-33
Video: How to Use MSI One Touch Install	3-34

Copyright and Trademarks Notice

Copyright © Micro-Star Int'I Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'I Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

Revision History

- Version: 1.0
- Date: 12, 2021

FCC-B Radio Frequency Interference Statement

FC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and radiates radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

NOTE

- The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Shield interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626)913-0828 www.msi.com

CE Conformity

CE

This device is in compliance with the essential safety requirements and other relevant provisions set out in the European Directive.

Battery Regulations



European Union: Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.



Taiwan: For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

California, USA: The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California.

For further information please visit: http://www.dtsc.ca.gov/hazardouswaste/ perchlorate/

Safety Guideline for Using Lithium Battery

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

WEEE Statement



European Union: Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2002/96/ EC, which takes effect on August 13, 2005, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.

Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:

https://csr.msi.com/global/index

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE regulation

Conforms to the EEE Regulations of the Republic Of Turkey.

Ukraine restriction of hazardous substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of December 3, 2008 № 1057, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Upgrade and Warranty

Please note that certain components, such as memory modules, HDD, SSD, ODD, and Bluetooth/WiFi combo card, etc., preinstalled in the product may be upgradable or replaceable by user's request depending on the models users purchased.

For any further information on the product users purchased, please contact the local dealer. **Do not attempt to upgrade or replace any component of the product** if users do not understand the component location or how to assembly/disassembly, since it may cause the product to be damaged. It is recommended that you contact the authorized dealer or service center for product service information.

Acquisition of Replaceable Parts

Please be noticed that the acquisition of replaceable parts (or compatible ones) of the product users purchased in certain countries or territories may be fulfilled by the manufacturer within 5 years at most since the product has been discontinued, depending on the official regulations declared at the time. Please contact the manufacturer via http:// www.msi.com/support/ for the detailed information about the acquisition of spare parts.

Safety Instructions

Read the safety instructions carefully and thoroughly. All cautions and warnings on the equipment or user's manual should be noted.

Replacement of a battery with an incorrect type that can defeat a safeguard.



- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Plug the power cord into an AC outlet that is easily accessible at all times.
- Disconnect power from the notebook by unplugging the power cord from the AC outlet.



- If a power cord with 3-prong plug came with the package, always plug the power cord into a grounded (earthed) AC outlet. Do not remove the grounding pin of the power cord, since it is an important safety feature.
- Always use the AC/DC adapter and power cord approved by MSI, or a compatible one purchased from MSI.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on top of the power cord.

ſ				ì
Γ		١.		l
И	1	2		l
L	V	2	2	IJ

- Always place the notebook on a stable, flat, hard surface before setting it up.
- Do not lay the notebook on an unstable surface while using it, such as your lap, bed, pillow, or sofa, etc...
- Do not cover the ventilators of the notebook to prevent the notebook from overheating.



WARNING: Do not ingest battery. If the coin / button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.



Keep the notebook away from humidity and high temperature.



Always keep the strong magnetic or electrical objects away from the notebook.



- Do not leave the notebook in an unconditioned environment with a storage temperature above 60°C (140°F) or below 0°C (32°F), which may damage the notebook.
- This notebook should be operated under maximum ambient temperature of 35°C (95°F).



- Never pour liquid into the opening that could damage the equipment or cause an electrical shock.
- Never use any chemical substance to wipe the surface of this equipment, such as keyboard, touchpad, and notebook case.

If any of the following situations arises, get the equipment checked by a service personnel:



- The power cord or plug is damaged.
- Liquid has penetrated into the equipment.
- · The equipment has been exposed to moisture.
- The equipment has not worked well or you can not get it work according to User's Manual.
- · The equipment was dropped and damaged.
- · The equipment has obvious signs of breakage.

Green Product Features

- · Reduced energy consumption during use and stand-by
- · Limited use of substances harmful to the environment and health
- · Easily dismantled and recycled
- · Reduced use of natural resources by encouraging recycling
- · Extended product lifetime through easy upgrades
- · Reduced solid waste production through take-back policy



Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

MSI Highlights

Explore more exclusive features of MSI notebooks for all series, please visit: http://www.msi.com and https://www.youtube.com/user/MSI

Features and configurations may vary by models. It is recommended to consult with local retailers for detailed information.

Enhance Your Creativity with MSI Pen



MSI Pen features a customizable remote function for presentation and other application. Let the MSI Pen support your creative work in Microsoft Office or Adobe applications.



How to use SteelSeries Engine 3 on MSI notebooks



MSI collaborates with SteelSeries to develop an exclusive SteelSeries Engine 3 in gaming notebooks. SteelSeries Engine 3 is the Apps to combine frequently used functions for gamers in multiple devices management.




Color Your Life with True Color


MSI has partnered with Portrait Displays, Inc. in developing more accurate, high precision panel quality. MSI True Color Technology guarantees that each panel in a MSI notebook comes with the finest precision in color.



Tutorial: How to use Nahimic

Discover how to use Nahimic and its three features: Nahimic Audio Effects, Microphone Effects and HD Audio recorder.

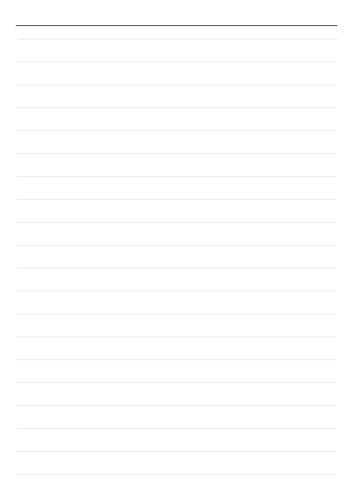

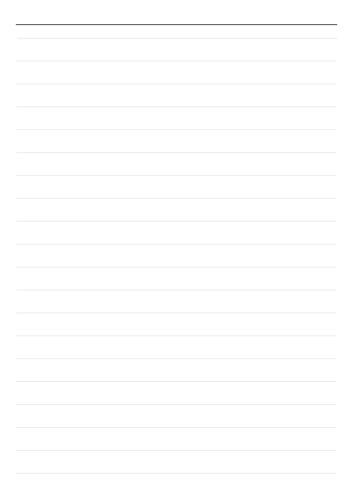

Introductions

Introductions

Congratulations on becoming the owner of this notebook, the finely designed notebook. You will have a delightful and professional experience in using this exquisite notebook. We are proud to tell users that this notebook is thoroughly tested and certified by our reputation for unsurpassed dependability and customer satisfaction.

Unpacking


First, unpack the shipping carton and check all items carefully. If any item contained is damaged or missing, please contact your local dealer immediately. Also, keep the box and packing materials in case you need to ship the unit in the future. The package should contain the following items:

- Notebook
- Quick Start Guide
- AC/DC adapter and AC power cord
- Optional carry bag

Product Overview

This section provides the description of basic aspects of the notebook. It will help you to know more about the appearance of this notebook before using it. Please be aware that the figures shown here are for reference only.

Top-open View

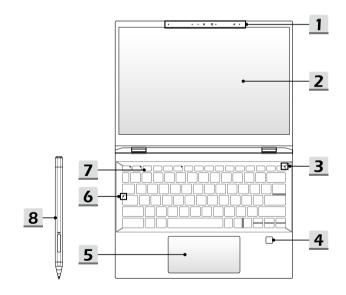

1. Webcam/ Webcam LED/ Internal Microphone

- This built-in webcam can be used for picture taking, video recording or conferencing, and so on.
- The built-in webcam may be optionally equipped with IR Camera using RGB light sensor to get much truer color. This camera supports infrared facial recognition function.
- Webcam LED indicator, next to the webcam, glows when webcam function is activated; LED goes out when this function is turned off.
- The built-in microphone shares the same function with an external one.

2. Touch Screen Monitor (optional)

- This optionally equipped 10-point multi-touch screen monitor allows users to interact with the notebook by using fingers or stylus.
- The adjustable rotating display panel with modes of Clamshell/ Stand/ Tent/ Tablet is optionally supported.

3. Power Key/ Power LED

ଁା

Power Key

- · Press this key to turn the notebook power ON.
- While the notebook is turned on, press this key to force the computer into sleep state. Press again to wake up the system from sleep state.
- Long press this key and follow the on-screen instruction to turn the notebook power OFF.

Power LED

- · LED goes off when the notebook goes to the sleep state.
- · LED goes off when the notebook is turned off.

4. Fingerprint Sensor

Use the fingerprint sensor to set up user's fingerprints on the notebook, and use it to unlock the notebook.

5. Touchpad

This is the pointing device of the notebook.

6. Status LED



Caps Lock

Glows when the Caps Lock function is activated.

7. Keyboard

The built-in keyboard provides all the functions of a notebook keyboard. Refer to **How to Use the Keyboard** for details.

8. MSI Pen (proactive stylus) (optional)

 
Use this optional supported MSI Pen to do the creative works. Please refer to MSI Pen Manual and Quick Guide for detailed instructions.

Front Side View



Blank below

Right Side View



1. Webcam Lock Switch

Switch to lock or unlock the webcam function. Webcam Lock Switch is set to locked position under default settings.

2. HDMI Connector HDMI

HDMI (High-Definition Multimedia Interface) technology is the industry-leading interface and de-facto standard connecting high-definition (HD) and ultra highdefinition (UHD) equipment.

3. Card Reader

The built-in card reader supports various types of memory cards. Use retrieve card pin to eject card reader tray. Please check the Specifications for details.

4. Audio Port Connectors

 
Make high quality sound blaster with stereo system.



Combo Audio Connector

- · A connector for headsets with attached microphones
- The Combo Audio Connector supports 4-Pole 3.5mm headphone jack.

Left Side View



1. Power/ Thunderbolt (Type-C) combo ports

- Always plug the provided AC/DC adapter that comes with the package to either port to supply power to the notebook and charge the battery pack.
- Thunderbolt[™], optionally supports USB4, PCle, HDMI, DisplayPort connection; 8K display monitor output; up to 40Gbps transfer rate; PowerDelivery 3.0 charging; and maximum 5V/3A or 5V/1.5A portable charging power output when AC or DC power is connected. (Follow the Intel[®] Thunderbolt[™] protocol specification).
- The notebook can be charged via this port with a power bank. Be noted that it is a
 must to connect each port with a power bank and a separate cable.
- · To connect devices to these ports, please connect one after another.

2. USB 3.2 Gen 1 Port

USB 3.2 Gen 1, the SuperSpeed USB, supports high-speed data transfer for the connected devices, such as storage devices, hard drives, or video cameras.

3. Status LED

 
Battery Status

- · LED glows when the battery is being charged.
- · LED turns amber while the battery is in low capacity status.

- + •

- Continuously blinking if the battery fails. If the problem persists, please contact your local authorized retailer or service center.
- Battery LED goes out when the battery is fully charged or when the AC/DC adapter is disconnected.


Rear Side View



1. Ventilator

The ventilator is designed to cool the system. DO NOT block the ventilator for air circulation.

Bottom Side View

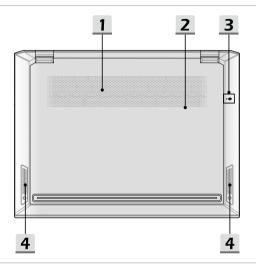

1. Ventilator

The ventilator is designed to cool the system. DO NOT block the ventilator for air circulation.

2. SSD Slot

This notebook is equipped with a SSD M.2 slot that supports the SSD device with PCIe interface. Contact the authorized dealer or service center for product service.

3. Battery Reset Hole

Whenever the system firmware (EC) is upgraded or the system hangs, please 1) power off the notebook; 2) remove the AC power; 3) use a straightened paperclip and insert it to this hole for 10 secs; 4) connect the AC power; 5) power on the notebook.

4. Stereo Speakers

This notebook may be equipped with built-in stereo speakers which deliver the high quality sound, and supports the HD audio technology.

How to Use the Keyboard

This notebook provides a full functioned keyboard. To ensure that the keyboard will be functioning properly, it is a must to install the necessary applications before using the keyboard function keys.

Use the FN keys on the keyboard to activate the specific applications or tools. With the help of these keys, users will be able to work more efficiently.



Windows Key



You can find the Windows Logo key on the keyboard which is used to perform Windows-specific functions, such as opening the Start menu and launching the shortcut menu.

Enable Quick Fn Launch Keys

- fn + esc
- This notebook is equipped with a set of Quick FN Launch Keys. Each function key, located on F1 to F12, has a built-in function that is available to use with an easy single press.
- Users are allowed to enable or disable the Quick Fn Launch Keys by pressing FN and ESC keys.

 Read the FN Lock LED indicator, located on the ESC keycap, to learn the function status.
 LED on: Standard FN combination keys enabled.
 LED off: Quick FN Launch Keys enabled.

Use Quick Fn Launch Keys

$ \begin{array}{c} \mathbb{I} \\ \mathbb$	 Speaker Settings F1: Mute the built-in speakers. The Mute LED indicator, located on the F1 keycap, glows when the sound is muted. F2: Decrease the built-in speaker's volume. F3: Increase the built-in speaker's volume.
الم	Touchpad Press to enable or disable the touchpad function.
₹ ps	 Microphone Off Press to enable or disable the microphone function. The Microphone LED indicator, located on the F5 keycap, glows when the microphone function is disabled.
@ _{F6}	 Webcam Enable or disable the webcam function. Make sure the Webcam Lock Switch is set to unlocked position before using Webcam function. Webcam is turned off under default settings.

(@ _{F7})	 MSI Center Pro This notebook may be pre-installed with a gaming utility, MSI Center Pro, providing users an astonished and efficient solution in game playing. Use this key to switch the User Scenario in MSI Center Pro.
	Keyboard Backlight LED Settings
	Press repeatedly to select a backlight LED level according to your preference.
(☆×)	LCD Settings
- F9	 F9: Decrease the LCD brightness.
\$\$^F10	F10: Increase the LCD brightness.
	Switch Display
(Pri)	Switch the display output mode between the LCD, external monitor and both.
	Screen Rotation
[D _{F12}]	Rotate the screen upside down for 180 degrees. Press again to

Screen Capture



Take a screen capture to the clipboard, and then it can be pasted into an editing program.

Functions of Fn Combination keys



Use Multiple Monitors

If users connect an additional monitor to the notebook, the system will automatically detect the external monitor connected. Users will be allowed to customize the display settings.



- · Connect the monitor to the notebook.
- Press and hold the Windows key, and then press [P] key to bring up [Project].
- Select how you want your display to project on the second screen from the selections of PC screen only, Duplicate, Extend, and Second screen only.

Specifications

The specifications listed here is reference only, and may vary and change without notice.

Visit MSI official website at www.msi.com, or contact the local retailers to learn about the details of the product you purchased.

Physical Characterist	ic
Dimension	300.2 (W) x 222.2 (D) x 14.9 (H) mm
Weight	1.35 kg
CPU	
Package	BGA
Mobile Processor	The latest Intel [®] Core [™] Processor Family
Memory	
Technology	LPDDR5
Memory	Dual channel memory on board
Maximum	Up to 32GB
Power	
AC/DC Adapter	1 x 65W, 20V Input: 100-240V~, 50/60Hz Output: 20V, 3.25A
Battery	4-cell
RTC Battery	Yes
Storage	
SSD	1 x M.2 2280 NVMe PCIe SSD slot

Introductions


I/O Port					
USB	1 x USB 3.2 Gen 1				
030	Power Share function is optionally supported				
Thunderbolt™	 2 x USB 4.0 Type-C PCle, HDMI, DisplayPort connection optionally supported 8K display monitor output up to 40Gbps data rate Supports maximum 5V/3A or 5V/1.5A portable charging power output when AC or DC power is connected Choose either way to use Power Delivery function to supply power for the notebook (1) connect a 20V, 65W MSI Type-C adapter (2) connect a power bank with at least 20V, 65W output. 				
Audio	1 x Mic-in/ Headphone-out combo				
Video	1 x HDMI				
Card Reader	1 x supports SD3.0				
Webcam Lock Switch	Supported				
Communication Port					
Wireless LAN	Supported				
Bluetooth	Supported				
Display					
LCD Type	13.4" FHD+ LED panel				
Touch Screen (optional)	10-point multi-touch screen monitor is optioanlly supported				
MSI Pen	Optioanlly supported				
Graphics	 Intel[®] Iris[®] Xe graphics Intel[®] UHD graphics 				
Webcam					
Туре	Infrared camera with RGB light sensor is supported				
Resolution	FHD				

Audio	
Internal Speakers	2 x stereo speakers
Security	
Trusted Platform Module (optional)	TPM 2.0 is a hardware-based encryption device that collaborates with software measures to form a more advanced and secure data protection.
	TPM functionalities can be de/activated in BIOS settings where appropriate.
	With professional versions of Windows, BitLocker is the default console available for TPM communications serving data encryption purposes.

How to Get Started

Begin to Use the Notebook

For a new user of this notebook, we would like to suggest you follow the illustrations below to begin to use the notebook.

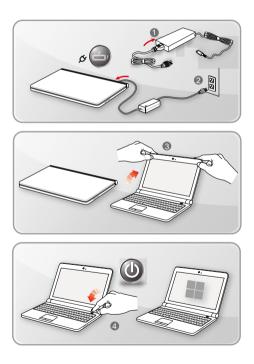

How to Use the Notebook Comfortably

If you are a beginner to the notebook, please read the following instructions to assure your own safety, and make yourself comfortable during the operations.

- Good illumination is essential in the work area.
- Choose a chair and desk with good ergonomics and adjust their heights according to your posture.
- Adjust the backrest to support your lower back comfortably when you are sitting upright.
- Place your feet flat on the floor with your knees bent to a 90 degrees.
- Adjust the angle/position of the LCD panel to have an optimal view.
- Stretch and relax your body regularly. Always take a break after working for a period of time.



How to Manage Power Supply

This section provides users basic safety precautions to take when using an AC/DC adapter and battery power properly.

AC/DC Adapter

Ensure that your notebook is connected to an AC power source via the AC adapter before turning it on for the first time. If the notebook automatically shuts down due to low battery power, it is likely to cause system failure. Below are some Dos and Don'ts of an AC/DC adapter.

- Dos
 - · Use the adapter that shipped with your notebook only.
 - · Always be aware of heat coming from the in use AC/DC adapter.
 - · Unplug the AC power cord before disassembly the notebook.
- Don'ts
 - · Cover an in-use adapter since it can generate heat.
 - Have the AC power cord plugged after powering off the system when the notebook is going to be left unused for a longer time.

Battery

When you get a new notebook or a new notebook battery, it is important to know how to charge and care for your battery in order to get the most out it for as long as you can.

Be aware of that the battery may not be replaced by users.

- Safety guidelines
 - This notebook is equipped with a non-removable battery, follow the local regulations while discarding the notebook.
 - Always keep the notebook and its battery away from excessive moisture and extreme temperatures.
 - Always unplug the AC power cord before installing any module to the notebook.

Battery type

- This notebook may be equipped with a high-capacity Li-ion or Li-polymer battery pack depending on the model you have.
- · The rechargeable battery pack is an internal power source of the notebook.

Battery charging behavior

To optimize battery life and avoid a sudden power loss, read the tips below:

- Suspend system operation if the system will be idle for a while or shorten the suspend timer's time period.
- · Turn off the system if you won't be using it for a period of time.
- · Disable unnecessary settings or remove idle peripherals.
- · Connect an AC/DC adapter to the system whenever possible.

How to charge the battery properly

Please pay attention to the following tips before recharging the battery:

- If a charged battery pack is not available, save your work and close all running
 programs and shut down the system.
- Plug in an AC/DC adapter.
- You can use the system, suspend system operation or shut down and turn off the system without interrupting the charging process.
- The Li-ion or Li-polymer battery has no memory effect. It is unnecessary to discharge the battery before recharging. However, to optimize the life of battery, we suggest that consuming the battery power completely once a month is necessary.
- · The actual charging time will be determined by the applications in use.

How to Set Up a Power Plan in Windows OS


* For selected models with Windows 11 operating system installed.


A power plan is a collection of hardware and system settings that manages how your computer uses and conserves power. Power plans can save energy, maximize system performance, or balance energy conservation with performance. The default power plans — Balanced and Power saver — meet most people's needs. But you can modify settings for existing plans or create your own plan.

The figures shown here are for reference only, they may be varied depending on the different version of Windows operating system installed.

Choose or Customize a Power Plan

- 1. Go to [Start] and then move the mouse cursor to [Type here to search] field.
- 2. Keyin [control panel] and then select [Control Panel] to continue.
- Open up [All Control Panel Items] window. Select [Large icons] under [View by] drop-down menu.
- 4. Select [Power Options] to continue.
- Within [Power Options] window, the Power Plan of [Balanced] is selected as an example here. Click on the [Change plan settings] to bring out [Edit Plan Settings] to customize a power plan.
- 6. Change settings for the plan selected in [Edit Plan Settings].
- Click on [Change advanced power settings] to bring out [Power Options]. Make advanced changes here to the selected power plan to meet your needs.
- To restore the selected power plan back to its default settings, click on [Restore plan defaults].
- 9. Follow the on-screen instructions to finish the configurations.

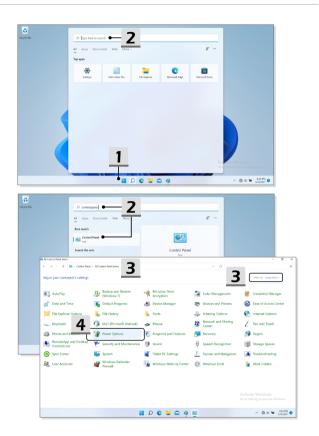


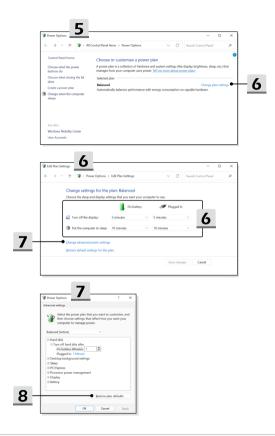

Create Your Own Power Plan

You are allowed to create your own Power Plan and customize it to meet personal requirements.

- 1. Click [Create a power plan] in [Power Options].
- Start with an existing plan and give the new power plan a name. Click [Next] to continue.
- Change the settings for the plan. Click [Create] to make the customized power plan taking effect.
- 4. Now you have a new power plan that is automatically set as active.

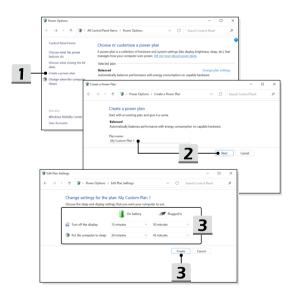

How to Set Up Windows Hello (optional)

Windows Hello is a more secure, personal way to get an instant access to your Windows operating system using fingerprint or facial recognition. The feature requires fingerprint reader or a infrared camera that supports it. Once you're set up, you'll be able to sign in with a quick swipe or glance.

Follow the instructions below to setup your Windows Hello Logins - Face, Fingerprint, and PIN.


The figures shown here are for reference only, they may be vary depending on the different version of Windows operating system installed.

Create an Account's Password

Before setting up Windows Hello, it is required to setup the account's password.

- 1. Go to [Start > Settings] and locate [Accounts].
- 2. In [Sign-in options], click [Password].
- 3. Under [Password], click [Add] to continue.
- Follow the on-screen instructions to create a new password for your account, and then click [Finish] to close.

C types	Property to space. P	
	A un 0	 A ⊕ 40 to 828 Million A ⊕ 40 to 828 Million

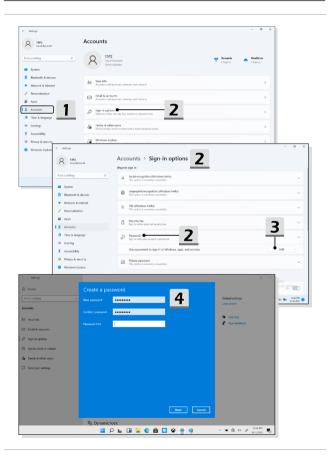

Setting up Windows Hello PIN

A Windows Hello PIN is a fast, secure way to sign in to your device, apps and services.

The figures shown here are for reference only, they may be varied from the actual ones.

- 1. Select [PIN (Windows Hello)], and then click [Set up] to continue.
- 2. Verify your account's password first
- 3. Set up your Windows Hello PIN. Click [OK] to close.

(- Settings		- o ×
A 13P2 Local Account	Accounts > Sign-in options	
Find a setting ,0	C Bacial recognition (Windows Helia) Sign in with your camera discontinended	Ý
 System Blaetooth & devices 	Fingerprint recognition (Windows Hello) Sign in with your Engergenet scenare (Recommended)	÷
Network & internet Personalization	PIN (Mindows Hello)	^
🖹 Apps	Use a PIN to sign in to Windows, apps, and services	 Set up
Accounts	Related links	
 Time & language Garring 	Security key Sign in with a physical security key	÷
 Accessibility Privacy & security 	Parameted Sign in with your account's parameterd	^
Windows Update	You're all set up	Change
	Super and top your fravelite photo to unlock your device	Activate Windows Go to Settings to activate Windows.
	🕾 🕸 🖬 🖉 🤉 🖉	∧ 🐯 d0 10 0055 PM ● 914/2021

c Settings 8 1392 Lood Account	Accounts > Sign-in options	- o ×
	Ways to sign in	
Find a setting P	U Facial recognition (Windows Helie) Sign in with your carries (Recommended)	v
System		
0 Bhartooth & devices	Fingerprint recognition (Windows Helio) System Windows Security X	~
 Network & internet 	First, verify your account password.	^
/ Personalization		
a Apps	User & MS/1392	Set up
S Accounts	Related link	
3 Time & language	OK Cross	
Gaming	Concernance	~
X Accessibility		
Privacy & security	Password Sign in with your eccount's persevent	^
Windows Update	You're all set up	Change
	C Picture parameter Surple and top your fearthe photo to unlock your device	Activate Windows Go to Settings to activate Windows.
	📕 P 😋 🖬 👰 🔮	∧ ⊕ 40 te €53 M 0 100 100 100 100 00

C Settings N 13P2 Local Account	Accounts > Sign-in options	- o ×
Find a setting P	Sight in this year and the second sec	~
Baetooth & devices Network & internet Personalization	Set up a PIN A Windows Helio PRI is a fast, secure way to sign in to your divide, apps, and services.	~
Apps Accounts	Use	Set up
 Time & language Garring Accessibility 	Sec. Sec. OK Cancel	×
Privacy & security Windows Update	Park System with your eccentric personnel Vourine all set up	Change
	Suppr and tray your feasible photo to unlock your device	Activate Windows Go to Settings to activate Windows.
	📕 🔎 😋 🐂 🏟 🦉	∧ ⊕ di ₩ 657.84 0 3/4/301


Setting up Windows Hello Fingerprint

* For selected models only

Time to say goodbye to entering complex passwords and start using your fingerprint to unlock your device and verity your identity.

- 1. Select [Fingerprint Recognition (Windows Hello)], click [Set up] to open up the Windows Hello setup wizard, and then click [Get Started] to continue.
- 2. Verify your Windows Hello PIN.
- Place your preferred finger on the fingerprint sensor. You will be asked to swipe the same finger for a few times to setup Windows Hello.
- 4. Click [Add Another] if you want to repeat the process with another finger.

nd a setting ,0	Ways to sign in	
System	Facial recognition (Windows Helic) Spin is with your carries (Recommended)	
Blaetooth & devices	Fingerprint recognition (Mindows Hello) Signals with your fingerprint scenese (Necessander)	^
Network & internet	Sign in with Windows, apps, and services	Set up
Apps	FM (Mindows Hello) Systematics PM (Jaconsonaded)	~
Accounts Time & language	Security key Sign in with a physical incustry key	~
Gaming Accessibility	Personal Spy in with your account's password	~
Fod a setting System Bantoch & devices Hatzerk & internet Personalization Accurret Time & longuage Gorring Corring Xocensility	Commentation C	stip
Privacy & security	S Picts Get started Gancel	

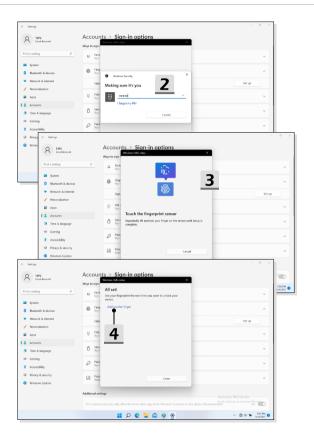


Setting up Windows Hello Face

* For selected models only

Your device just got more personal. Start using your face to unlock your device and verity your identity.


- Select [Facial Recognition (Windows Hello)], click [Set up] to open up the Windows Hello setup wizard, and then click [Get Started] to continue.
- 2. Verify your Windows Hello PIN.
- Position your face in the center of the frame that appears on screen. The camera will register your face.
- 4. Complete the setup. If you wore glasses while setting up face recognition, click [Improve recognition] to go through the setup again without them. This will help the system recognize you either way. Click [Remove] to cancel the facial login setup.

 Settings Settings 1392 Local Account 	Accounts > Sign-in options
Find a setting D System D Bartsoch & devices V Hescon& Enternet Personalization dess	We be says in I define the same same same same same same same sam
E Server Forder Ford	And a final section of the section o
	📲 🔎 😋 🐂 🏘 👰 🗠 🔺 📾 💌 📶

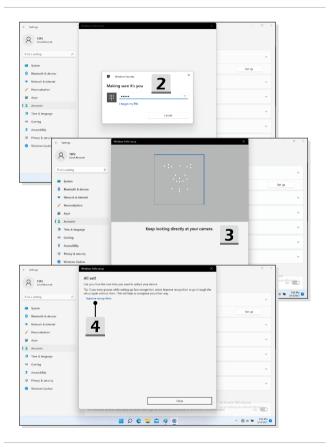

How to Use the Touchpad

The touchpad integrated in your notebook is a pointing device that is compatible with standard mouse, allowing you to control the notebook by pointing the location of the cursor on the screen.

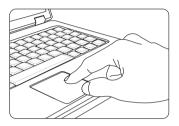

Configure the Touchpad

You can customize the pointing device to meet your personal needs. For example, if you are a left-handed user, you may want to swap the functions of the two buttons. In addition, you can change the size, shape, moving speed and other advanced features of the cursor on the screen.

To configure the touchpad, you can use the standard Microsoft or IBM PS/2 driver in your Windows operating system. The Mouse Properties in Control Panel allows you to change the configuration.

Position and Move

Place your finger on the touchpad (usually using the forefinger), and the rectangular pad will act as a miniature duplicate of your display. When you move your fingertip across the pad, the cursor on the screen will move simultaneously to the same direction. When your finger reaches the edge of the pad, lift your finger and place it on a proper location of the touchpad to continue the movement. Point and Click

When you have moved and placed the cursor over an icon, a menu item or a command that you want to execute, simply tap slightly on the touchpad or press the left button to select. This procedure, called as point and click is the basics of operating your notebook. Unlike the traditional pointing device such as the mouse, the whole touchpad can act as a left button, so that your each tap on the touchpad is equivalent to pressing the left button. Tapping twice more rapidly on the touchpad is to execute a double-click.

Drag and Drop

You can move files or objects in your notebook by using drag-and-drop. To do so, place the cursor on the desired item and slightly tap twice on the touchpad, and then keep your fingertip in contact with the touchpad on the second tap. Now, you can drag the selected item to the desired location by moving your finger on the touchpad, and then lift your finger from the touchpad to drop the item into place. Alternately, you can press and hold the left button when you select an item, and then move your finger to the desired location; finally, release the left button to finish the drag-anddrop operation.

About HDD and SSD

This notebook may be equipped with hard disk drive (HDD) or solid state drive (SSD) depending on the models users purchased.

The hard disk drive and solid state drive are the data storage devices used for storing and retrieving digital information. Most SSDs use NAND-based flash memory, and have higher data transfer rates, lower power consumption, and faster read/write speed than HDDs.

Do not attempt to remove or install the HDD and SSD when the notebook is powered on. Please consult an authorized retailer or service center for the replacement of the HDDs and SSDs.

About M.2 SSD Slot

The notebook may be equipped with M.2 SSD slots for M.2 SSD cards, which are compatible with SATA or PCle interfaces, providing diverse features and usages to users. Consult an authorized retailer or service center for correct specifications and installations.

How to Connect the Internet in Windows OS

* For selected models with Windows 11 operating system installed.


The figures shown here are for reference only, they may be varied depending on the different version of Windows operating system installed.

Wireless LAN

Wireless LAN is a wireless broadband connection that allows you to connect to the Internet without using any cables. Follow the instructions as below to set up a Wireless LAN connection.

- 1. Open up [Settings], find and click [Network & internet].
- 2. Make sure [Airplane mode] is turn off.
- 3. Switch [ON] the Wi-Fi function if it is set to [Off].
- 4. Select [Wi-Fi] within the [Network & internet] selection menu.
- Select [Show available networks] to open up the network list. (The available networks shown here are for reference only, and the actual ones may vary on the situation.)
- Choose one Wireless LAN network from the network list to connect to the Internet. Click [Connect] to continue.
- A security key may be required for connecting the selected network. Then click [Next].

← Settings		- • ×
A z Local Account	Network & internet	2
Find a setting D	Not connected You aren't connected to any networks	5 Troubleshoot
System		
8 Bluetooth & devices	Wi-Fi Connect, manage known networks, metered network	on 💽 >
 Network & internet 		
/ Personalization	Authoritization, IP and DNS settings, metered network	>
🖹 Apps		
Accounts	VPN Add, correct, manage	>
Time & language	and Mobile hotspot	
🕫 Gaming	0y0 Mobile hotspot Share your internet connection	off • >
X Accessibility	ab. Airolane mode	
Privacy & security	R Airplane mode Stop all wireless communication	eoff 💽 >
 Windows Update 	Pray Pray server for Wi-Fi and Ethernet connections	>

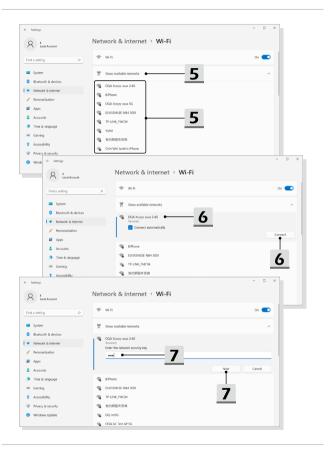


Wired LAN

Use cables to connect to the Internet. Before setting up the connection of Dynamic IP/ PPPoE or Broadband (PPPoE) or Static IP, contact your Internet Service Provider (ISP) or network administrator for assistance of setting up Internet connection.

- Dynamic IP/PPPoE Connection
 - 1. Open up [Settings], find and click [Network & internet].
 - 2. Select [Ethernet] within the [Network & internet] selection menu.
 - The [IP assignment] and [DNS server assignment] are automatically set as [Automatic (DHCP)].
- Static IP Connection
 - 4. Follow the previous steps 1 to 2 to continue.
 - 5. Click [Edit] of [IP assignment].
 - 6. Select [Manual].
 - Switch the [IPv4] or [IPv6] on. (Contact your Internet Service Provider or network administrator for assistance of the configurations.)
 - Fill the IP address, Subnet mask, Gateway, Preferred DNS, and Alternate DNS. Then click [Save].

← Settings		
R Local Account	Network & internet	
Find a setting P	Vox avent connected Vox avent connected to any networks	Troubleshoot
System		
Bluetooth & devices	Wi-Fi Cornect, manage known networks, metered network	Cn 💽 >
Network & internet Personalization	C Ethernet 2	>
Apps Accounts	VPN Add, connect, manage	>
 Time & language Gaming 	θήθ Mobile hotspot Share your internet connection	or
 Accessibility Privacy & security 	by Airplane mode Stop al wheless communication	off
Windows Update	Procy Procyserver for Wi-Fi and Ethemet connections	>

← :	Settings			- 0	
۶	Z Local Account	Network & internet	> Ethernet		
Find	a setting P	Authentication settings		Edit	
-	System	Metered connection Some apps might work differently t this network	o reduce data usage when you're connected to	5	
0	Bluetooth & devices	Set a data limit to help control	data usage on this network	<u> </u>	
•	Network & internet			\rightarrow	,
1	Personalization	IP assignment:	Automatic (DHCP)	Edit	J
	Apps	DNS server assignment:	Automatic (DHCP)	Edit	
	Accounts	Link speed (Receive/Transmit):	1000/1000 (Mbps)	Сору	
9	Time & language	Link-local IPv6 address: IPv6 address	fe80:443d;e59b;ce57;8275%12 172,16,17,249		
	Gaming	IPv4 DNS servers:	172.16.0.12 (Unencrypted) 172.16.0.11 (Unencrypted)		
×	Accessibility		172.16.0.13 (Unencrypted)		
	Privacy & security	Primary DNS suffic Manufacturer:	msi.com.tw Killer		
~	Privacy of security	Description:	Killer E3100G 2.5 Gigabit Ethernet Controller		
Θ	Windows Update	Driver version:	10.47.121.2021		
		Physical address (MAC):	D8-88-C1-1E-88-FF		

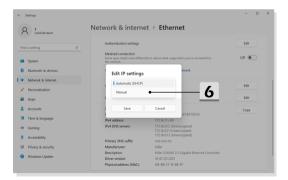

*	Settings				- 0	×
8	Z Local Account	Network & internet	> Etherr	net		
	a setting P	Authentication settings			Edit	
_	System	Edit IP settings	v	en you're connected to	off 💽	
0	Bluetooth & devices	1		twork		
1.	Network & internet	IPv4		7		11
1	Personalization	• off •			Edit	
-	Apps	IPv6		7	Edit	
:	Accounts	• off •			Сору	
3	Time & language			57.8275%12		
	Gaming	Save	Cancel	rypted) ypted)		
×	Accessibility	Primary DNS suffic	msi.com.tw	(ypted)		
÷	Privacy & security	Manufacturer:	Kiler			
•	Windows Update	Description: Driver version:	10.47.121.2021	.5 Gigabit Ethernet Controller		
		Physical address (MAC):	D8-88-C1-1E-8	8-FF		

 Settings Z Local Account 	Netw	Edit IP settings IP address	t	- 0 ×
Find a setting D		Subnet mask	en you're connected to	Edit
Bluetooth & devices Network & internet		Gateway	rtwork	
Personalization Apps		Preferred DNS	8	Edit
 Accounts Time & language 	L L	Preferred DNS encryption Unencrypted only ~	:57:8275%12	Сору
Gaming Accessibility Privacy & security		Alternate DNS	rypted) rypted)	
Privacy & security Windows Update		Alternate DNS encryption Unencrypted only	l igsbit Ethernet Controller F	
	Get I	Save Cancel		

- Broadband (PPPoE) Connection
 - 1. Open up [Settings], find and click [Network & internet].
 - 2. Select [Dial-up] within the [Network & internet] selection menu.
 - 3. Select [Set up a new connection].

← Settings		- o ×
R z Local Account	Network & internet	
Find a setting	Ethernet Ornected Ornected Ornected	Bata usage → 2.58 GB, last 30 days →
System		
Bluetooth & devices Network & internet	Wi-Fi Connect, manage known networks, metered network:	On 💽 >
Personalization	Ethernet Authentication, IP and DNS settings, meterod network	>
Apps	O VPN	,
 Accounts Time & language 	 Aso, connect, manage 	
Gaming	여야 Mobile hotspot Share your internet connection	or
 Accessibility Privacy & security 	Arplane mode Step al viewies communication	or
 Windows Update 	Prony Prony server for Wi-Fi and Ethernet connections	>
Settings	2 Dahup Set up a tai-up internet connection	>
R Éxt Annuel Tot s verting 0 In the tot of the first sectors 0 In the tot of the tot sectors 0 In the tot of the tot sectors 0 In the tot of the tot sectors 0 In the tot of tot sectors <t< th=""><th>Network & internet > Dial-up</th><th></th></t<>	Network & internet > Dial-up	
Windows Update		

- Select [Connect to the Internet] under [Choose a connection option], and then click [Next].
- 5. Select [Set up a new connection anyway].
- 6. Click [Broadband (PPPoE)].
- 7. Fill User name, Password, and Connection name fields. Then click [Connect].

	-	
- Set Up a Connection or Network		
Choose a connection option		×
Connect to the Internet Set up a broadband or dial-up connection to the Internet.	Connect to the Internet	
Set up a new network	You are already cont	nected to the Internet
Set up a new router or access point.		
Connect to a hidden network or create a new wireless profile.	-3	•
Set up a dial-up or VPN connection to your workplace.		
	→ Browse ti	he Internet now
	→ Set up a	new connection anyway
Ne		5
	• ×	
 Connect to the Internet 		Cancel
How do you want to connect?		x
Broadband (PPPoE)	← 🗣 Connect to the Interne	t
Connect using DSL or cable that requires a user name and password.	Type the informatic	n from your Internet service provider (ISP)
	User name:	Name your ISP gave you]
6	Password:	[Password your ISP gave you]
		Remember this password 7
Show connection options that this computer is not set up to use	Connection name:	Broadband Connection
	Allow other people to use this connection This option allows anyone with access to this computer to use this connection.	
	I don't have an ISP	
Connect		Connect Cancel

How to Set Up Bluetooth Connection in Windows OS


* For selected models with Windows 11 operating system installed.


Bluetooth pairing is a process in which two Bluetooth devices communicate with each other through an established connection.

The figures shown here are for reference only, they may be vary depending on the different version of Windows operating system installed.

Activating Bluetooth Connection

- Checking the Bluetooth status Before setting up a Bluetooth connection, it is a must to make sure that Airplane mode is turned off.
 - 1. Open up [Settings], find and click [Bluetooth & devices].
 - 2. Switch [ON] the Bluebooth function if it is set to [Off].
- Pairing the Bluetooth devices
 - 3. Click [Add device].
 - 4. Select [Bluetooth].
 - 5. Choose and select a device to start pairing.
 - Give the passcode as instructed by the device waiting to be connected, and then click on [Connect] to continue and complete pairing.

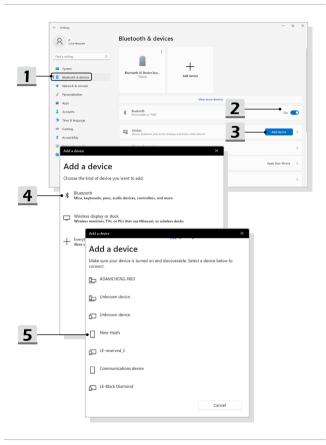


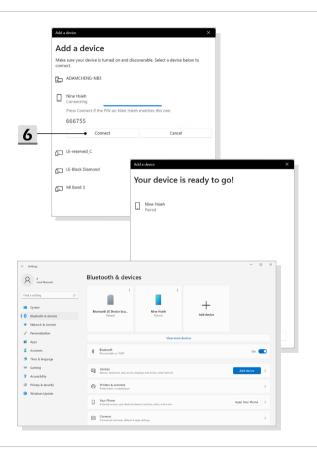

How to Connect External Devices

This notebook may be equipped with various connecting I/O (input/output) ports, such as USB, HDMI, DisplayPort, and mini DisplayPort. Users will be able to connect diverse peripheral devices to the notebook.

To connect these devices, refer to the instruction manuals of each device first, and then connect the device to the notebook. This notebook is capable to auto detect the connected devices, and if there is no detection of the devices, please manually enable the devices by going to [Start Menu/ Windows System/ Control Panel/ Hardware and Sound/ Add a device] to add the new devices.

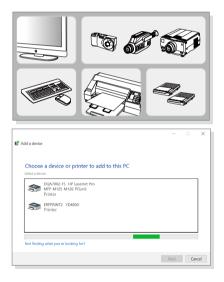

How to Use USB Power Share Function (optional)

This notebook may be optionally supported USB Power Share function via Type-A USB ports, providing portable charging power output for various USB devices, such as mobile phones and power banks, while the notebook is in hibernation and shutdown status.

- USB Power Share function will only be available in AC mode under default settings; therefore, it is a must to connect AC power to the notebook before using this function.
- Users are also allowed to enable using this function under AC or DC mode in BIOS settings; however, as AC/ DC mode is enabled, it may affect the battery life more or less.
- USB Power Share function supports selected models only, and the figures shown here are for reference only.



Video: How to Use RAID Function (optional)

* For selected models with Windows 10 operating system installed.

This notebook may support RAID function of different levels. RAID allows users to store data on multiple hard disk drives or solid state drives. Contact the local dealer for further and correct information and be noted that the supported RAID functions may vary depending on the models users purchased.

Watch the instruction video at: https://www.youtube.com/watch?v=TWqufSUYC-8



Video: How to Restore Windows 10 Operating System on MSI Notebooks

* For selected models with Windows 10 operating system installed.

Watch the instruction video at: https://www.youtube.com/watch?v=C3M1Di0QF_k, to restore the Windows 10 operating system when it is needed.




Video: How to Use MSI One Touch Install

* For selected models with Windows 10 operating system installed.

MSI "One Touch Install", the one-click installer application, allows users to efficiently install all needed drivers on MSI notebooks with single click.

Watch the instruction video at: https://www.youtube.com/watch?v=V-5ByMZdnik



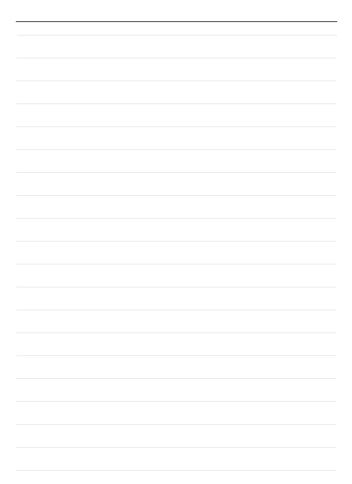









SUPPORT



SOCIAL MEDIA