

Samsung Xpress SL-M2020, SL-M2026 - Replacing the Toner Cartridge

This document explains how to replace the toner cartridge. When a toner cartridge has reached the end of life, the printer will stop printing.

note:


- Before opening the top cover, close the output support first.
- Do not use sharp objects such as a knife or scissors to open the toner cartridge package. They might scratch the drum of the cartridge.
- If toner gets on your clothing, wipe it off with a dry cloth and wash clothing in cold water. Hot water sets toner into fabric.
- Shake the toner cartridge thoroughly, it will increase the initial print quality.
- Do not touch the green underside of the toner cartridge. Use the handle on the cartridge to avoid touching this area.

Replacing the toner cartridge

Use these steps to replace the toner cartridge.

1. Open the lower tray (1) and lift the top cover (2).

Figure : Open the tray and top cover

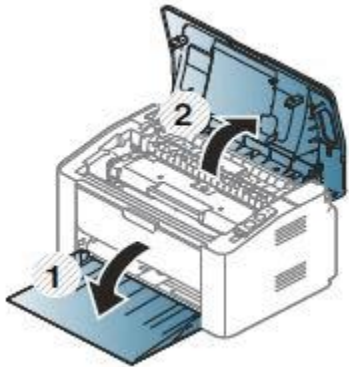


2. Remove the used toner cartridge from the printer.

Figure : Remove the used toner cartridge




3. Remove the protective shield on the new toner cartridge.

Figure : Remove the protective shield

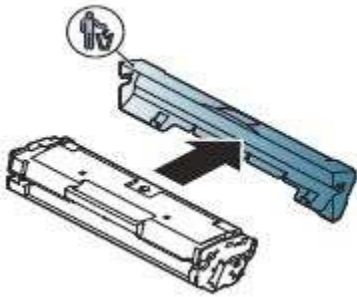

4. Gently rock the toner cartridge back and forth to distribute the toner.

Figure : Gently rock the toner cartridge

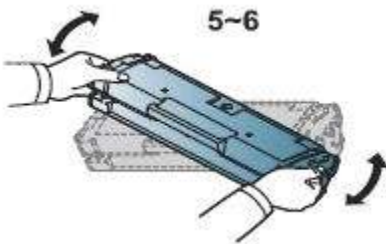

5. Grasp the new toner cartridge by the handle and install it in the printer.

Figure : Install the toner cartridge



6. Close the top cover.

Figure : Close the top cover

