

# THERMOSYSTEM



Item: 201107  
201206



You should read this user manual carefully before using the appliance

Bevor Sie das Gerät in Betrieb nehmen, sollten Sie diese Gebrauchsanweisung aufmerksam lesen

Alvorens de apparatuur in gebruik te nemen dient u deze gebruiksaanwijzing aandachtig te lezen

Przed uruchomieniem urządzenia należy koniecznie dokładnie przeczytać niniejszą instrukcję obsługi

Lisez attentivement ce mode d'emploi avant d'utiliser l'appareil .

Prima di utilizzare l'apparecchio in funzione leggere attentamente le istruzioni per l'uso.

Citiți cu atenție prezentul manual de utilizare înainte de folosirea aparatului

Внимательно прочитайте руководство пользователя перед использованием прибора



Keep this manual with the appliance.  
Diese Gebrauchsanweisung bitte beim Gerät aufbewahren.  
Bewaar deze handleiding bij het apparaat.  
Zachowaj instrukcję urządzenia.  
Gardez ces instructions avec cet appareil.  
Conservate le istruzioni insieme all'apparecchio.  
Păstrați manualul de utilizare alături de aparat.  
Хранить руководство вместе с устройством.



For indoor use only.  
Nur zur Verwendung im Innenbereich.  
Alleen voor gebruik binnenshuis.  
Do użytku wewnątrz pomieszczeń.  
Pour l'usage à l'intérieur seulement.  
Destinato solo all'uso domestico.  
Numai pentru uz casnic.  
Использовать только в помещениях.



Dear Customer,

Thank you for purchasing this Hendi appliance. Please read this manual carefully before connecting the appliance in order to prevent damage due to incorrect use. Read the safety regulations in particular very carefully.

---

### Safety regulations

- Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
- The appliance may only be used for the purpose for which it was intended and designed. The manufacturer is not liable for any damage caused by incorrect operation and improper use.
- Keep the appliance and electrical plug away from water and any other liquids. In the unlikely event that the appliance should fall into water, immediately pull the plug out of the socket and have the appliance checked by a certified technician. Not following these instructions could give rise to life-threatening situations.
- Never try to open the casing of the appliance yourself.
- Do not insert any objects in the casing of the appliance.
- Do not touch the plug with wet or damp hands.
- Regularly check the plug and cord for any damage. Should the plug or cord be damaged have it/them repaired by a certified repair company.
- Do not use the appliance after it has fallen or is damaged in any other way. Have it checked and repaired, if necessary, by a certified repair company.
- Do not try to repair the appliance yourself. This could give rise to life-threatening situations.
- Make sure the cord does not come in contact with sharp or hot objects and keep it away from open fire. To pull the plug out of the socket, always pull on the plug and not on the cord.
- Make sure that no one can accidentally pull the cord (or extension cord) loose or trip over the cord.
- Always keep an eye on the appliance when in use.
- Children do not understand that incorrect use of electrical appliances can be dangerous. Therefore, never let children use home appliances without supervision.
- Always pull the plug out of the socket when the appliance is not being used and always before cleaning.
- Warning! As long as the plug is in the socket the appliance is connected to the power source.
- Turn off the appliance before pulling the plug out of the socket.
- Never carry the appliance by the cord.
- Do not use any extra devices that are not supplied along with the appliance.
- Only connect the appliance to an electrical outlet with the voltage and frequency mentioned on the appliance label.
- Avoid overloading.
- Turn off the appliance after use by removing the plug from the socket.
- Always remove the plug from the socket when filling or cleaning the appliance.
- The electrical installation must comply with the applicable national and local regulations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

EN



---

## Function

The thermo system is ideally suited for keeping sauces at the right temperature. With individual temperature control.

---

## Technical details

|                        | One           | Two           | Two Plus      | Three         | Four          |
|------------------------|---------------|---------------|---------------|---------------|---------------|
| Supply voltage [U]     | 230 V         | 230 V         | 230 V         | 230 V         | 230 V         |
| Power [P]              | 200 W         | 400 W         | 400 W         | 600 W         | 800 W         |
| Dimensions (B x D x H) | 260x265x245mm | 505x265x245mm | 265x505x245mm | 765x265x245mm | 505x505x245mm |
| Volume                 | 1 x 4,2 litre | 2 x 4,2 litre | 2 x 4,2 litre | 3 x 4,2 litre | 4 x 4,2 litre |

---

## Preparations before using for the first time

- Check to make sure the appliance is undamaged. In case of any damage, contact your supplier immediately and do NOT use the appliance.
  - Remove all the packing material and protection film (if applicable).
  - Clean the appliance with luke-warm water and a soft cloth.
  - Place the appliance on a level and steady surface, unless mentioned otherwise.
  - Make sure there is enough clearance around the appliance for ventilation purposes.
  - Position the appliance in such a way that the plug is accessible at all times.
- 

## Use

- Turn both on/off switches to the "0" position, all lamps are off.
  - Fill the enamelled inner container with approximately 0,25 litre. Check the water level regularly during use.
  - Install the bain-marie pots.
  - Turn the on/off switch to the desired position, the orange lamp will light.
- 

## After use

- Turn off the equipment by unplugging it from the mains supply.
  - Allow the water to cool down.
  - Remove the bain-marie pots. These can be cleaned in the dishwasher.
  - Dry and clean the enamelled pot.
- 

## Cleaning and maintenance

- Always remove the plug from the socket before cleaning the appliance.
- Beware: Never immerse the appliance in water or any other liquid!
- Clean the outside of the appliance with a damp cloth (water with mild detergent).
- Never use aggressive cleaning agents or abrasives. Do not use any sharp or pointed objects. Do not use petrol or solvents! Clean with a damp cloth and detergent if necessary. Do not use abrasive materials.
- Wherever possible, avoid water coming into contact with electrical components.



## Faults

| Fault  | Symptom                    | Cause                      | Possible solution             |
|--|----------------------------|----------------------------|-------------------------------|
| Appliance does not do anything               | Orange lamp does not light | No mains voltage           | Check the power supply.       |
| Appliance does not reach the set temperature | Orange lamp lights         | Power controller defective | Replace the power controller. |
|  |                            | Element defective          | Replace the element.          |

If in doubt, contact your supplier.

## Spare parts

| Article number | Description           |
|----------------|-----------------------|
| 201114-308400  | Element               |
| 201145-308424  | Orange lamp           |
| 201121-306390  | Power controller      |
| 202289-303603  | Mains supply plug     |
| 470909-303610  | Bain marie 4,2l + lid |
| 201411-310939  | Pot black enamelled   |
| 470923-313947  | Lid                   |

## Warranty

Any defect affecting the functionality of the appliance that becomes apparent within one year after purchase will be corrected by free repair or replacement provided the appliance has been used and maintained in accordance with the instructions and has not been abused or misused in any way. Your statutory rights are not affected. If the appliance is claimed under warranty, state where and when it

was bought and include proof of purchase (e.g. receipt).

In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

## Discarding & Environment

At the end of the life of the appliance, please dispose of the appliance according to the regulations and guidelines applicable at the time.

Throw packing materials like plastic and boxes in the appropriate containers.







**Hendi B.V.**

Steenoven 21  
3911 TX Rhenen, The Netherlands  
**Tel:** +31 (0)317 681 040  
**Fax:** +31 (0)317 681 045  
**Email:** [info@hendi.eu](mailto:info@hendi.eu)

**Hendi Polska Sp. z o.o.**

ul. Magazynowa 5  
62-023 Gądkki, Poland  
**Tel:** +48 61 6587000  
**Fax:** +48 61 6587001  
**Email:** [info@hendi.pl](mailto:info@hendi.pl)

**Hendi Food Service Equipment GmbH**

Gewerbegebiet Ehring 15  
5112 Lamprechtshausen, Austria  
**Tel:** +43 (0) 6274 200 10 0  
**Fax:** +43 (0) 6274 200 10 20  
**Email:** [office.austria@hendi.eu](mailto:office.austria@hendi.eu)

**Hendi Food Service Equipment Romania Srl**

Str. Ecaterina Teodoroiu nr. 38, Parc Industrial Ramoss  
Halele 23-24, Brasov 500450, Romania  
**Tel:** +40 268 320330  
**Fax:** +40 268 320335  
**Email:** [office@hendi.ro](mailto:office@hendi.ro)

**Hendi HK Ltd.**

1603-5, Tower II, Enterprise Square  
9 Sheung Yuet Road, Kowloon Bay, Hong Kong  
**Tel:** +852 2801 5019  
**Fax:** +852 2801 5057  
**Email:** [info-hk@hendi.eu](mailto:info-hk@hendi.eu)

**Find Hendi on internet:**

[www.hendi.eu](http://www.hendi.eu)  
[www.facebook.com/HendiFoodServiceEquipment](https://www.facebook.com/HendiFoodServiceEquipment)  
[www.linkedin.com/company/hendi-food-service-equipment-b.v.](https://www.linkedin.com/company/hendi-food-service-equipment-b.v.)  
[www.youtube.com/HendiEquipment](https://www.youtube.com/HendiEquipment)

- Changes, printing and typesetting errors reserved.  
- Änderungen und Druckfehler vorbehalten.  
- Wijzigingen en drukfouten voorbehouden.  
- Producent zastrzega sobie prawo do zmian oraz błędów drukarskich w instrukcji.

- Variations et fautes d'impression réservés.  
- Errori di cambiamenti, di stampa e di impaginazione riservati.  
- Drepturi rezervate cu privire la modificări și greșeli de imprimare.  
- Изменения, печати и верстки ошибки защищены.