

Safety warning

Follow the following warnings to prevent injury or damage to equipment:

1. Do not allow children or animals to chew or swallow equipment and accessories;
2. Do not stab the device in the eyes, ears or other body parts, or put the device in the mouth;
3. Do not store the equipment in an overheated or over cooled environment. It is recommended to use it in an environment with a temperature ranging from -5°C to 40°C;
4. Do not store equipment near or inside heaters, microwave ovens, cooking equipment or high-pressure containers;
5. Do not drop, squeeze, bump or scratch the equipment;
6. Do not use the equipment outdoors in thunderstorms;
7. Please keep the equipment dry;
8. If you do not securely keep the backup file during device failure or factory reset, you will not be able to restore the previous data. Be sure to perform all important data stored on the device Backup and keep in a safe place;
9. When using power-consuming applications or using applications on the device for a long time, the device will feel hot, which is normal and will not affect the use or performance of the device.
10. Children under the age of 14 shall open the package and use it under adult supervision;
11. Keep all packaging materials (such as tapes, plastic bags, plastic sheets, labels, binding wires, etc.) and small parts of the machine out of reach of children under 3 years of age to avoid room risk.

⚠ Notice:


1. To prevent hearing damage that may occur when using earphones or at high volume, do not listen to the sound with earphones or at high volume for a long time.
2. The host has built-in horn, do not magnetic objects, magnetic metal objects should be kept away from the magnet so as not to be damaged.
3. Do not touch or remove the broken part when the host machine is broken. Please stop using it immediately and contact the local supplier.
4. The battery will explode if not replaced properly, only batteries of the same or equivalent type can be replaced, and be sure to dispose of used batteries according to the instructions.
5. According to the CCC certification standard of our company, this product does not include power adapter at the factory. If you buy another charger, please follow the following requirements. Otherwise, our company will regard it as man-made damage.

Kids Karaoke Machine



Product Manual

Product Operation Diagram:

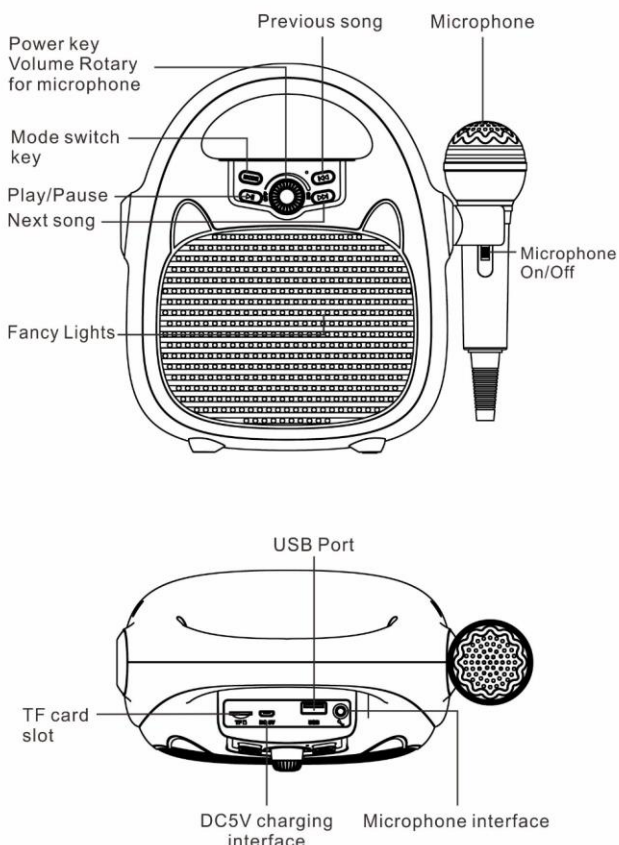

Bluetooth Operating Instructions:

When the Host is opened, the machine will prompt to enter "Bluetooth Mode". Meanwhile, the LED blue indicator will flash quickly. Open the phone setting interface, click "Bluetooth" and set to enable Bluetooth function; Click Search device connection, Find the machine (Model PN-11), Then click the local name "PN-11" to connect. When the device prompts "successfully connected", it indicates that the device has been connected with bluetooth of the mobile phone. At the same time, the LED blue indicator light of the device flashes slowly.

The bluetooth mode is automatically default when the machine is turned on. When TF card or external device is inserted, the "M" mode key is required to enter the Bluetooth mode. When the TF card or external device is plugged in, the machine will not automatically enter Bluetooth mode when it is started up.

Charging method and precautions:

1. Connect the charging adapter with TYPE-C cable (The MINI interface is connected to the charging interface of the device, and the USB interface is connected to the charging adapter)
2. It can be fully charged within 5-6 hours;
3. When the power is off and charged, the system indicator light will turn on red, and the system indicator light will go out after it is fully charged.

If the battery is not used for a long time or the battery is exhausted, the recharging time may not be normal immediately. Please keep charging for a period of time before starting up.

Warning

1. Do not soak the battery in water. Pay attention to moisture proof and explosion proof.
2. Do not dismantle or modify the battery without permission.
3. Do not short circuit the battery positive and negative poles.
4. Do not place the battery at a high temperature of 60°C or near the fire source.
5. Do not use the battery after being immersed in water.

The power adapter you choose must meet the following requirements:

Import: AC100-240V~50/60Hz,0.3A
Output: DC 5V==1000mA