

USER MANUAL



PLAY CANOPY TENT



IMPORTANT INFORMATION:


- * Please read the manual carefully before you use this product. Keep it for future reference.
- * The product is designed for kids over 12 months.
- * Do not leave children unattended with this product.
- * **OPEN with Care!**
Please keep away from your head and body when opening.
- * The product is assembled by **ADULTS** only!
- * Before using, please check all parts are in right position. If anything broken, please do not going on using.

How to install the play tent:

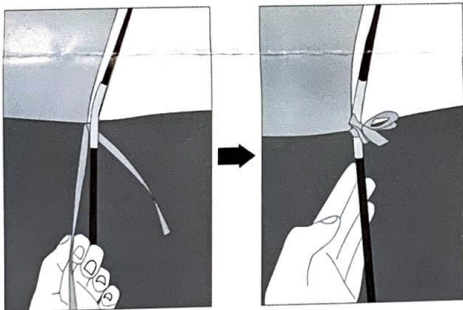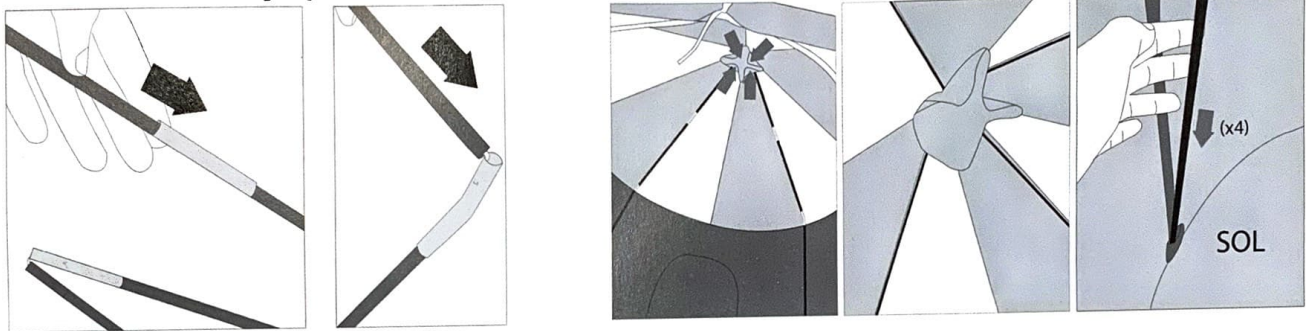

1. Take tent and poles from the bag.
2. Assemble each poles at the three notches provided.
3. Insert each poles' end into the pockets on top one by one separately.
4. The other end of poles inserts into the pockets near the bottom one by one too.
5. Tie the rope with poles to fix all poles strongly.
6. Before using, please make sure the tent is installed correctly and stand strongly.

FOLDING STEPS:

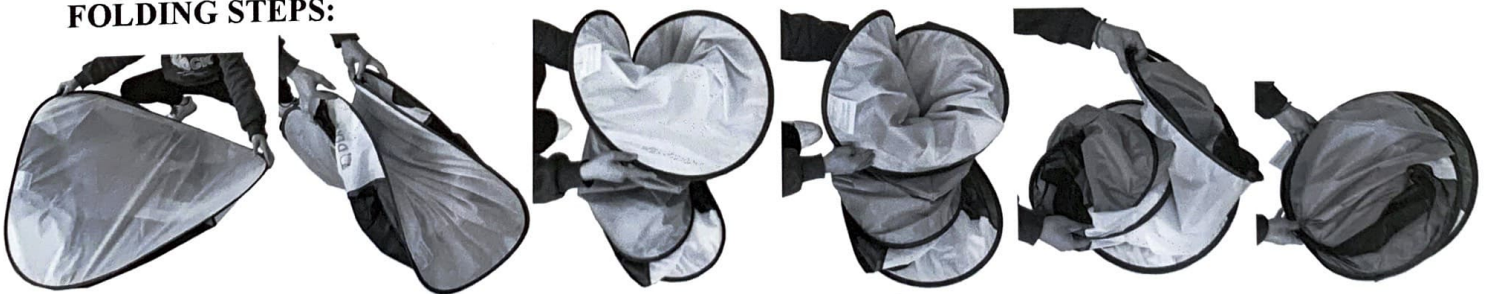

1. Take off all poles out from tent. Then putting top and bottom together to be flat.
2. Turn the bottom on the upside, holding the two diagonal sides of flat panels in the middle.
3. One hand holding the two sides in the middle together and turn it to the upright position.
4. Another hand press the top area down into the inside direction.
5. Loosing the back hand a little to cross the panels to be 3 small circles.
5. Making the circles covered each other.
6. Put the folded tent and poles into the carry bag.

Importer:
DERYAN B.V.
MARITHAIME 8 6662 WD ELST,
THE NETHERLANDS
www.deryan.com

Warning: Please keep away from fire!

Made in China