


1:18 RC VEHICLE INSTRUCTIONS

Driving Tips & transmitter




Battery Installation

1. Open the vehicle's battery cover. A: install the battery pack and connect to the vehicle. B: install 4X1.5V AA batteries with correct polarity as shown inside the battery compartment (NOT INCLUDED)
2. Open the transmitter's battery cover, install 2X1.5V AA batteries with correct polarity as shown inside the battery compartment (NOT INCLUDED)
3. Replace the battery cover and tighten screw with a screwdriver.

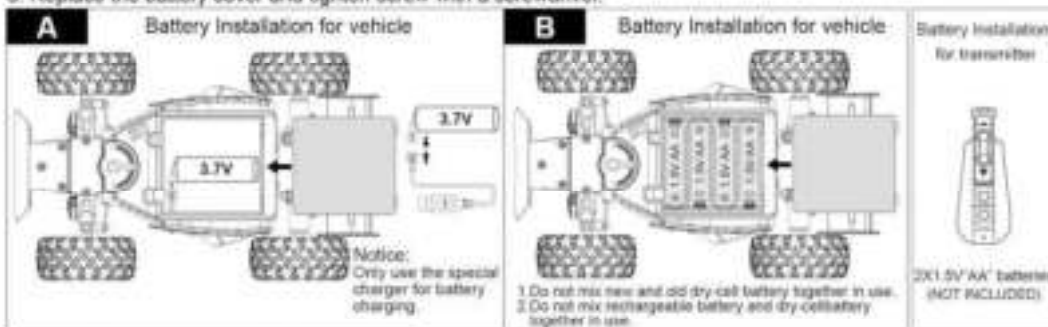

Operation manual of remote control

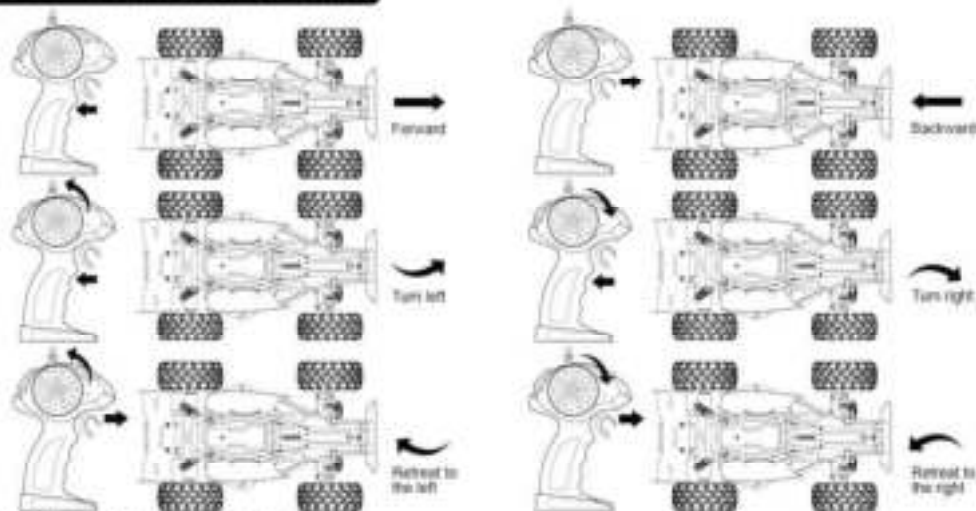

bind the transmitter to the receiver.
First turn on the switch of the car, and then turn on the remote control switch, the remote control indicator light flashes, start the frequency alignment. When the light stops flickering, complete the frequency alignment. It can be manipulated.
Switch the power OFF on the transmitter and vehicle after use, prevent power consumption.