


SD Pro  
 SD Plus  
 SD Ultra  
 SD Gaming  
 SD Extreme  
 SDHC  
 SDHC Ultra  
 SDHC Extreme  
 SDXC  
 SDXC Ultra  
 MMC  
 MMC HS  
 MMC Plus  
 Mini SDHC (need Adapter)  
 Mini SD (need Adapter)  
 MMC Mobile (need Adapter)  
 MMC Micro (need Adapter)  
 RS MMC (need Adapter)  
 RS MMC 4.0 (need Adapter)  
 RS MMC Mobile (need Adapter)  
 RS MMC HS (need Adapter)  
 DV RS MMC (need Adapter)

MS Pro  
 MS Pro HS  
 MS Pro Ultra II  
 MS Pro Extreme  
 MS Pro Extreme III  
 MS Duo  
 MS Duo HS  
 MS Pro Duo  
 MS Pro Duo HS  
 MS Pro Duo Ultra  
 MS Pro Duo Ultra II  
 MS Duo-ROM  
 MS PRO Duo MARK2  
 MS Pro-HG Duo HX  
 MS Pro-HG Duo  
 MS Pro-HG Duo Ultra

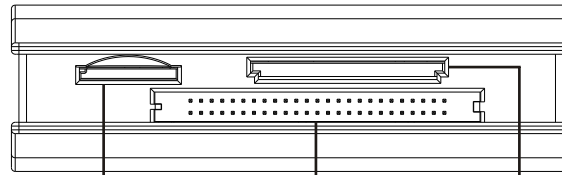

Micro SD ( T-Flash )  
 Micro SDHC  
 Micro SD Ultra  
 M2

CF Type I  
 CF Ultra  
 CF Ultra II  
 CF Ultra III  
 CF Ultra IV  
 CF Extreme  
 CF Extreme III  
 CF Extreme IV  
 CF Extreme Pro  
 CF Elite  
 CF Elite Pro  
 CF Ultimate  
 CF Pro  
 CF Pro II  
 CF Pro III

XD Card  
 XD Type H  
 XD Type M

\*\*CF Type II and Micro Drive cannot fit