

USER'S MANUAL



Table of Contents

1. Product Specifications, p. 2
2. Packing List, p.3
3. How to Use
 - Charge Battery, p. 4
 - Install and Remove Massage Heads, p. 5
 - Massage Heads & Targeted Muscle Group, p. 6
 - Power On and Off, p.7
 - Adjust Speed Levels p. 8
 - Maintenance, p. 9
4. Safety Warning, p. 10

Product Specifications

- Model: XG06
- Motor: Brush Motor
- Exterior Shell: ABS Plastic
- Battery: 3,300 mAh Built-In Lithium Ion
- Input Voltage: 12V
- Amplitude: 10mm
- Speed: 7 Speed, 1,200 - 3,200 Percussions/Min

Packing List

- 1 Percussion Massage Gun
- 12 Massage Heads
- 1 Travel Case
- 1 USB Cable
- 1 Instruction Manual

Charge Battery

- Fully charge the massage gun unit before initial use.
- Connect the USB charging cable to the charging port.
- LED display on bottom of battery will pulsate when charging and indicate the current battery level.
- LED display on bottom of battery will display “100%” when fully charged.
- Battery can be recharged at any time/any battery level.
- Battery should not be fully depleted prior to recharging.
- Battery charge level indicated on bottom of LCD Screen and bottom of the battery.

Install and Remove Massage Heads

- Select desired massage head and insert directly into unit - do not rotate the massage head.
- Ensure that massage head is firmly inserted and secured prior to using the massage gun unit.
- Remove massage head by pulling directly out of the massage gun unit - do not rotate the massage head.

Massage Heads & Targeted Muscle Group



Round Head
Palm, Back, Buttocks, Legs



Bullet Head
Palm, Plantar



U-Head
Neck, Back, Achilles



Spade Head
Back, Buttocks, Legs, Calves



Flat Head
Back, Buttocks, Legs, Calves



Thumb Head
Palm, Plantar



Semi-Circle Head
Legs, Buttocks, Arms



T-Shaped Head
Back, Buttocks, Legs, Calves



Fan-Shaped Head
Back, Buttocks, Legs, Calves



Dispersed Head
Shoulders, Buttocks



Mushroom Head
Joints, Sensitive Muscles



Gyro Head
Joints, Sensitive Muscles

Power On and Off

- Power unit on by moving the power switch at the bottom of the battery to the “ON” position.
- Press the button on the center of the LCD screen to power on to the 1st gear; display will show “1One” .
- Press and hold the button on the center of the LCD screen to power off.
- Power device off by moving the power switch at the bottom of the battery to the “OFF” position.

Adjust Speed Levels

- When the unit is powered on, press the button on the center of the LCD screen to adjust to the desired speed
 - “1One” First Speed
 - “2Two” Second Speed
 - “3Three” Third Speed
 - “4Four” Fourth Speed
 - “5Five” Fifth Speed
 - “6Six” Sixth Speed
 - “7Seven” Seventh Speed
- Speed level indicated on the LCD screen.
- When the unit is used continuously for 10 minutes, the unit will automatically pause to avoid overheating. After unit has cooled, you can proceed to switch on and reus

Maintenance

- Use a lightly damp cloth to clean the massage gun unit and massage heads; dry gently with soft cloth.
- Regularly clean the motor heat sink and keep free of debris and dust.
- For storage or travel, place all items in the case and securely close the case.

Safety Warning

- Do not disassemble the massage gun unit and equipment.
- Do not immerse unit in water; keep away from liquid and heat source.
- Do not use unit for more than one hour continuously.
- Do not use high speed and high pressure on head and bones.
- Do not use or charge unit in high temperature environment.
- Regularly clean the motor heat sink and keep free of debris and dust.
- Remove charger from unit before using/after charging.
- Consult a medical professional prior to using the unit.
- Not suitable for individuals age 12 and under.

