

SALTER®

SINCE 1760

Smokeless Grill

Barbecue flavour indoors without smoke



Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use, and clean, this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

This appliance is not a toy; children should not play with the appliance.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage. Keep power cord away from children.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not move the appliance whilst it is in use.

Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.

Always unplug the appliance after use, and allow cooling before performing any cleaning, user maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

The outer surface of the appliance may get hot during operation.



Caution: Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

Warning: Keep the appliance away from flammable materials.

Care and Maintenance

Before attempting any cleaning or maintenance, unplug the Smokeless Grill from the mains power supply and allow to cool fully.

STEP 1: Wipe the Smokeless Grill and housing with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the drip tray in warm, soapy water, then rinse and dry thoroughly.

STEP 3: Remove baked on food by applying a small amount of warm water mixed with a mild detergent to the non-stick cooking plate, then wipe it clean with a paper towel. Use a nonabrasive scourer if the food is difficult to remove.

Do not immerse the Smokeless Grill in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the Smokeless Grill or its accessories, as this could damage the surface.

Note: The Smokeless Grill should be cleaned after each use.

Warning: The drip tray will gather oil and fat, which may still be hot after use. Allow it to cool fully before carefully removing the drip tray for cleaning.

Description of Parts



- | | |
|-----------------------------------|-----------------------------|
| 1. Smokeless Grill main unit | 5. Temperature control dial |
| 2. Grill base | 6. Heat indicator light |
| 3. Detachable power cord | 7. Cool-touch handle(s) |
| 4. Non-stick coated cooking plate | 8. Removable drip tray |

Instructions for Use

Before First Use

STEP 1: Check that the Smokeless Grill is switched off and unplugged from the mains power supply.

STEP 2: Wipe the Smokeless Grill housing with a soft, damp cloth and dry thoroughly.

STEP 3: Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

Note: When using the Smokeless Grill for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Smokeless Grill.

Assembling the Smokeless Grill

STEP 1: Place the drip tray into the unit base. It should sit firmly within the base.

STEP 2: place the non-stick cooking plate onto the base. Push the power cord into the cooking plate until it clicks into place.

Note: Make sure that the temperature control dial is switched to the '0' position before plugging the power cord into the cooking plate.

The Smokeless Grill is fitted with a locking system, meaning the cooking plate cannot be lifted out from the base whilst the power cord is connected.

Using the Smokeless Grill

STEP 1: Place the unit on a stable, horizontal heat-resistant surface and in a well-ventilated area. Prepare the ingredients that are to be cooked.

STEP 2: Plug in and switch on the Smokeless Grill at the mains power supply, making sure that the temperature control dial is set to the '0' position.

STEP 3: Select the required temperature by turning the temperature control dial in an anticlockwise direction; the orange indicator light will turn on, signalling that the Smokeless Grill is heating up.

STEP 4: Preheat the Smokeless Grill for approx. 4–6 minutes. The red indicator light will turn off once the required temperature has been reached.

STEP 5: Place the prepared ingredients onto the cooking plate. Cook for approx. 3–8 minutes, depending upon the type of ingredients and the temperature used.

STEP 6: Once cooking is complete, carefully remove the food with a heat-resistant plastic or wooden spatula.

STEP 7: Turn the temperature control dial in an anticlockwise direction to the '0' position, then switch off and unplug the Smokeless Grill from the mains power supply. Allow the Smokeless Grill to cool down before cleaning.

Note: Do not use the appliance without having the drip tray in place.

Always preheat the cooking plate before starting to cook. Carefully apply a thin coat of cooking oil to the non-stick plate, rubbing it in carefully with a paper towel. This will help to prolong the life of the non-stick coating.

During use the orange indicator will cycle on and off to signal that the Smokeless Grill is maintaining the selected temperature.

Caution: The non-stick cooking plate gets very hot during use; always use heat-resistant gloves to avoid injury. Take care when placing food onto the non-stick plate, as fatty, oily or wet ingredients may create splashback, which could cause injury.

Temperature Table

Setting	Temperature
1	120 °C
2	160 °C
3	190 °C
4	210 °C
5	230 °C

Storage

Check that the Smokeless Grill is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the Smokeless Grill; wrap it loosely to avoid causing damage.

Specifications

Product code: EK4218CPVDEEU7

Input: 220–240 V ~ 50/60 Hz

Output: 1200 W

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.saltercookshop.com

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.



CD090920/MD000000/V1