



MINI MAKER WAFFLE

4" Cooking Surface | Non-Stick | 350 Watts



TROUBLESHOOTING

5. After using my Mini Maker Waffle a few times, food is starting to stick to the surface. What is happening?
 - There is probably a build-up of burnt food residue on the Cooking Surface. This is normal, especially when cooking with sugar. Allow the appliance to cool fully, pour on a little cooking oil and let sit for 5-10 minutes. Scrub Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Rinse the cloth and wipe again. If food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
6. The Indicator Light will not turn on and the Cooking Surface is failing to heat.
 - Ensure that the power cord is plugged into the power outlet.
 - Check to make sure the power outlet is operating correctly.
 - Determine if a power failure has occurred in your home, apartment or building.



Before first use, remove all packaging material and thoroughly clean your Mini Maker Waffle.



Never touch the Cooking Surface or Cover while appliance is in use.



DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury.



Always lift and lower the Cover by the Cover Handle. Lift from the side.

USING YOUR MINI MAKER WAFFLE



1 Place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Indicator Light will illuminate, signaling that the Mini Maker Waffle is heating up.



2 Once the Cooking Surface reaches the optimal cooking temperature, the Indicator Light will automatically shut off. Now, you're ready to get cooking!



3 Carefully lift the Cover by the Cover Handle and spray both Cooking Surfaces with a small amount of cooking spray.

CLEANING & MAINTENANCE

Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids. Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Maker Waffle.

In order to keep your Mini Maker Waffle in pristine working order, thoroughly clean the appliance after each use. This will prevent the build-up of food or oil.

- Unplug Mini Maker Waffle and allow it to cool completely.
- Using a damp, soapy cloth, wipe down the Cooking Surface and Cover. Thoroughly rinse the cloth and wipe again.
- Thoroughly dry Mini Maker Waffle before storing.
- If there is food burned onto the Cooking Surface, pour on a little cooking oil and let sit for 5 to 10 minutes. Scrub the Cooking Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Thoroughly rinse the cloth and wipe again. If any food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Maker Waffle and its non-stick Cooking Surface.

USING YOUR MINI MAKER WAFFLE



5 Place or pour batter onto the Cooking Surface and close the Cover.



6 Once waffle is cooked to your preference, carefully remove it from the Cooking Surface with a heat-resistant nylon or silicone cooking utensil. **NOTE:** Do not use metal utensils to remove or place food on the Cooking Surface as this will damage the non-stick surface.



7 When you have finished cooking, unplug your Mini Maker Waffle and allow it to cool before moving or cleaning.

TROUBLESHOOTING

- The light on the Mini Maker Waffle keeps shutting off.**
 - This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the Cooking Surface does not get too hot or cold. When this occurs, the Indicator Light turns on and off.
- How do I know when the Mini Maker Waffle is heated and ready to use?**
 - When the Waffle Maker reaches the optimal temperature, the Indicator Light shuts off and that means you're ready to get cooking!
- There is no On/Off Button. How do I turn the Mini Maker Waffle off and on?**
 - To turn on, simply plug in the power cord. When you're done cooking, turn off the Mini Maker Waffle by unplugging it.
- When using my Mini Maker Waffle, the Cover gets very hot. Is this normal?**
 - Yes, this is completely normal. When using your Waffle Maker, always lift and lower the Cover by the Cover Handle. To prevent personal injury, DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.



Before first use, remove all packaging material and thoroughly clean your Mini Maker Waffle.



Never touch the Cooking Surface or Cover while appliance is in use.



DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury.



Always lift and lower the Cover by the Cover Handle. Lift from the side.

USING YOUR MINI MAKER WAFFLE



1 Place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Indicator Light will illuminate, signaling that the Mini Maker Waffle is heating up.



2 Once the Cooking Surface reaches the optimal cooking temperature, the Indicator Light will automatically shut off. Now, you're ready to get cooking!



3 Carefully lift the Cover by the Cover Handle and spray both Cooking Surfaces with a small amount of cooking spray.

CLEANING & MAINTENANCE

Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids. Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Maker Waffle.

In order to keep your Mini Maker Waffle in pristine working order, thoroughly clean the appliance after each use. This will prevent the build-up of food or oil.

- Unplug Mini Maker Waffle and allow it to cool completely.
- Using a damp, soapy cloth, wipe down the Cooking Surface and Cover. Thoroughly rinse the cloth and wipe again.
- Thoroughly dry Mini Maker Waffle before storing.
- If there is food burned onto the Cooking Surface, pour on a little cooking oil and let sit for 5 to 10 minutes. Scrub the Cooking Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Thoroughly rinse the cloth and wipe again. If any food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Maker Waffle and its non-stick Cooking Surface.

USING YOUR MINI MAKER WAFFLE



5 Place or pour batter onto the Cooking Surface and close the Cover.



6 Once waffle is cooked to your preference, carefully remove it from the Cooking Surface with a heat-resistant nylon or silicone cooking utensil. **NOTE:** Do not use metal utensils to remove or place food on the Cooking Surface as this will damage the non-stick surface.



7 When you have finished cooking, unplug your Mini Maker Waffle and allow it to cool before moving or cleaning.

TROUBLESHOOTING

- The light on the Mini Maker Waffle keeps shutting off.**
 - This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the Cooking Surface does not get too hot or cold. When this occurs, the Indicator Light turns on and off.
- How do I know when the Mini Maker Waffle is heated and ready to use?**
 - When the Waffle Maker reaches the optimal temperature, the Indicator Light shuts off and that means you're ready to get cooking!
- There is no On/Off Button. How do I turn the Mini Maker Waffle off and on?**
 - To turn on, simply plug in the power cord. When you're done cooking, turn off the Mini Maker Waffle by unplugging it.
- When using my Mini Maker Waffle, the Cover gets very hot. Is this normal?**
 - Yes, this is completely normal. When using your Waffle Maker, always lift and lower the Cover by the Cover Handle. To prevent personal injury, DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.