











ΕN

Thank you for purchasing our steam nail polish remover. This manual will provide instructions for effective and safe use of the product. Please read it carefully before use and store the manual in a safe place for future reference. If you ever pass the product on to others, this manual should be included.

1. Description of parts

- 1. Cover
- 2. Finger cap
- 3. LED light indicators
- 4. Power switch
- 5. Temperature control cooling
- 6. Temperature control Plus temperature
- 7. Silicone protective caps
- 8. Silicone card

2. Technical data

Material: ABS

Power supply: 100-240V 50/60 Hz Dimensions: approx. 17.5X14.5X13CM

Weight: 500g

3. Safety instructions

- · For intended use only, as described in this manual.
- · Before use, inspect the device. Do not use in case of damage.
- · Do not place, store or use the product near water.
- Do not let moisture come into contact with any electrical parts.
- · Never touch the device or its plug with wet hands.
- Do not use outdoors or operate where aerosol (spray) products are being used.
- Do not place near heat sources such as radiators, cookers, etc.
- · Keep away from sources of ignition.
- Keep the cord out of harm's way.
- . Do not leave the product unattended when in use.
- . Do not touch the base during use and 10 minutes afterwards.
- Do not switch on the device if the finger cap is not securely in place.
- · Place the product on a level surface and do not move when in use.
- · The device does not switch off automatically.
- Do not attempt to repair, disassemble or alter the product yourself.

4. Operation

- 1. First, remove glue residue, rhinestones or other decorations and buff the top layer.
- 2. Remove the top cover and the finger cap.
- 3. Pour 5-10 ml of nail polish remover (not included) into the plastic reservoir.
- 4. Replace the finger cap and lock it into place.
- 5. Plug in the device and turn it on.
- 6. Wait for the device to beep once, then insert all fingers into the finger cap and steam for a minimum of 5 minutes. Note: For best results, steam each hand for 10 minutes.
- 7. Gently remove any remaining nail polish and repeat the process if necessary.

LED status:

W	- red	Heating	This will light up intermittently during the process.
	- green		Ready for use, insert your fingers.
Н	- yellow	Warm	This indicates that the process has finished, but the device will stay warm.

5. Maintenance

- If necessary, clean the outside with water or a mild non-abrasive detergent. Do not use water warmer than 40°C. Dry everything thoroughly with a clean and soft cloth.
- Store the product in a cool and dry place away from direct sunlight.

6. Disposal

Dispose of the article and the packaging materials in accordance with current local regulations. This product is subject to the provisions of the European Directive 2012/19/EU.



The crossed out wheelie bin symbol means that this product shall not be disposed of with normal household waste. Electronic and Electrical Equipment not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances. Please dispose of responsibly at an approved waste or recycling facility.



The CE marking is a certification mark that indicates conformity with health, safety and environmental protection standards for products sold within the European Union. The CE marking is the manufacturer's declaration that the product meets the requirements of the applicable EC directives.



Recycling helps to reduce the consumption of resources and reduce the environmental impact. If you wish to discard the packaging, comply to the environmental legislation in your country.