

HOW TO USE

Press the button on the whisking and return the button to stop



Notices

- The whisk is non-detachable. Do not try to detach the whisk.
- It is recommended that the continuous working time of the frother should not exceed 3 minutes.
- Do not immerse the main body of the product in water or any other liquid to avoid harm to human or the product.
- Keep body parts (e.g. fingers) away from the whisk when the machine is working.
- Keep this product away from children.
- If there is water or other liquid on the whisk, please do not place the product upside down to avoid water flowing into the main body.



UK
CA



RoHS

