CHECKS PRIOR TO USE, PEDARING FOR THE DIVE

open the tank valve to avoid the hammer" effect resulting from the ressure entering the hose. Never look at the instrument dial when opening

ising Nitrox or oxygen, always open k valve very slowly to reduce the risk

e tank valve is open and the system urized, close the valve and make ere are no leaks, checking that the e indicated by the needle on the gauge is stable and does not drop. in pressure is detected, do not dive ble check the entire system. he dive, remember to check the pressure frequently. sure gauge features a reserve

dicator (area between 50 and 100psi and Opsi marked in red), to tell the diver when the tanks y empty. If the gauge pointer he red sector during the dive, it is

y to start the ascent. ure gauge is equipped with no enough to avoid hindering during use. It is in any case nded to secure the instrument on the harness or BC.

. 6. MARKING

The instrument markings are the following:

1

- EN250: tested and certified according to European Norm EN250;
- CE 0426:CE conformity and identification number of notified body controlling production in compliance with Module C2 of European Regulation 2016/425
- 300bar / 4350psi: maximum operating pressure
- Oxygen 200 bar Max: identifies the version compatible with 100% oxygen.

. 7. CARE, STORAGE AND TRANSPORT

Rinse your regulator and gauge thoroughly in fresh water after every dive. Ensure that the dust cap is installed on the first stage prior to doing so. Store the regulator and gauge in a dry place away from direct sunlight. When travelling with your equipment, it is best to use a padded bag such as is commonly used to transport diving equipment.

. 8. MAINTENANCE

The pressure gauge should be serviced by an authorized Mares dealer every other year or after 200 dives (whichever comes first).

- Avoid exposing the instrument to direct sunlight or sources of heat.
- Treat the gauge like a precision instrument and avoid bumps or knocks.
- Rinse in fresh water after event dive

which connects to the pressure reducer, be replaced periodically.

Any maintenance or repairs must obligatorily be performed by Mares or its authorized personnel.

9. WARRANTY

Terms and conditions of the warranty are described on the warranty certificate included with the gauge.