



ISADÉE

PROFESSIONAL HAIR TOOLS



MANUAL – HANDLEIDING

ULTRA ST-1

[WWW.ISADEEHAIR.COM](http://WWW.ISADEEHAIR.COM)

## SAFETY INSTRUCTIONS

- Always unplug the appliance immediately after using the ISADÉE hair straightner ULTRA ST-1.
- Do not use the hair straightner ULTRA ST-1STEAM while bathing.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not drop into water or other liquids.
- If the appliance falls into water, unplug immediately. Do not reach into the water.
- This appliance should never be left unattended when plugged in.
- Close supervision if necessary when this appliance is used by, on, or near children or individual with certain disabilities.
- Use this appliance only for its intended use as described in the manual. Do not use any attachment not provided by the manufacturer.
- Keep the cord away from the heated surface of the hair straightner.
- Do not warp the cord around the appliance.
- Do not use outdoors or operate where aerosol products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not place the heated appliance directly on any surface while its hot or plugged in.
- Do not use any other liquid other than water in your Styler to avoid damage to unit.
- Do not leave the styler unattended when switched on.
- Allow the styler to cool down before storing it.
- Do not immerse in water or other liquids.
- Do not place styler on soft material e.g. carpet, bedding, towels. rugs etc.
- Always ensure the voltage to be used corresponds to the voltage sated on the unit.
- Keep this product out of reach of children.
- Avoid allowing any part of the hot plates to contact the face, neck or scalp.
- Do not wrap the cord around the unit. Check cord regularly for any sigh of damage.
- Damaged cords can be dangerous. If the supply cord of this unit becomes damaged, discontinue use immediately contact us for repair or replacement in order to Ovoid a hazard.
- Special tools are required or any examination, adjustment or repair. Unqualified repair work could lead to hazardous conditions for the user.
- Please do not fill oily or unknown hair treatment liquid which without the styler manufacturer approval into the tank, it may do harm to the tank and cause quality problems.
- We do not accept responsibility for damage to the product. persons or other items, caused by misuse, abuse or non-compliance with these instructions.



## WARNING

### IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE APPLIANCE

When using an electrical appliance, basic precautions should always be followed, including the following:

 **WARNING**

THE APPLIANCE, FILTER AND ATTACHMENTS CONTAIN MAGNETS.

Keep away from pacemakers, defibrillators, credit cards and electronic storage media.

 **WARNING**

THESE WARNINGS APPLY TO THE

APPLIANCE, AND ALSO WHERE APPLICABLE TO ALL TOOLS, ACCESSORIES, CHARGERS OR MAINS ADAPTORS.

---

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:**

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance should not be done by children without supervision.
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. This appliance has a non-self resetting thermal cut out safety device to prevent overheating. If your appliance cuts out, unplug it from the mains supply socket and leave to cool.
5. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

**CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility company, or plugged into any socket where the electrical supply is unstable or likely to be turned off.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off. For additional protection when the appliance is switched off.

For additional protection when the appliance is used in a bathroom, it is recommended that a Residual Current Device (RCD), with a residual operating current not exceeding 30 mA is installed in the electrical circuit supplying the bathroom. Contact a qualified electrical installer for advice. Do not use the appliance for any other purpose than drying hair.

Do not handle any part of the plug or appliance with Wet hands.

Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable. The use of an extension cable is not recommended.

Do not stretch the cable or place the cable under strain. Keep the cable away from heated surfaces and do not wrap the cable around the appliance.

Do not use any lubricants, cleaning agents, polishes or air fresheners on any part of the appliance.

**STEP1:**

Ensure the Styler power off.  
Do not attempt to fill  
the tank while the Styler is  
on hot.

**STEP2:**

Open the water tank cover,  
See FIG 1.

FIG 1



FIG 2

**STEP3:**

Put on the attachment for  
the bottle.

Fill the water as shown in  
FIG 3 fill the steam Tank.

**Tips:** When filling the water  
tank, please tilt the water  
tank by 45° to avoid the  
water in the water tank  
overflowing during the  
filling process.



FIG 3



\*Do not use liquids other than  
pure water to fill the water tank.

**STEP4:**

Cap the water tank cover,  
See FIG 4.



**STEP5:**

Plug in the appliance and  
turn ON. Adjusted to a  
Setting temperature, Turn on  
the steam button the  
temperature rise to 120°C/  
250°F, see FIG 5.

Styling after the appliance  
rise to the setting temperature.



**Tips:**

1) Please note that steam will be generated at temperatures above 120°C / 250°F. The hair straightener (in the clipped state) will automatically generate steam every five seconds.

2) After the device is turned on, the system will automatically start self-test. If the hair straightener generates a slight vibration after the device is turned on, the system starts to detect it, which is normal.

3) When the water tank is empty, turn on the steam switch, and the hair straightener will emit a prompt sound of no water. Please turn off the hair straightener when filling water.

## FUNCTION DESCRIPTION

- Power-on display is OFF, standby state.
- Short press the power button to turn on, the default temperature of 180 °C water tank lamp, infrared lamp is lit, press the plus button until the highest 230°C; press the minus button to 120°C and then long power button 1S shutdown.
- The gear divisions are:  
Celsius: 120.130.140.150.160.170.180.190.200.210.220.230°C  
Fahrenheit: 250.265.285.300.320.340.355.375.390.410.430.450°F
- The real-time temperature is displayed when the temperature is raised and lowered, and the number of gears is locked after reaching the temperature.
- Press the atomization button to display the spray icon on the digital tube. When the temperature reaches 120C, the hall will sense (the buzzer will sound a prompt) to start the pumping motor. The water-free detection is performed, and the detection time is up to 5S.
- When the water is found, the motor is pressed to turn on. Time 0.3S/5.5S switch proportional cycle operation (can be adjusted when the motor is turned on).
- Each time the button is pressed, the buzzer sounds.
- After power on, it will automatically shut down at 1H.



- Before use , make sure hair is clean and tangle-free.
- Fill the tank to your desired level with water.(Our product will have  $\pm 10^{\circ}\text{C}$  temperature difference)
- Plug in the device and press and hold the on-off switch.
- When the appliance reach to the desire temperature and them the unit will beep when ready to use.
- Run the straightener through the entire length of the hair, without stopping.
- Repeat only twice per section to prevent hair damage.
- The hair straightener (in the clipped state) will automatically generate steam every five seconds.
- The system will automatically start self-test after the device is turned on. If the hair straightener generates a slight vibration after the device is turned on, the system starts to detect it. This is normal.
- When the water tank is empty, turn on the steam switch, and the hair straightener will emit a prompt sound of no water. Please turn off the hair straightener when filling water.

### **CURLING YOUR HAIR**

The steam hair straightener with its rounded edge plates enables you to also create Curls, waves, and lots of other hair styles. You are also able to vary the texture to give a purposefully imperfect look to your hair, one that is messy-cute and untidy.

**STEP1 :** Prep your hair, make sure your hair is clean & tangle-free.

**STEP2 :** Take a small section of hair, and insert it into your Styler. Your sections can vary in size for a more natural, beautifully imperfect look - this up to you. You may also decide where you would like your curl to start and can place your Styler accordingly.

**STEP 3:** Twist your wrist, (the one holding the Styler), about a half-turn, then pull, then twist again, then pull. Keep repeating this until you reach the end of your hair. For a more beach feel, keep the very ends of your hair out of the styler.

**STEP4[ALTERNATIVE]:** Twist and pull just as Step 3 indicated, but for a tighter, more curly curl, twist the mid-shaft to ends around the entire iron mimicking what you would do with a curling iron.

**Tips:** you may want to change the direction of your curls near your face based on personal preference.

### **STRAIGHTENING YOUR HAIR**

**STEP1 :** Prep your hair. Make sure your hair is clean & tangle-free.

**STEP2 :** Depending on your hair type and hair length - this information below is aimed at Medium hair type and shoulder length hair. Take a "2 wide x 1/4" thick section of hair. Move the Styler over the sectioned hair starting at the roots about "1/4" away from the scalp, run the Styler slowly through to the ends of the Hair with light pressure.

**STEP3 :** Repeat this process, section by section until your hair is completely straightened, soft and smooth.

SUGGESTED STYLER TEMPERATURE SETTING	HAIR TYPE
Low 120°C=250°F	Fragile, very fine textured hair
Medium 190°C=370°F	Normal, medium textured hair
High 230°C=450°F	Thick resistance, coarse textured hair

### **CLEANING AND MAINTENANCE**

Ensure the unit is unplugged and cool. To maintain the effectiveness of your product wipe clean after use with a damp cloth. Do not use an abrasive cleaning fluid to clean, as damage will occur.



## SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase.

If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge, provided proof of purchase is provided. This does not enter into an extension of the warranty period.