

- 01 please read the instructions carefully before use 02 please make sure the voltage used is consistent with the voltage
- marked on the nameplate before use 03 please do not wipe the plug with a wet cloth, or insert or pull off
- the plug with wet hands to avoid electric shock
 04 please check whether the power cord plug is fully inserted into
- the socket before startup, for theuncomplete plug-in may cause overheating or fire accidents.

 05 please do not wash or soak the machine base in water in case
- of short circuit or electric shock. 06 please do not damage the power cord or plug in case of
- electric shock, short circuit or fire accidents. The damaged line cords must be replaced by professional personnel from the maintenance department or similar department of the manufacturer to avoid dangers. 07 This product is not suitable for children, mentally or physically
- disabled people or inexperienced people, unless the person is supervised or directed by safety personnel. Children are not allowed to use, touch or play this blender. Do not leave the blender unattended during use.
- 08 when the stirring cup is placed on the host seat, please do not put your hands or any tools, metal or foreign objects into the stirring cup to avoid injury or damage to the product. 09 when using this product, the water or other liquid in the


stirring cup shall not exceed the maximum water level marked.

Heating Speed Blender

10 please keep this product away from heat sources during use, and do not put cloths or other objects under the machine to avoid block age of air inlet and outlet channels, and cause poor heat dissipation, to further result in machine failure. At this time, the temperature protector in the motor will be started. This is not a machine fail ure. Please pull off the power cord and use it again after cooling.

- 11 please be careful when taking out the cutting blade, emptying the mixing basin and cleaning the machine.
- 2 please turn off the power switch and cut off the power when r eplacing parts or touching moving parts.
- 13 please pull off the plug during unuse, and proceed cleaning. 14 The blade of the product is very sharp. Please do not touch it with your hands, and be careful g cleaning. Please do not remove blades by yourself or touch any moving parts. durin
- 5 when the blender is working, please be careful of hot water from the spout after liquid boiling in the cup, and do not open the lid. 16 this product uses a high-speed motor. The intermittent fast and slow voice during shattering is normal.
- 7 please do not carry out operations not mentioned in the specifi cation, or disassemble, repair or modify this product by yourse If in case of self-injury and product damage. Please contact our company or professional technicians for repair in case of any product issues.

Product structure diagram

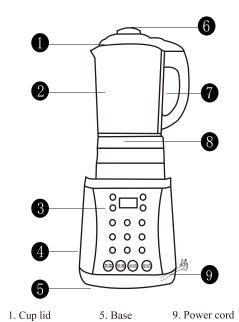

 Cup lid 5. Base Steam lid 2. Stirring cup


3. Operation panel 7. Handle 4. Host Cup base

Notes: the above picture is only for reference. Please be subject to t he physical product in terms of appearance and color.

Heating Speed Blender

Circuit diagram

This diagram is only for refence and subject to changes with out prior notice. Please be subject to the physical product. The final interpretation right belongs to our company.

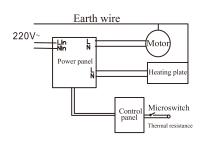

Environmental claims

- 1. This product meets requirements of Measures for the Administration of the Restricted Use of the Hazardous Substances Contained in Electrical and Electronic Products.
- 2. The harmful substances leakage and precipitation etc. affecting consumer health will not be occurred in the normal use process within the environment-friendly use period. Please rest assured during use.
- 3. The environment-friendly use period of products in our company is ten years, which is only valid with the product used under normal conditions as specified in the specification.

Part name/harmful substance	Pb	Hg	Cd	Cr VI	PBB	PBDE
Plastic shell	0	0	0	0	0	0
Connecting wire	0	0	0	0	0	0
Rubber	0	0	0	0	0	0
Screw	0	0	0	0	0	0
Motor	X	0	0	0	0	0
Metal blade	0	0	0	0	0	0
Motor switch gear	0	0	0	0	0	0
Glass cup	0	0	0	0	0	0


This table is formulated in accordance with regulations of SJ/T11364.

0 indicates that the content of toxic and harmful substances in all homogeneous materials of this part is below the limit requirements specified in GB/T26572. indicates that the content of toxic and harmful substances in some homogeneous material of the

part exceeds the limit requirements specified in GB/T26572. (Notes: among above parts marked "X", some are caused by limits of technical level in the currer industry that cannot be replaced or reduced temporarily.

Heating Speed Blender


INSTRUCTION MANUAL

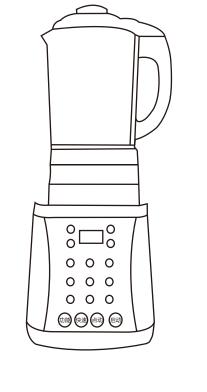

Reed Instruction manual carefully before use

Heating Speed Blender

Product function description

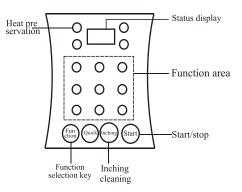

1. Function area

Heating function: fragrant soybean milk, rice paste, health rice paste, corn juice and baby porridge Non-heating function: fruit and vegetable juice, sauce, milk-shake and smoothie.

Heating without wall-breaking function: rice paste, heath tea, steaming and boiling.

2. Status display

Show temperature, such as 25 °C, time 16:10 and operating status. The status bar will change with the working process of menu function. --- represents selection functions, such as standby etc. E2 represents no starting due to uncapped glass cup. P1 represents gear 1. END represents end.

3. "Function selection" key

Press startup and function keys (press the function key once, the indicator light will skip one menu press once for one skip, press twice for two skips, and so on. You can press the function key to let press once to one appropriate the indicator light stop the required menu). Quickly press the startup key again. For example, if you want to rice paste menu: press the startup key, press the function key twice, and quickly press the startup key again. If the screen shows ----, please reset it again quickly.

4. "Start/stop" key This key is functioned as "startup-on-off" of power supply.

Confirmation: the display screen and all keys light up after connecting power. You can press the "function selection" key to choose the menu, and then press the "start/stop" key to start work; for example, press the "function selection" key, the "soybean milk" function in the display screen starts

flickering, and then press the "start/stop" key, the machine starts with "soybean milk". On: when the display screen and all keys light up, if no more operations, please press the "onoff/confirm" key to turn off all backlights. The machine has been shut down and return to the power standby state with only "on-ff/confirm" key flickering. (The machine will be automatically shut down after 15 seconds to return to the power standby state without any operation

Off: all backlights are on after pressing the "On-off/confirm" key in the standby state, that is, you can proceed the next function operation in the standby state.

5. "+/_" key

This key is used to adjust speed and appoint time (+/). Press the "+/" key in the standby state to adjust your needed speed, and then press the "on-off/confirm" key to start works. You can also press the "+/_" key to adjust speed in the working process. This function is only suitable for wall-breaking shattering and stirring. (You can press the "cancel" key to stop working after obtaining your satisfied state. Please note automatic stop is not available.

Heating Speed Blender

6. "Reservation" key

Press the "reservation" key after startup, press the "+" key to add time, or press the " "key to reduce time. Press once to add or reduce 30 min (the longest time: 12 hours; the shortest time: 30 minutes) The status bar will show the set time. Then, press the "function selection" key to choose the servation required; finally, press the "on-off/confirm" key. (The selected function and "reservation" key flicker at the same time, and the bar status starts countdown, which means to start with the

7. "Inching cleaning" key

his key is used for cleaning and meat mincing. Press this key after startup to activate the stirring nction, and release the key to stop stirring.

reservation method: reservation:

press the "startup" and "function" keys, press the 'reservation" and "+" keys, and finally press the "startup" key; or press the "startup" and

"reservation" keys, then press the "+ -" and "function" keys, and finally press the "startup" key.

heat preservation method: press the 'startup" and "heat preservation" keys,

and quicky press the "startup" key.

cleaning method: press the "startup" key, and press the "inching cleaning" key for 15 seconds(holding) (it will stop after releasing the finger). For super cleaning, you can add vinegar into the cup for 1-2 hours of soaking, and then press the "inching cleaning".



meat mincing notice: press the "function" key to select the mincing function with maximum 250g pork meat per time. The effect will be better after adding one egg or household cooking oil.

Heating Speed Blender

Product Function Description

L	Function	Food Component	Operating Step	Cautions
	Soybean milk Put 50-70g beans into stirring cup, some water, maximum level doese exceed the drink limit.		After startup, press the "function selection" key to soybean milk function Press the "start/stop" key, the machine completes the process automatically. The buzzer sounds continuously. The process is completed.	The excessive water or drice beans may lead to overflow/paste and loss of taste. Please do not open the lid to ad- materials during stirring in case or local burns.
	Put no more than 80g rice, pearl barley and red dates etc., then add some water. The maximum water level does not exceed the hot drink limit.		After startup, press the "function selection" key to fish soup function. Press the "starfstop" key, the machine completes the process automatically. The buzzer sounds continuously. The process is completed	beans may lead to overflow/paste and loss of taste. 2. Please do not open the lid to add materials during stirring in case of
	Put 200g materials (such as crucian and lean meat etc.) that shall be cut into cubes not over 3 cm, then add some water. The maximum water level does not it drink limit.		After startup, press the "function Press the "start/stop" key, the machine completes the process automatically. The buzzers osunds continuously. The process is completed	
	Rice paste	Put 800ml water and half a cup of rice, cover the lid, press rice paste function.	After startup, press the "function selection" key to fish soup function. Press the "start/stop" key, the machine completes the process automatically. The buzzer sounds continuously. The process is completed	The excessive water or dried beans may lead to overflow/paste and loss of taste. Please do not open the lid to add materials during stirring in case of local burns.
-	Put no more than 300g fruits that shall be cut into cubes not over 3cm, add some and fruit juice pilease do not exceed the maximum water line.		After startup, press the "function Press the "startistop" key, the machine completes the process automatically. The buzzer sounds continuously. The process is completed	
-	Steaming and boiling	Put some materials in the steamer, place it on the cup and cover the lid.	After startup, press the "function selection" key to fish soup function. Press the "start/stop" key, the machine completes the process automatically. The buzzer sounds continuously. The process is completed	I reade do not add excessive water of
Γ			1. After startup, press the "function	

o not put too

 
Put half water (cleaning agent is not allowed)

 
1. Press the "cleaning" key for 1-seconds after startup.
2. Repeated operation for two or three the control of the cleaning in the cl

s to complete the cle

Heating Speed Blender

Maintenance







A. Wrong method B. Wrong method C. Correct method

01 Cut off the power before cleaning 02 Please pay attention to sharp blades during cleaning the large cup to avoid scratches 03 Do not wipe it with chemicals, such as alcohol etc.

04 Do not flush the large cup with water directly to avoid water entering inside.
05 In case of residues at the bottom of cup and barrel that are difficult to clean, soak it in warm water, then whipe it in the same direction with a sponge, and rinse it with the other product in high places or under pressure. Mealiwath. Weep it away from 07 Please clean the large cun after cooling to prevent scald injury due to residual heat. 08 After cleaning, please wipe the host and the cup lid with a dry cloth, and put the cup lid upside

Simple troubleshooting

down in a cool place for drying.

Failure Code	Failure Cause	Solution			
Power The cup lid is not failure installed in place		Please check whether the cup lid is installed in place. If the cup lid is installed in place, but it fails to resume work. The repairing is recommended.			
E2	The glass cup lid is uncapped, please first cover the lid and then start the blender. A functions are prohibited with the uncapped cup lid.				
E1	Open circuit of socket induction wire	Please check whether the cup body is installed in place. If the cup body is installed in place, but it fails to resume work. The repairing is recommended.			
E3	Overheating protection of cup body	Cool the cup body to room temperature. If it fails to resume work The repairing is recommended.			
	The voltage is not stable	Recommendation: stabilize voltage			
Materials cannot be	Too few or many materials	Recommendation: add materials as required			
crushed.	Put too little water	The water cannot be lower than the minimum water line or mor than the maximum water line.			
		Check whether the power cord is well connected.			
/	Utensil does not work	Check whether the switch is in the open state			
	Too much operating	Shut down the machine, remove the regulation cup, and rotate the mushroom head for resetting			
/	noise	Shut down the machine, and check whether the machine is placed on a solid panel.			
/	Blades do not rotate	Shut down the machine, and check whether materials in the regulation cup are excessive or the bottom materials are too hard Shut down the machine, and check whether the mushroom head or the blade sets are detached.			
1	Big swinging of the	Shut down the machine, remove the regulation cup, and rotate the mushroom head for resetting. Shut down the machine, and check whether materials in the regulation cup are excessive or the bottom materials are too hard.			
,	Water leakage of regulation cup	Shut down the machine, and check whether the screw at th bottom of the regulation cup is loosened. Shut down the machine, and check whether the seal ring on the			
	-	blade sets of the regulation is detached or damaged.			

Product technical parameters

Product Parameters			
Product name	Heating Speed Blender		
Rated voltage	220V~		
Rated frequency	50Hz		
Electric power	1100W		
Heating power	800W		
Capacity	1750ml		
Implemented by	GB4706.1-2005, GB4706.19- 2008, GB4706. 30-2008		