

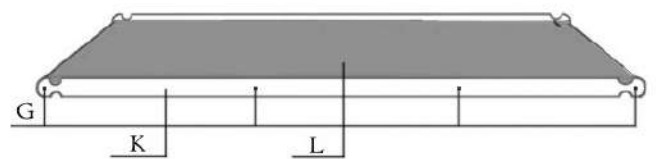



# Gebruikershandleiding klimdriehoek met glijbaan

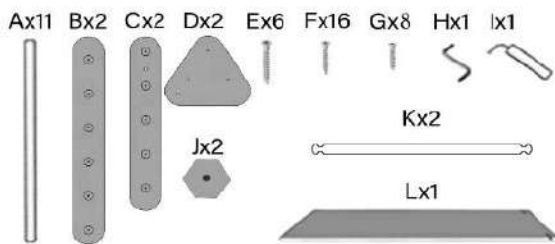


1- ( Only for TM01) Using the screws (G) and hexagon (H), fix the side panels (K) as shown in the drawing

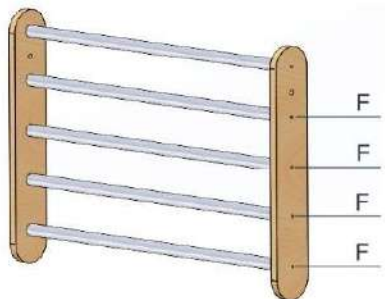

2- Attach (A) bars to (C) legs using F screws. Do not use the top drilled hole, leave it empty.

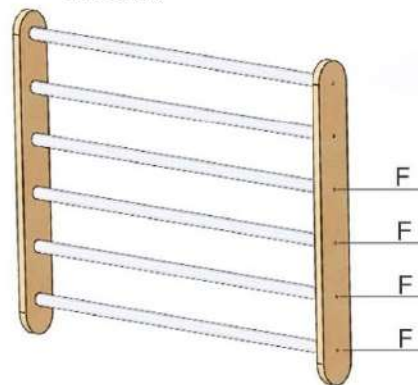

3- Attach (A) bars to (B) legs using F screws. Do not use two top drilled holes, leave them empty.

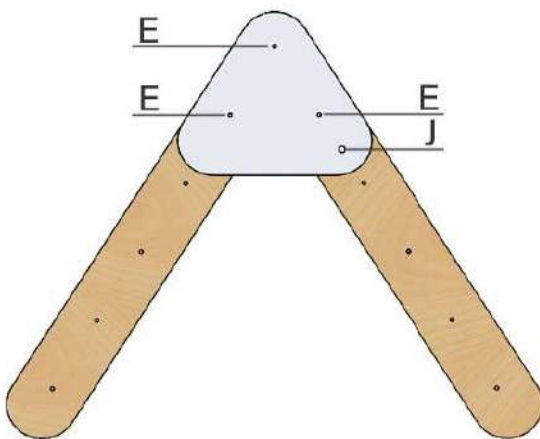

4- Using (E) screws, connect (B) and (C) legs with (D) triangles. Be sure that (J) holes are opposite each other. Install (J) hexagons. After use, uninstall (J) hexagons and fold triangle legs together for storage.

## WARNING!

Only for domestic use. Do not leave children unattended. Use the toy only on a straight floor. Max user weight - 30KG

## Cleaning and usage

Use only a dry or wet cotton cloth for cleaning. The use of chemicals and abrasive cleaners is prohibited.