


1.Size




220mm (8.661 in)

2.Operation

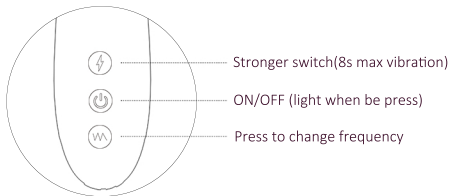

How to use :

- Long press(3s) to ture on,the red light is always on
- Press the to change 7 vibration modes
- Press the to max vibrating , Lasts for 8 seconds, then automatically stops to normal power
- Press the to turn off

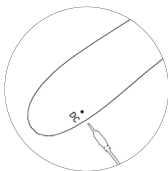

USB Rechargeable

When the battery is charged for 1.5-2 hours to 100%, the red light does not stop flashing



4.Product Cleaning

- Clean:please clean product with warm water or antibacterial soap
- Wipe: Dry the product with clean cloth or towel
- Store:Keep the product in a cool,dry,clean place
- Attention:Never clean this product with organic cleaner containing alcohol gasoline or acetone, Avoid direct sunlight

5.Safety

- Do not use it at temperature over 167°F/75°C
- Stop using it when any discomfort occurs
- It is recommended to use it with water-based lubricant
- Do not use it if you find the product unsmooth or damaged
- Keep out of reach or children

Darom! Model D333 Pink Vibrator.
Darom! is an Oranagemix brand.
Nerhoven 12, 5126 TB, Gilze
The Netherlands

