# HYGIENIC CLIPPER FOR NOSE & HAIRTRIMMER & Beard



Instruction Manual for 4-in-1 Trimmer Set







# Instruction Manual for 4-in-1 Trimmer Set

Read through this entire instruction manual before using the 4-in-1 Trimmer Set. We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials for 1 year from the date of purchase.

# HOW TO USE

# CHARGING

- Charging
- 2. Rating Voltage: DC5V 1A
- 3. Close power switch. Please insert the plug into the power socket. The indicator is red when it is

#### INSTRUCTIONS FOR HEAD REPLACEMENTS

To change attachments, hold the trimmer body with the switch side facing towards you. Turn the attachment and pull off. Position the replacement attachment at the top of the trimmer body, then push down and attach.

#### USING THE TRIMMER

Remove blade cap. Slide the switch to the "ON" position. Carefully place blade of trimmer to your nostril to cut nose hairs.

Use the same procedure for trimming ear, sideburn and eyebrow hairs and beard.

# (A) NOSE/EAR TRIMMER

- The Nose Trimmer is designed to remove unwanted hair from the nose or ear areas.
- 2. Gently approach the area to be trimmed. Never force the Nose Trimmer into nose or ear cavities as this can result in injury.
- If you experience any pain or discomfort when using this product STOP using it immediately.
- Always clean the trimmer after use and use the cap to protect the Nose Trimmer head.

#### (B) EYEBROW TRIMMER

You can use this attachment for trimming unwanted eyebrow hair, fine facial and ear hair, or any stray body hairs

# (C) SIDEBURN TRIMMER

You can use this attachment for smaller areas such as hairlines and sideburns. Hold the trimmer so the shaver screen gently touches your skin. Avoid holding the trimmer at an angle. This will distort the screen and may cause some skin irritation.

### (D) BEARD TRIMMER

You can use this attachment for shave the beard slowly.

# **CLEANING & MAINTENANCE**

Clean your personal trimmer regularly. Be sure switch is turned "OFF" before cleaning.

#### CLEANING WITH BRUSH

Never expose trimmer body to water. To maintain lubrication, use the enclosed brush to clean the unit. Thoroughly brush and blow out hair dippings from the power handle.

#### CLEANING WITH WATER

Your trimmer's attachments have rust-resistant, stainless steel cutting blades that permit the cutting attachments to be rinsed under running water if you choose. Do not wash attachments when attached to trimmer. Always keep blade area pointed downward when cleaning. Only after unit has dried completely should the attachment be used.

- \* Do not use harsh or corrosive cleaners on the unit or its attachments.
- \* Do not apply pressure or hard objects to attachments.