 


# PROSSISAN

## INSTRUCTION MANUAL

**T7 PRO**

### VACUUM CLEANER

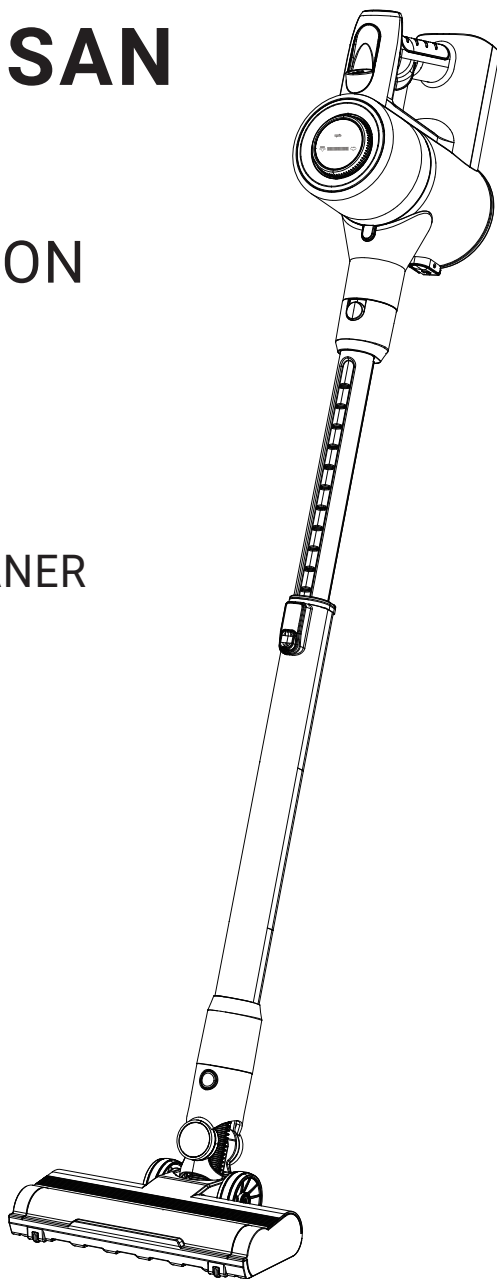

24KPA POWERFUL SUCTION



# CATALOGS

---

SAFETY TRIAL GUIDE .....	01
SAFETY INSTRUCTION .....	04
PRODUCT INSTRUCTIONS .....	05
ASSEMBLY OF VACUUM CLEANERS .....	07
USE OF VACUUM CLEANERS .....	08
PRODUCT INSTRUCTIONS .....	09
DISMANTLE INSTRUCTIONS .....	10
SAFETY INSTRUCTION .....	13
A GUIDE TO FINDING AND REPAIRING FAULTS .....	16
PRODUCT PARAMETERS .....	17

# IMPORTANT SAFETY INSTRUCTIONS

---

## IMPORTANT SAFETY INSTRUCTIONS

**BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE APPLIANCE**

When using an electrical appliance, basic precautions should always be followed, including the following:



### WARNING

These warnings apply to the appliance, and also where applicable, to all tools accessories, chargers or mains adapters.

### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY :

1. This FIGO appliance can be used by children aged from 10 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance should not be performed by children without supervision.
2. **Do not** allow to be used as a toy.  
Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the appliance.
3. Use **only** as described in this FIGO Operating Manual. **Do not** carry out any maintenance other than that shown in this manual, or advised by the FIGO Support.
4. Suitable for dry locations **ONLY**. **Do not** use outdoors or on wet surfaces.
5. **Do not** handle any part of the plug or appliance with wet hands.
6. **Do not** use with a damaged cable or plug.  
If the supply cable is damaged it must be replaced by FIGO, its service agent or similarly qualified person in order to avoid a hazard.



# IMPORTANT SAFETY INSTRUCTIONS

---

7. If the appliance is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, **do not** use and contact the FIGO Support.
8. Contact the FIGO Support when service or repair is required.  
**Do not** disassemble the appliance as incorrect reassembly may result in an electric shock or fire.
9. **Do not** stretch the cable or place the cable under strain.  
Keep the cable away from heated surfaces. **Do not** close a door on the cable, or pull the cable around sharp edges or corners. Arrange the cable away from traffic areas and where it will not be stepped on or tripped over. **Do not** run over the cable.
10. **Do not** unplug by pulling on the cable. To unplug, grasp the plug, not the cable. The use of an extension cable is not recommended.
11. **Do not** use to pick up water.
12. **Do not** use to pick up flammable or combustible liquids, such as petrol, or use in areas where they or their vapours may be present.
13. **Do not** pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
14. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts, such as the brush bar. **Do not** point the hose, wand or tools at your eyes or ears or put them in your mouth.
15. **Do not** put any object into openings. **Do not** use with any opening blocked; keep free of dust, lint, hair and anything that may reduce airflow.
16. Use only FIGO recommended accessories and replacement parts.
17. **Do not** use without the clear bin and filter in place.
18. Unplug when not in use for extended periods and before maintenance or servicing.
19. Use extra care when cleaning on stairs.
20. **Do not** install, charge or use this appliance outdoors, in a bathroom or within 3 metres (10 feet) of a pool. **Do not** use on wet surfaces and do not expose to moisture, rain or snow.
21. Use **only** FIGO chargers for charging this FIGO appliance.  
Use **only** FIGO batteries: other types of batteries may burst, causing injury to persons and damage.

# IMPORTANT SAFETY INSTRUCTIONS

---

 
22. FIRE WARNING-**Do not** place this product on or near a cooker or any other hot surface and **do not** incinerate this appliance even if it is severely damaged. The battery might catch fire or explode.
23. Always turn 'OFF' the appliance before connecting or disconnecting the motorised brush bar.
24. FIRE WARNING-**Do not** apply any fragrance or scented product to the filter(s) of this appliance. The chemicals in such products are known to be flammable and can cause the appliance to catch fire.

## READ AND SAVE THESE INSTRUCTIONS


# SAFETY INSTRUCTION

---


READ AND SAVE THESE INSTRUCTIONS  
THIS MACHINE IS INTENDED FOR HOUSEHOLD  
USE ONLY.

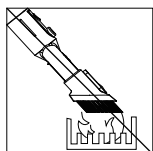


**Do not** use  
near open  
flames.

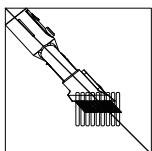 

 
**Do not**  
store near  
heat  
sources.

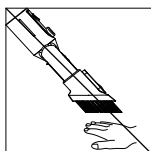

 **Do not** put  
hands near  
the brush  
bar when  
the machine  
is in use.

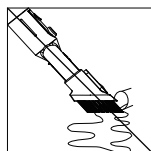

 **Do not** pick  
up water or  
liquids.

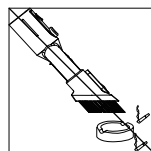

**Do not** pick  
up burning  
objects.


USING YOUR MACHINE  
PLEASE READ THE "SAFETY INSTRUCTIONS"  
IN THIS OPERATING  
MANUAL BEFORE PROCEEDING OPERATION.

- **Do not** use outdoors or on wet surfaces or to vacuum water or other liquids-electric shock could occur.
- Ensure the machine remains upright in use. Dirt and debris may be released if it is turned upside down.
- **Do not** operate while checking for blockages as doing so could result in personal injury.
- For domestic indoor and car use only. **Do not** use it while the car is in motion or while driving.
- Use appropriate mounting hardware for your wall type and ensure that the docking station is mounted securely. Ensure no pipe work (gas water, air) or electrical cables, wires or ductwork are located directly behind the mounting area.

# PRODUCT INSTRUCTIONS

 ---


Product parts introduction:

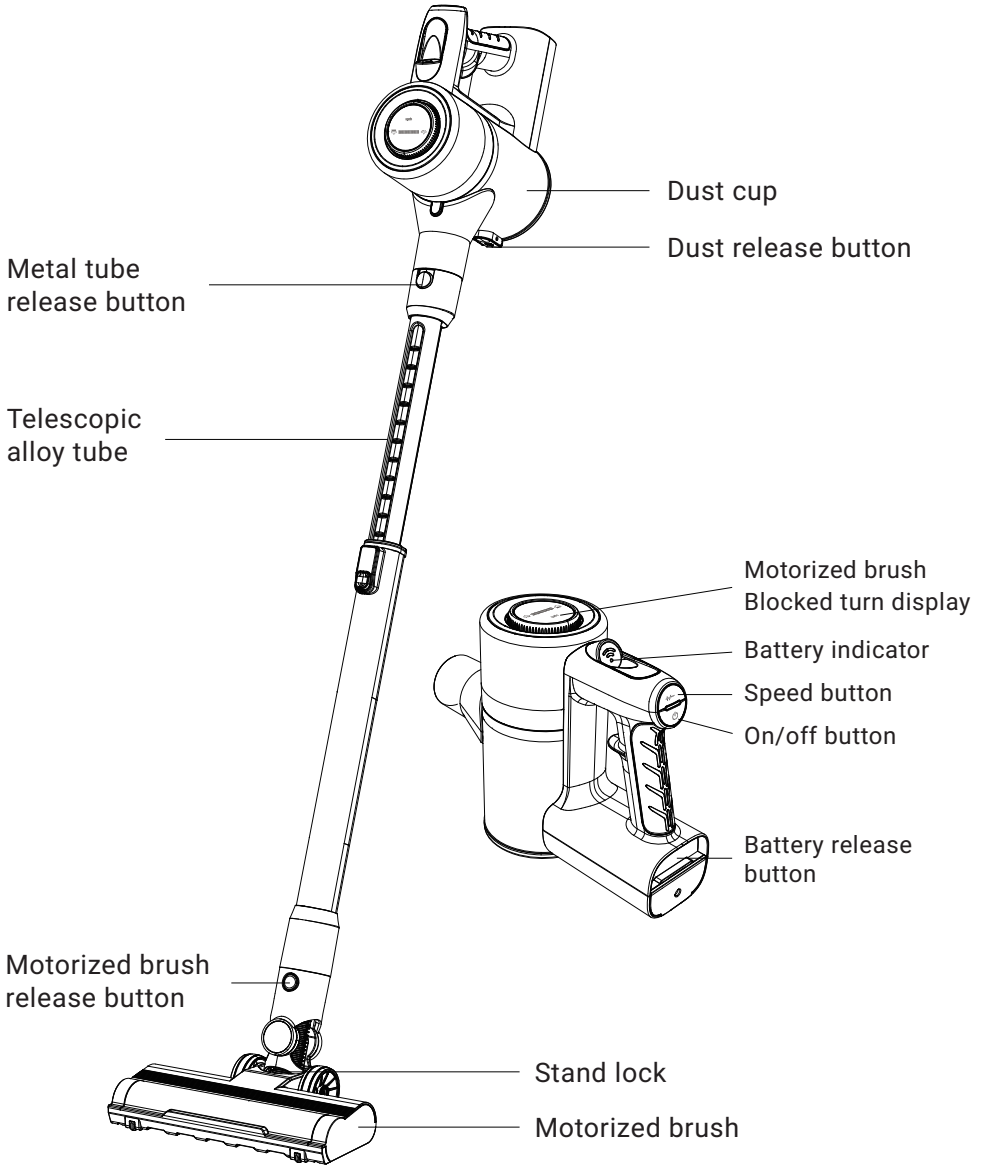


# PRODUCT INSTRUCTIONS

---

 
T7 PRO Accessories:




Crevice Nozzle

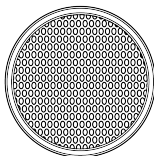 


HEPA Filter

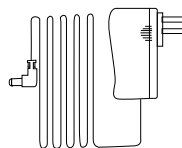 


Adapter

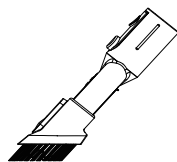 


Dust Brush

 

Wall Mount

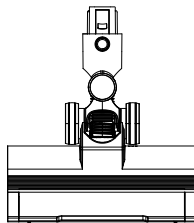 

Motorized brush

 


Dust pipe

# ASSEMBLY OF VACUUM CLEANERS

 ---


## 1.Installation of suction nozzles

Connect the 2-in-1 brush to the host, As shown, Can clean the desktop, crevices, sofas and other places.

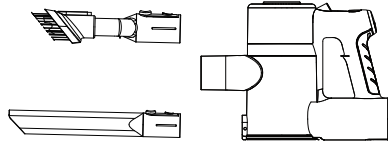


## 2.Extended nozzle

 Attaching the long pole to the mainframe, Then connect dust brush or crevice nozzle, As shown, It can clean high places, curtains, air conditioning vents, etc.

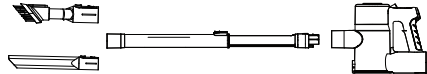


## 3.Installation of telescopic alloy tube and motorized brush

 
Connect one end of the telescopic alloy tube the main unit (After hearing the click sound, the installation is successful) , Then install the motorized brush on the other end, As shown, Connected and ready to clean the floor, Replace the motorized brush with another brush head, Can clean higher places.

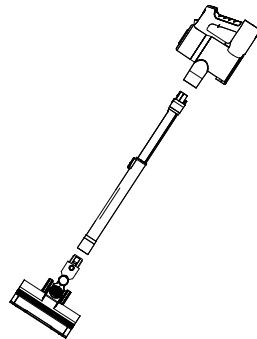

# USE OF VACUUM CLEANERS


## Use of vacuum cleaner

 - ① Press the switch  Then the machine starts working, Press again to stop working and shut down the machine.
- ② Standard gear after power on, Click +/-, Switch to midrange, Press again to switch to the powerful gear, Press again to switch back to standard.

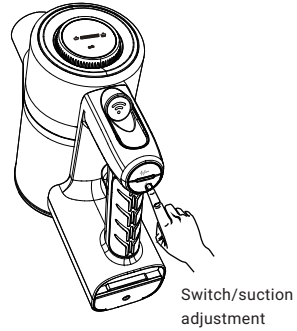

## Charging mode:

 - ① Plug one end of the black square of the charger into the socket at home.
- ② Insert the other cylindrical end of the charger into the charging hole on the lower part of the handheld grip.
- ③ Indicator light on top of the machine, Blinking means charging is in progress, All the long bright said full.

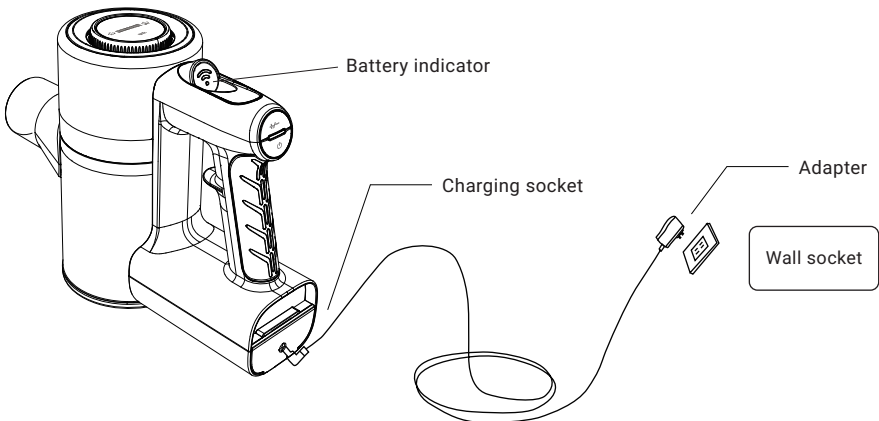


# PRODUCT INSTRUCTIONS

---

## Storage method

 1. Pull the long rod down to the apex, slide the machine into the wall mount from above, and stand the machine against the wall. Use a pen to mark out the screw holes at both ends of the wall mount in the wall position.
2. Use the tool to punch the marked points, put in the expansion screws, and then use the screws to wall mount the seat fixed.
3. When storing, Machine slides into wall mount from top to bottom, When Removing, Just lift the machine, Two-in-one brush placed on the top left of the wall mount,Place Crevice Nozzle at the bottom left.

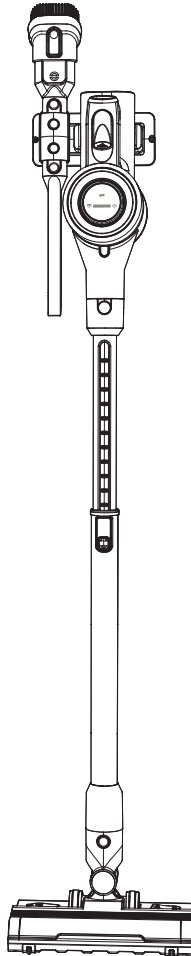




# DISMANTLE INSTRUCTIONS


---

How to empty the dust cup

 - ① When cleaning, you need to turn off the machine first, Press the dust release button.

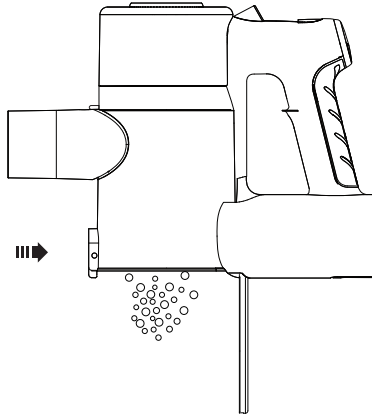

 
- ② Hold the handle part of the handheld with your right hand, Hold the vacuum port with your left hand, Thumb presses the top red colored button without moving it, Rotate about 10 degrees clockwise, Then move down and out of the dust cup.

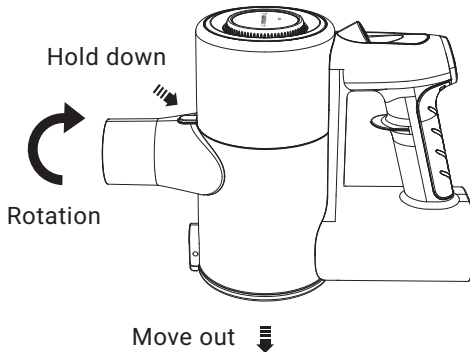


# DISMANTLE INSTRUCTIONS

---

 - ③ Hold the handle part of the handheld machine with your right hand, hold the fine steel screen with your left hand and rotate it clockwise by about 10°. Then move the steel screen downward.

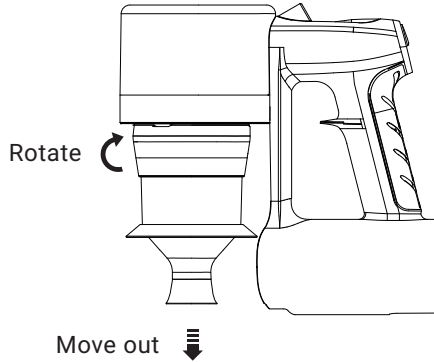

 - ④ Cleaning filters and fine steel filters.

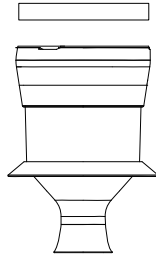

## **Attention**

Before using the vacuum cleaner, Make sure all filters are installed in the correct position.

 
Make sure the washed filters, dust cups, brushes and other parts are completely dry before use, Avoid burning the machine due to water entering into the motor.

# DISMANTLE INSTRUCTIONS


---

## Removal method of roller brush


① Turn off the machine and flip the floor brush over.

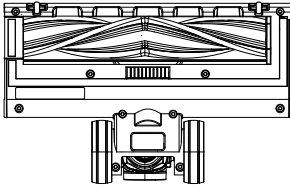

 
② Slide the slide buckle on the side of the floor brush, pick down and The rolling brush unlocks and one end pops up.

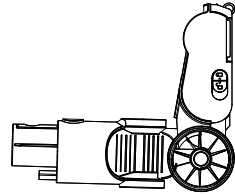

 ③ Remove the roller brush by turning the pop-up end upward, Clean the roller brush.

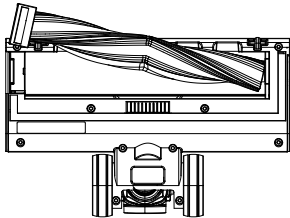

 ④ According to the direction of removing the roller brush, one end is inserted into the floor brush and press one end down with a click, Fasten the roller brush.

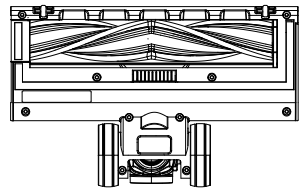

# SAFETY INSTRUCTION

---

## CARPETS OR HARD FLOORS

- Before vacuuming your flooring, rugs and carpets, check the manufacturer's recommended cleaning instructions.
- Before vacuuming highly polished floors, such as wood or linoleum, first check that the underside of the floor tool and its brushes are free from foreign objects that could cause marking.

## MACHINE MAINTENANCE

- **Do not** carry out any maintenance or repair work other than that shown and described in this Operating Manual.
- Store the machine indoors. **Do not** use or store it below 37.4°F (3°C). Ensure the machine is at room temperature before operating.
- Clean the machine **only** with a dry cloth. **Do not** use any lubricants, cleaning agents, polishes or air fresheners on any part of the machine.

## VACUUMING

- **Do not** use without the dust bin and filters in place.
- Fine dirt such as plaster dust or flour should only be vacuumed in very small amounts.
- **Do not** use the machine to pick up sharp hard objects, small toys, pins, paperclips, etc. They may damage the machine.
- When vacuuming, certain carpets may generate small static charges in the dust bin or wand. These are harmless and won't cause any electrical hazards. To minimize any effect from this, **do not** put your hand or insert any object into the dust bin unless you have first emptied it. Clean the dust bin with a damp cloth only.

# SAFETY INSTRUCTION

---

- Use extra care when cleaning on stairs.
- **Do not** rest the machine on chairs, tables, etc.
- **Do not** press down on the nozzle with excessive force when using the machine as this may cause damage.
- **Do not** leave the cleaner head in one place on delicate floors.
- On waxed floors the movement of the cleaner head may create an uneven luster. If this happens, wipe with a damp cloth, polish the area with wax, and wait for it to dry.

## EMPTYING THE DUST BIN

- To make emptying the dust bin easier, it is advisable to remove the wand and floor tool.
- To minimize dust/allergen contact when emptying, encase the dust bin tightly in a plastic bag to empty.
- Remove the dust bin carefully from the bag.
- Seal the bag tightly, dispose as normal.

## CLEANING THE DUST BIN

- Ensure the machine is disconnected from the charger before removing the dust bin.
- Remove the wand and floor tool.
- Clean the dust bin with a damp cloth only.
- **Do not** use detergents, polishes or air fresheners to clean the dust bin.
- **Do not** put the dust bin in a dishwasher.
- Ensure the dust bin is completely dry before replacing.
- To replace the dust bin, align the tabs on the dust bin with the grooves on the main body and slide upwards into place until the catch clicks.

## WASHABLE PARTS

- Your appliance has washable parts, which require regular cleaning. Follow the instructions below.

# SAFETY INSTRUCTION

---

## WASHING THE FILTERS

- Wash the filters at least once a month.
- The filter unit may require more frequent washing if vacuuming fine dust or frequent used.

## WASHING FILTER

- Ensure the machine is disconnected from the charger before removing the filter.
- Check and wash the filter regularly according to instructions to maintain performance.
- The filter may require more frequent washing if vacuuming fine dust.
- To remove the filter, lift it out of the top of the machine.
- Wash the filter with cold water only.
- Run water over the outside of the filter until the water runs clear.
- Squeeze and twist with both hands to make sure the excess water is removed.
- Lay the filter on its side to dry. Leave to dry completely for a minimum of 24 hours.
- **Do not** put the filter in a dishwasher, washing machine, tumble dryer, oven, microwave or near an open flame.
- To refit, place the dry filter back into the top of the machine. Make sure it is seated properly.

## CHARGING AND STORING

- **Do not** charge the machine and then move it to an area with a temperature below 37.4°F (3°C) for storage purposes.
- To help prolong battery life, avoid recharging immediately after a full discharge. Allow to cool for a few minutes.
- Avoid using the machine with the battery flush to a surface. This will help it run cooler and prolong battery run time and life.

# A GUIDE TO FINDING AND REPAIRING FAULTS

---

Question	Possible causes	Solvable Solutions
Machine does not work	Battery may be dead	Check if the battery has power or replace the battery
The machine can not absorb dust or suction power is very weak	The dust cup may be full of dust	Pour the dust out of the dust cup ( Please see page 10)
	Low battery power	Connect the charger
Machine leaks dust	The dust cup may be full of dust	Emptying the dust cup
	The bottom of the dust cup may not be assembled properly	Check whether the bottom latch of the dust cup is well fastened
No dust absorption after machine grounding brush	The dust cup may be full of dust	Emptying the dust cup, Cleaning of dust cups and filters, Check the suction port, Whether there are foreign objects blocking the aluminum tube and other parts
	Rollers are tangled	Clean the roller brush according to page 12

# PRODUCT PARAMETERS

---

<b>Projects</b>	<b>Parameters</b>
Handheld size (without aluminum tube)	About:290*112*215mm
Handheld host net weight	About 1.6kg
Number of battery cells	7 sections
Li-ion battery capacity	2200mAh
Rated voltage	25.9V
Power Rating	250W
Time of use	Low grade: about 50 minutes or so Mid grade: about 20 minutes or so High grade: about 15 minutes or so
Charging time	About 4 hours or so
Dust cup capacity	500ML

- The above data is from our laboratory, Actual use varies depending on the use environment, Please refer to the actual product.
- Due to the need for continuous product improvement, This information product is subject to the actual product, We reserve the right to update our products.





# **WE'RE HERE TO HELP!**

---

If you have any questions about our products, please contact our customer support team.

# **PROSSISAN**