

## Major Function

- It supports the music format of MP3/WMA
- Built-in rechargeable battery

## Buttons



## KEYS OPERATION:

1. Play/Pause: Short press Play/Pause music ; Long press Power on/off
2. VOLUME: Press VOL to access volume menus.
3. PREV: Last item(Long press stop search close bluetooth)
4. NEXT: Next item(Long press search the Bluetooth)
5. MODE: Short press the menu to confirm ; Long press return.

6. Power on/off: Connect or disconnect the power supply.

## Data connection

Through the USB cable connected to the computer, the information in hard copy need to MP4.

## Charging

- 1、 Use the computer USB charging  
USB cable can be used for data transmission, charging at the same time。
- 2、 Use the charger (No configuration)  
Input: 110v~240v 50/60HZ 100mA  
Output: DC5.0V-5.5V 500mA(USB)  
Interface standards: MINI USB

## Instructions

### Open the player

- 1、 Open the power supply;
- 2、 Long press the play/pause key 3-5s open the player.

### The main interface

Feature selection: Short press on the prev /next can browse each option.

The Play/Pause to confirm: Short press the Play/Pause to confirm.

## MUSIC

1. Play/Pause music:  
Short press "PLAY/PAUSE" key to play/ pause music
2. Select music:  
PRE: Short press PREV key to select previous track  
NEXT: Short press NEXT key to select next track
3. Control volume:

Press VOL to access volume menus. Press Previous to increase volume, press Next to decrease.

4.Return

Long press the menu to back at the main interface

### **Movie**

1. Play/Pause movie:

Short press "PLAY/PAUSE" key to play/ pause movie

2. Select movie:

PRE: Short press PREV key to select previous track

NEXT: Short press NEXT key to select next track

3. Control volume:

Press VOL to access volume menus. Press Previous to increase volume, press Next to decrease.

4.Return

Long press the menu to back at the main interface

### **Photo**

PRE: Short press PREV key to select previous track

NEXT: Short press NEXT key to select next track

Long press the menu to back at the main interface

### **Rec**

Short press "PLAY/PAUSE" key to play/ pause the recording.

Long press the menu to save the recording and return to main interface.

### **E-book**

PRE: Short press PREV key to select previous track

NEXT: Short press NEXT key to select next track

Long press the menu to back at the main interface

### **Setting**

PRE: Short press PREV key to select previous track

NEXT: Short press NEXT key to select next track

Short press menu key to Confirm the operation.

Long press the menu to back at the main interface