

Specifications

- Equipped with four high precision strain gauge sensors.
- Capacity 180kg
- Scale sensitivity 100 g
- LCD Display
- Unit : kg / lb
- Automatic power off
- Low Battery / Overload Indication
- Power : 1×CR2032 Lithium battery (not included)

Operation

1. Switch on the power button to left or right to change the unit (the switch button is on the back of scale inside the battery slot).
2. Put the scale on a hard and flat surface (avoid carpet or soft surface).
3. Step on the scale steadily without moving your body and wait till the weight display on LCD. The scale will switch off automatically after 8 seconds when there is no operation.
4. Overload indicator
When the scale is over loaded (over 180 kg),
"Err" will appear on the LCD.

IMPORTANT SAFETY NOTICE

- 1) Carefully unpack the product and take care not to throw away any part of the packaging material before you have found all parts of the product.
- 2) Under no circumstances should you repair or alter the product by yourself. Entrust all repairs and adjustments to a specialized company/service. Failure to do so may void the warranty.
- 3) Never use this product if you have wet feet. Danger of injuries from slipping.
- 4) Store and use the product away from the flammable or volatile materials and substances.
- 5) Do not expose the product to extreme heat, direct sunlight or excessive humidity and do not place in an overly dusty environment.
- 6) Do not place the product near heaters, open fire or other sources of heat.
- 7) This product is designed for household use. Do not use it in industrial surroundings or outdoors!
- 8) Do not use this product for other purposes than those intended.
- 9) Do not spray the product with water or any other liquid. Do not pour water or any other liquids into the product. Do not submerge the product in water or any other liquid.
- 10) Never jump on the scale.
- 11) Do not use rechargeable batteries in this product.
- 12) This scale is designed only for the weighing of people.
- 13) If you will not be using the product for an extended period of time, remove the batteries. Otherwise they may leak inside the product and cause irreparable damage.
- 14) The manufacturer takes no responsibility for damages caused by the incorrect use of the appliance and its accessories (injuries, burns, scalding, fire, food spoilage, etc.)