

 
## DISPLAY CLEANSING BRUSH INSTRUMENT

Operating Instruction



- ★ Dear user, please read the instruction carefully before using
- ★ Thank you for your purchase and wish you a happy use
- ★ Please keep the instruction manual well!

## Product Introduction

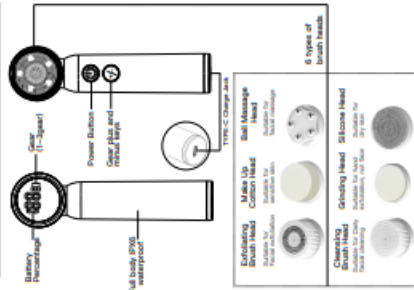

## Product Parameters

Product Parameters	
Name: Display Cleansing Instrument	Model: MZ-400
Main Material: ABS/PC/ silicone	Input Voltage: DC 5V1A
Waterproof Grade: IPX6	Weight: about 120g
Size: 147*79*52*43mm	

## Instruction

1. Power on: long press the power button for 2 seconds to power on. After the power on, the display screen will light up to show the percentage of battery quantity.
2. To stop the power on, long press the power button for 2 seconds to shutdown.
3. Switch gears: Press the +/- key to switch gears in a cycle, when the power is lower than 10%.
4. Charging hint: Display second digit flashing red/oral and stop flashing after full charge.

## Maintenance

1. Do not use hard tools or corrosive liquids to clean the product.
2. Wipe the machine with a clean dry cloth after each cleaning and place it in a clean place.
3. When the machine is packaged and delivered, it is recommended to replace it once every three months.

## Announcements

1. Facial plastic surgery, pregnant women should not use.
2. After use, do not place it in the bathroom or damp.
3. Do not fall or strong collision, do not dismantle the machine without authorization.

## Warranty Provisions

1. Operate normally according to the instructions. Warranty is free if any fault occurs during the warranty period.
2. The warranty period is 1 year from the purchase date.
3. During the warranty period, the following conditions shall be considered as abnormal use:
  - ◆ Incorrect usage leads to failure.
  - ◆ Failure caused by falling, moving, or improper use.
  - ◆ Failure caused by fire, earthquake, flood and other natural disasters or other force majeure.


## FACIAL CLEANSING BRUSH

User Manual




TAKE CARE OF SKIN  
HEALTHY GLOW

## GETTING TO KNOW THIS DEVICE

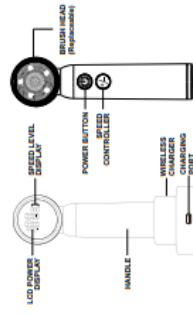

## SIX KINDS OF BRUSHES

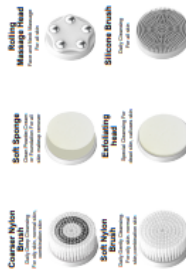

## HOW TO USE

1. Dampen skin and then apply your cleansing device.
  2. Press power button for cleaning mode.
  3. Press speed controller for choose rotating speed.
  4. Cleanse using circular movements on cheeks and forehead, gliding up and down the nose. Press and hold button for 3 seconds to turn off.
  5. Rinse and pat your face dry.
- Please kindly control the use time reasonably according to your personal needs to prevent the skin from being damaged by excessive cleaning.

## CHARGING

Our system kit includes a wireless charger designed to hold and charge the brush handle. Place your device in this wireless charger to recharge it. When the battery is low, the screen will display immediately after use to alert you to place it in the charger for charging. If your device stops working, place it in the charger for a minimum of 5 hours.

## SPECIFICATIONS

MAIN MATERIALS: ABS plastic	SIZE: 147*79*52*43mm
WEIGHT: 120g	BATTERY: Li-ion 1000mAh 3.7V
INPUT VOLTAGE: DC 5V1A	
WATERPROOF RATING: IPX6	

## CARING FOR YOUR DEVICE

To keep your device in optimum condition, care for it as follows. Do not use abrasive cleaners or chemicals to clean any part of the device. Do not put any part of the device in a dishwasher.

## HANDLE

Once a week remove the brush head and wash the handle using mild soap and water to maintain hygiene. The waterproof rating of handle is IPX6. Never attempt to open the brush handle for any reason.

## INFREQUENT USE

The handle needs to receive a charge occasionally. If you rarely use the handle, place it in the charger every 3 months to keep the battery from becoming fully discharged. Do not wrap the handle in the charger when not in use. Secure the cord with a tie-wrap.

## BRUSH HEADS

We recommend that the brush head be replaced every 90-120 days as the bristles become frayed and less effective. Pull the brush head from the handle by pulling the brush head and rinse with warm soapy water to remove any residue. To remove the brush head, grip the brush head firmly, then pull off the brush head. Pull the head away from the handle. To attach the brush head, push down until it snaps into place. Be sure you hear a light snap.

**TIP:** Use the brush head cap to easily attach the brush head with simple press.

## IMPORTANT CAUTIONS

- If you have a skin condition or any medical concerns, please consult a physician before use.
- Do not use abrasive cleaners or chemicals to clean any part of the device. Do not put any part of the device in a dishwasher.
- Exercise particular care when cleansing the under-eye regions and do not bring the device into contact with the eyes or eyelids.
- For newborn babies, we do not recommend sharing your device with anyone else.
- Avoid leaving your device in direct sunlight and never expose it to extreme heat or boiling water. Also do not immerse it in water.
- This device should only be operated by children 8 years and above.
- The device is not intended for use in the shower, bath, on, or near children, as well as those with reduced physical and mental abilities.
- Discontinue use if the product appears damaged in any way. This product contains no serviceable parts.
- Given the efficiency of the cleansing routine, we recommend that you do not use it for more than 3 minutes at a time.
- If you have any questions regarding the device, please refer to the manual. If you do not find the answer to your specific question, or if you have any other questions regarding the device's operation, please visit our website.

## WARNING

- Those with lack of experience and knowledge should be given supervision or instruction concerning use of this device in a safe way and understand the hazards involved.
- Children should not play with this device or clean the device without supervision.
- Follow the instructions in this manual regarding charging of the device and follow these instructions.

## WARRANTY

We warrant this device for a period of **ONE YEAR**, after the original date of purchase against defects due to faulty workmanship or materials arising from Normal Use of the device. The warranty covers working parts that affect the operation of the device. The warranty does not cover damage or deterioration caused by fair wear and tear, or damage caused by accident, misuse or neglect. Any attempt to open or take apart the device (or its accessories) will void the warranty. If you discover a defect and notify device during the warranty period, we will, at its discretion, replace the device free of charge. Claims under warranty must be supported by the receipt and evidence that the date of the claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period.