## Applicable mechanical switch Technical Support

Single-Channel

Rebound Single-Channel mechanic switch

Single-Channel mechanic switch

Double-Channel mechanic switch Connecting box











Circut installation



First ,connect earth wire,then connect neutral wire and direction 1 wire,the motor stop when window opener run to limit-setting position.

Connect neutral wire and direction 2 wire ,motor stop when window opener shut down.

(relatively speaking, window opener open and close according to the installation needs.)








# Technical

### Installation drawing



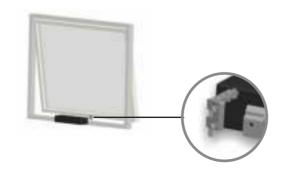

fix bracket on window used screw

connect chain and window used connector



 $\epsilon$ 



## **DJ50S** Chained Windown Opened Motor

**Specification** 

Version No.: A/01



#### **Product features**

- input voltages: AC230V
- Working temperature: -10°C~55°C
- Motor with built-in overload and over-current protector
- The lifetime can reach 10000 times for opening and closing movement
- Protection degree: IP65



#### Tubular Motor Nameplate:

50

S -- 150 / 360







Hopper window


Hung window

Motor specification

Technical Support Window opener side cap Wall bracket installation track

The wall bracket of window opener can any install in the motor side according to the practical needs. The motor stop when completely shut down, at the same time red light goes on as a hint

motorized window opened can not be used vertically, or put it into uneven place, please install it in level place

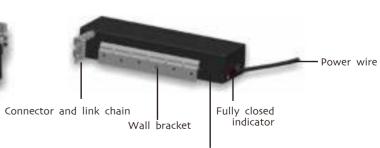

Wall bracket installation track



When the Windows open to any Angle, we can insert limit-setting controller into side cap of window opener ,limit-setting finished. Motor will run to acquiescently limit position ,if we do not set limit

limit-setting controller