

Operation Manual




Headrest

1. Height adjustment:
Pull up and down



Lumbar support

- Height adjustment: Pull up and down

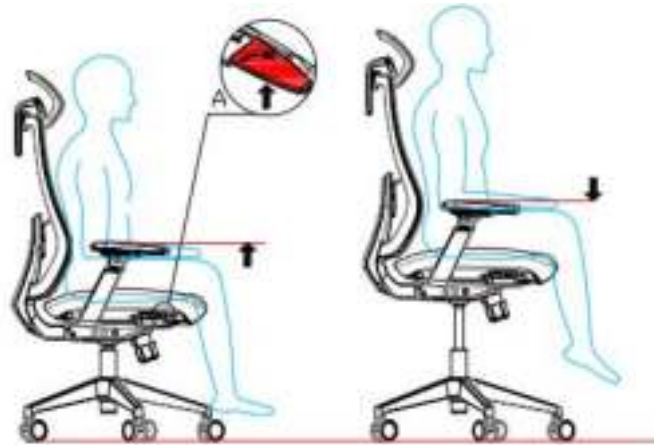

Seat

- Height adjustment: there are two adjuster on the seat, the front one is **A** for seat height adjustment. The behind one is **C** for tilting adjustment. Pull up adjuster **A** to move the seat up without sitting; sit on the chair and press **A** down to move down the seat




2.

Backrest

1. Tilting adjustment: sit on the chair, Pull **C** up to fix the backrest. Press **C** down to unlock and use your back to tilt the backrest. When you lock the backrest at one angel, Press **C** down to unlock and then use your back lay on the backrest to give it little pressure, the backrest will follow your back to come back. Do the same.
2. Tilting tension adjustment: turn the knob **D** to adjust the backrest tilting tension

3D Arms

1. Height adjustment: press slide bar **E** to move the arm up and down.
2. The arm pad can be moved forward and backward
3. Angel: arm pad can be rotated at the center.

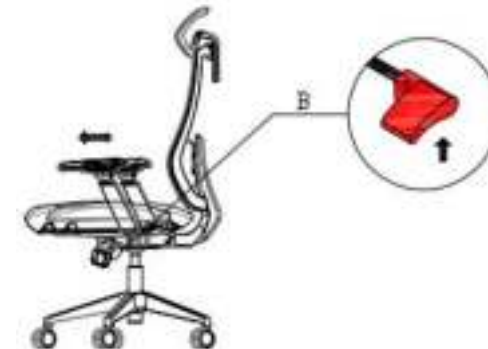

Seat sliding:

- Seat depth adjustment: Lock and fix the backrest, sit on the seat, Pull seat slider **B** up and move out the seat at the same time. do again to move back the seat.