


Xplore

Quick Start Guide Smart Dashcam


/ HELLO

Thanks for choosing Xplore Dashcam.

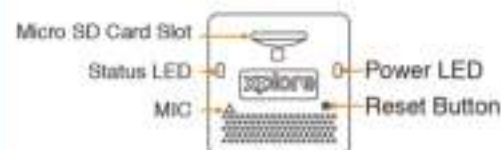

| Status LED | | Power LED | |
|------------------------|-------------|--------------------|-------------|
| Recording | GREEN | Low Power 10% | RED Flash |
| Recording / Card Error | OFF | Low Power 20% | RED |
| Snapshot | GREEN Flash | Charging | BLUE Flash |
| WiFi Error | RED | Full (Charged) | GREEN |
| GPS Error | YELLOW | Upgrading Firmware | GREEN Flash |
| Snapshot Remote Error | BLUE | | |

/ TURN ON AND OFF

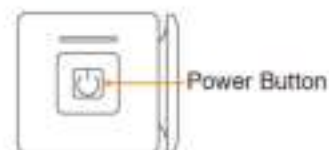

AUTOMATIC
Xplore C1+ Dashcam starts recording when the engine starts, and powers off 20 seconds after the engine stops.

MANUAL OVERRIDE
Turn ON: Hold the Power Button for 2 seconds.
Turn OFF: Hold the Power Button again for 3 seconds.

SNAPSHOT MODE
When recording, press the Power Button. Xplore C1+ takes a picture and saves a 12 second video clip.

/ IN THE BOX



/ IN YOUR CAR

1 Clean the windshield and choose a position where the Dashcam will not block the driver's view. A recommended place is behind the rear view mirror. Place windshield sticker.

Tip: Put the hexagon mouth of sticker upside-down.

2 Insert a Memory Card (SDHC Class 10 or above) into the Dashcam.

3 Mount the Dashcam onto the Bracket.



- 4 Fix the Bracket to the Windshield Sticker.
- 5 Fit the USB Cable to the Bracket and fix Cable in car. (The cable can be hidden and fixed with cable clips if desired).
- 6 Plug in the Power Adapter to the car's cigar lighter.
- 7 Insert USB Cable into Power Adapter.
- 8 Your Xplore C1+ is ready to go.



/ Xplore C1+ APP

Go to our website at www.amacam.com to download the App, or search for xploreCam on the AppStore or Google Play.

/ WIFI CONNECTION

Switch on your smartphone's WiFi. Search for SSID 'XPLORE_xxxxx' to connect. The initial password is 12345678.

/ FAQs

- Dashcam won't record.**
Make sure you are using a SDHC rapid storage card (Class 10 or above) from an authorized seller. Check if there's enough space on the memory card. Format the card if necessary.
- Dashcam is hot.**
Heating is normal, and the normal operating temperature is between -20°C and 70 °C.
- Dashcam has crashed.**
Use a paperclip to press the Reset Button.
- What's the maximum capacity of memory card? When can a memory card be inserted or removed?**
32 GB. Insert and remove the memory card when Dashcam is turned off.
- What's seamless loop recording?**
When the memory card is full the Dashcam will automatically overwrite from the earliest recording. Protected files and emergency recording will not be overwritten.