

# LASER TONER CARTRIDGE INSTRUCTION



When produced, toner is housed inside the toner hopper. Before usage, shake the toner hopper 6-8 times to make sure the toner is loose and evenly distributed inside.

please remove the plugs on both sides of the cartridge before use.



Pull out the sealing tape slowly with horizontal force to avoid breaking of sealing tape.

 
Install the laser toner cartridge into the printer in the direction as showed by the arrow on the cartridge.



## Common Sense and Caution for Usage of Laser Toner Cartridge

1. Environment requirement: Generally speaking, temperature for installation and usage of replacement laser toner cartridge is 10-30°C and relative humidity is 20-80%. If this can't be achieved, the printout will probably not be good. In this case, please put the machine and cartridge together under the temperature and humidity required for at least 2 hours before proceeding printing. Otherwise there will be bad printout.

2. Media requirement: Please select suitable media for printing. Don't use damaged, over-thick, too hard paper or paper with staple, for they will damage the OPC and lead to white line, deformed letter or gray background.

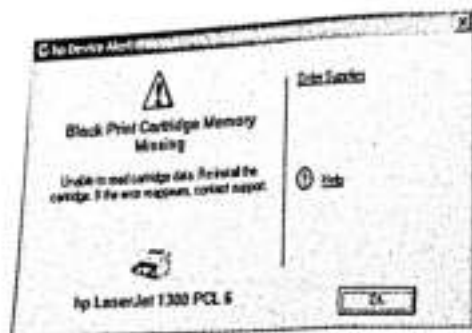

3. Some HP toner cartridges are with chips, like HP Q2613A/X, HP C8061 A/X etc., while some replacement toner cartridges come without chips. For these products without chips, You can install them into the printer and operate printing, the only difference is that PC won't show the print yields and "toner low" information. When using our 2613A/X, there might pop up a message as shown left, click "ok" and go on printing. This won't affect the print quality and print yields.

4. OPC is vital to laser toner cartridge. Don't touch it with hand nor expose it to direct sunshine. Otherwise it will reduce lifetime of OPC and cause bad printout.

5. When using special media, please use manual function for paper feeding and adopt the nearest output track, which could shorten paper running track to avoid paper jam.

6. When replacing the laser toner cartridge, it is better to use dust collector to clean the place where the toner cartridge loaded and use some soft cloth to clean away the paper scrap and toner in the paper track. Please clean the exposed electronic sensor with alcohol to avoid pale printing caused by bad contact.

7. Move the OPC gears 360° in the direction of pushing open the protective cover to check if the OPC rolls correctly (74A/3903A is pushed in opposite direction). Rolling OPC in the incorrect direction will make the toner leaking.

8. At the beginning of printing some occurrence like obscure image or pale printing may happen. This may be due to the humidity of machine, toner hopper or paper. This phenomenon could be eliminated by continuously printing for more than 10 pages.

9. When "Toner Low" appeared, there will be pale printout. Shake the cartridge or pat toner hopper, possibly you may print 40-50 pages more.