


## CHARGING:


- Before using as the first time, please charge 8 hours fully to activate the blade rechargeable battery.
- Please do not charge if the temperature is lower than 0°C or higher than 40°C.
- Please do not charge if it is nearby the sunlight perpendicular incidence or the heat source incidence.
- The standard charging time is 8 hours. In order to avoid damaging the batteries, please don't extend the charging time. When it's fully charged, it can be used for more than 90 minutes. During charging, the indicator light shows red.
- Push the switch button to ON, then it can be used.

## Parts Identification

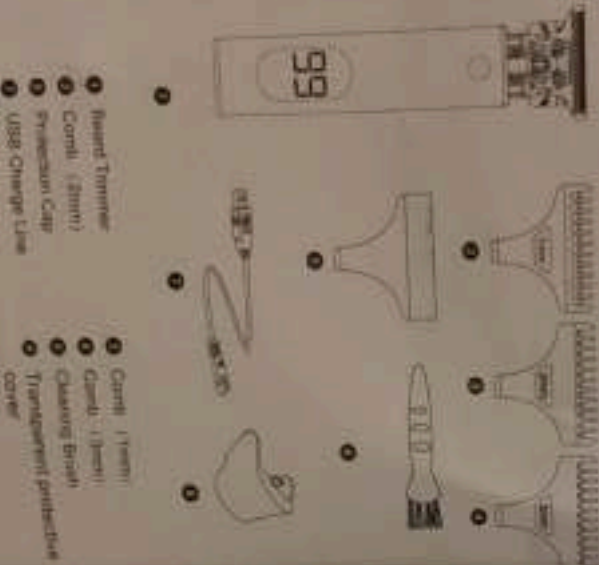

## How to use:

- This hair trimmer can be used in both cord and cordless.
- Put the adaptor connector with the jack of the battery pack vertically at the bottom of the motor, then put the adaptor pins connected with the power.

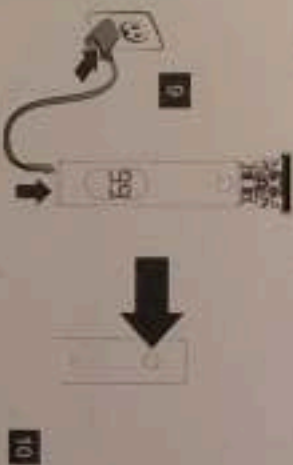

## How to use the comb attachment:

1. When used and insert the comb attachment, please ensure the power switch is at OFF position. Adjusted comb of 1.2. Then rotate the adjustment length (picture 11).
2. Push the comb button as (picture 12), you can change the comb with other size.



## Maintenance of the blades:

- Use the brush, to clean the blade in order to remove hair which may be caught between the blades. Lubricate the space between the stationary and rotating blades with 2 or 4 drops of oil after every few uses.



## Cleaning under the tap

- Clean the cutting element and comb under a warm tap after every usage (p. 15).

