

RC TARANTULA

LED INFRARED CONTROLLED TECHNOLOGY

Thank you for your purchase of the Discovery RC Tarantula LED Infrared Controlled Technology! Have fun with a Tarantula you control. Be sure to use this product in a safe, traffic free environment. Please read all instructions and warnings on this sheet prior to use. Keep this instruction sheet as it contains important information for future reference.

CONTENTS

RC Tarantula
Infrared Remote Control

TO PLAY

- Use the Control Frequency Selection Switch to choose a frequency.
- Turn the Tarantula on, then press any of the controller buttons to set your frequency.
- Press the left button to move the spider forward. Push the right button to have it move back.
- Press and hold both buttons for 7 seconds to activate Auto Performance Mode.
- Press and hold the left button to exit Auto Performance Mode.

NOTE: FOR BEST RESULTS, KEEP THE REMOTE POINTED AT THE TARANTULA. FLUORESCENT LIGHTS AND SUNLIGHT CAN AFFECT TARANTULA'S ABILITY TO RECEIVE SIGNALS FROM THE REMOTE.

BATTERY INSTALLATION


The Tarantula uses 3 "AAA" 1.5V alkaline batteries (not included) and the Remote Control uses 3 "AAA" 1.5V alkaline batteries (not included). You will need to use a Phillips or Cross screwdriver to open the battery compartments.

TARANTULA


- Remove the battery cover on the spider's belly.
- Insert batteries according to the diagram inside the battery compartment.
- Replace the battery cover.

REMOTE CONTROL

- Remove the battery cover on the back of the remote control.
- Insert batteries according to the diagram inside the battery compartment.
- Replace the battery cover.

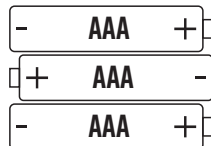

FEATURES

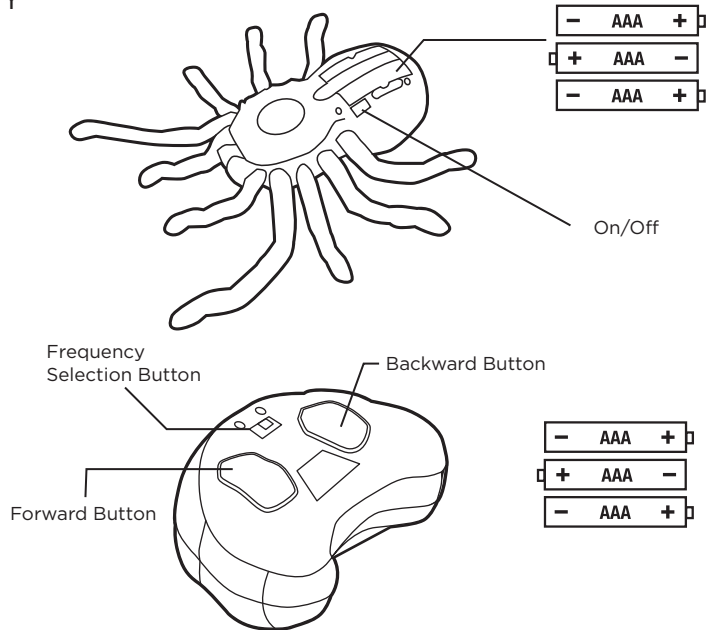

SAFETY WARNINGS: PLEASE READ BEFORE USE

- Adult supervision required.

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Insert batteries using the correct polarity.
- Do not short-circuit the battery supply terminals.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Exhausted batteries are to be removed from the toy.
- Alkaline batteries are recommended. Use only the specified voltage.
- Keep these instructions for future reference.

WARNING:

- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Inspect the product before every use. If the product appears damaged in any manner, discontinue use and discard immediately.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Model NO: 1011810

Distributed by and © 2020 ThreeSixty Sourcing Ltd. All rights reserved.
For US only: Distributed by and © 2020 MerchSource, LLC. Irvine, CA, 92618. All rights reserved. Tel: 1-800-374-2744.
© 2020 Discovery or its subsidiaries and affiliates. Discovery and related logos are trademarks of Discovery or its subsidiaries and affiliates, used under license. All rights reserved.
Printed in China

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

WARNING:

CHOKING HAZARD - Small Parts.
Not for Children under 3 years.