

Appuyez sur < OK^{MENU} >, puis sur < ▲ > ou < ▼ > jusqu'à afficher **BLOQ. ANONYM.**

Appuyez sur < OK^{MENU} >, puis sur < ▲ > ou < ▼ > pour sélectionner l'un des modes.

3.1. Bloquer les numéros privés

Ce mode vous permet de bloquer les appels dont les numéros ont été délibérément rendus privés par leur détenteur.

A partir du téléphone en veille,

1. Appuyez sur < ☎ > pour accéder directement ou sous-menu **PROG. BLOC.**, ou

*Appuyez sur < OK^{MENU} > puis sur < ▲ > or < ▼ > jusqu'à afficher **BLOC. APPEL.** Appuyez sur < OK^{MENU} > pour afficher **PROG. BLOC.***

2. Appuyez sur < ▲ > ou < ▼ > jusqu'à afficher **BLOQ. ANONYM.**

3. Appuyez sur < OK^{MENU} >, puis sur < ▲ > ou < ▼ > jusqu'à sélectionner **PRIVÉ.**

Appuyez sur < OK^{MENU} > pour confirmer votre choix.

4. ☎ restera affiché dans le coin inférieur gauche de votre écran.

3.2. Bloquer tous les numéros anonymes

Ce mode vous permet de bloquer tous les numéros qui ne s'affichent pas sur votre écran, depuis les numéros privés jusqu'aux appels internationaux et numéros provenant de téléphones publics.

A partir du téléphone en veille,

1. Répétez les étapes 1 et 2 de la section 3.1.

2. Appuyez sur < OK^{MENU} >, puis sur < ▲ > ou < ▼ > jusqu'à sélectionner **TOUS.** Appuyez sur < OK^{MENU} > pour confirmer votre choix.

3. ☎ restera affiché dans le coin inférieur gauche de votre écran.

3.3. Désactiver le blocage des numéros anonymes

A partir du téléphone en veille,

1. Répétez les étapes 1 et 2 de la section 3.1.

2. Appuyez sur < OK^{MENU} >, puis sur < ▲ > ou < ▼ > jusqu'à sélectionner **DESACTIVER.** Appuyez sur < OK^{MENU} > pour confirmer votre choix.

3. ☎ disparaîtra de votre écran si le blocage des appels réguliers (voir 1. et 2.) est également désactivé.

EN CAS DE PROBLEME

D'une manière générale, en cas de problème, retirer les batteries dans tous les combinés.

Déconnecter votre appareil. Attendre environ 1 minute. Reconnecter l'alimentation électrique et réinsérer les batteries. Pour plus d'informations, vous pouvez accéder à un risque de choc électrique. N'essayez jamais d'ouvrir les batteries, elles contiennent des substances chimiques dangereuses.

Votre poste téléphonique doit être installé dans un endroit sec, à l'abri de la chaleur, de l'humidité et des rayons directs du soleil.Pour éviter les interférences radio, éloignez le poste téléphonique d'au-moins 1 mètre de tout appareil électrique et autre téléphone.

En l'absence d'alimentation secteur, vous ne pourrez pas passer ou recevoir des appels.

En cas de fuite de gaz ou de tout autre danger d'explosion, n'utilisez pas votre téléphone pour appeler les autorités responsables, à proximité de ce danger. N'ouvrez pas votre appareil ni son adaptateur secteur pour ne pas vous exposer à un risque de choc électrique. N'essayez jamais d'ouvrir les batteries, elles contiennent des substances chimiques dangereuses.

Dans ce but, l'Union Européenne a institué un système de collecte et de recyclage spécifique dont les fabricants ont la responsabilité.

Aidez-nous à préserver l'environnement dans lequel nous vivons !

CONFORMITE CE

Le soussigné, ATLINKS EUROPE , déclare que l'équipement radioélectrique du type DECT est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: www.alcatel-home.com. dans le menu SUPPORT puis Déclarations de conformité.
Puissance moyenne par canal de 10mW
Puissance d'émission maximale: 24dBm
Plage de fréquence: 1880-1900MHz

ENGLISH

BEFORE 1st USE

Connecting your phone:

- Connect plugs in corresponding sockets in the base station. Plug the telephone line into telephone socket and insert power plug in an electrical outlet.

- Insert batteries in Handset

- After first time power up (base unit is connected to AC mains), welcome mode (country) will appear on the screen (Fig.1).

Before you start to use your telephone, charge batteries continuously for 15 hours.

▲ only use plug adapter supplied with the unit and rechargeable batteries with your phone.

Handset / Base Station Keys

- OK/Menu key**
- Back/ Intercom key**
- Navigation key
- Hang-up/Exit key**

- # key - Press to insert #; In idle mode: Press and hold to access the call list.
- 0 key - During a call: Press and hold to insert a flash (R).
- * key - Press to insert *; In idle mode: press and hold to access the redial list.
- M1, M2** key - In idle mode/during a call: Press to dial pre-recorded number stored in direct mem.
- ☎ **key***

* To block calls, it is necessary to subscribe to the Calling Number Presentation service. Contact your landline operator. In standby mode: Direct access to the Call blocking menu
- Talk key / Loudspeaker**
- Paging key** - To locate handset / to start registration procedure.
- ▲

Increase (+) speaker volume during message playback.
- 7-SEG LED DISPLAY**

0F-> -- When answering machine is OFF

0n-> XX When answering machine is ON where XX is number of messages in TAM memory

00 Steadily ON: No voice messages in TAM

XX Flash: There are XX new voice messages received where XX is from 01 to 59

ZZ Steadily ON: There are ZZ old voice messages kept in the TAM memory (no new voice messages)

XX/FF Flash XX alternatively with FF: There are XX new voice messages received where XX is from 01 to 59 and the TAM memory is full

FF Flash FF: TAM memory is full and there are no new messages, only old messages are kept in TAM memory

--/XX Flash XX alternatively with --: Time is not set and there are XX new voice messages received where XX is from 01 to 59

-- -Flash --: Time is not set and there are old voice messages kept in the TAM memory only (no new voice messages)

XX Steadily ON: Playing the current XX incoming old message
Flash: Playing the current XX incoming new message

A1/A2 Steadily ON: Playing the current outgoing message (OGM) where A1 is the Answer & Record OGM and A2 is the Answer Only OGM

XX/An Flash XX alternatively with An: XX new incoming message is now recording. An denotes that the incoming message recording is in progress

rA Flash: Remote access is in progress

LX Steadily ON: Indicate the current volume level where X is from 1 to 8 (non-cyclic)

- ☎

Press to turn on the answering machine
Press again to turn off the answering machine
- ▶■

Press to play the message
Press again to stop the message playback
- ▶

Press to skip the current message and play the next message
- ⏮

Press once to delete the message during playback
Press and hold to delete all the messages
Note: New voice messages will not be deleted
- ◀

Press to repeat playing the current message from the beginning
Press twice to skip backward to the previous message
- ▼

Decrease (-) speaker volume during message playback

*Subject to subscription and availability of the service from the fixed line operator.

Display icons

☎ Indicates that the Call Blocking function is activated. (See the attached Call Blocking addendum)

🔋 Indicates battery is fully charged.

🔋 Indicates battery is fully discharged.

📞 Indicates that an external call is connected or held. Icon blinks when receiving an incoming call.

📧 Indicates you have a new voice mail message*.

📞 Indicates you have new missed calls*.

🕒 Displays when the alarm clock is activated.

📞 Displays when handsfree is activated.

📞 Indicate when the telephone answering machine (TAM) is turned on. Flash when new TAM messages are received.

📞 Indicates that the handset is registered and within range of the base station. Icon blinks when the handset is out of range or is searching for a base.

Using the phone

Receive and end a call

- 📞 / 📞

Make a call

- 📞 either before or after dialing your number

- From redial list: Press and hold * / ▲ or ▼ / 📞.

- From call log list*: Press and hold # / ▲ or ▼ / 📞.

Note: You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log.

- From direct memories: long press on **KEY 1** or **KEY 2** or **KEY 3** in idle mode.

- From phonebook: ▲ / ▲ or ▼ / OK^{MENU}.

- During a call, to activate/desactivate handsfree: 📞.

To make an internal call

- If only 2 registered handsets: ☎ ^{INT}.

- If more than 2 registered handsets: ☎ ^{INT} / ▲ or ▼ / select handset number / OK^{MENU}.

- To ring all handsets to intercom: ☎ ^{INT} / ▲ or ▼ select **CALL ALL** / OK^{MENU}.

To make a three-party conference call:

During call:

- Press OK^{MENU} / select **INTERCOM** / OK^{MENU} / ▲ or ▼ / select handset number / OK^{MENU}.

- Press 📞 on the called handset to answer.

- Long press * on the calling handset to establish conference call.

Phonebook settings: 100 entries

To register in phonebook

OK^{MENU} / ▲ or ▼ to select **PHONEBOOK** / OK^{MENU} / OK^{MENU} / select **ADD** / enter name of contact / OK^{MENU} / enter number of contact / OK^{MENU} / select melody / OK^{MENU}.

To register the direct memories in keys M1,M2, 1, 2 & 3
OK^{MENU} / ▲ or ▼ select **HS SETTINGS** / OK^{MENU} / ▲ or ▼ select **DIRECT MEM** / OK^{MENU} / ▲ or ▼ select **M1** or **M2**, **KEY 1** or **KEY 2** or **KEY 3** / OK^{MENU} / edit or enter the number / OK^{MENU}.

General settings

This phone can be customized according to your preferences, to access the different possibilities press: OK^{MENU}.

- To customize handset (name, melody, language (table 2),...): ▲ or ▼ select **HS SETTINGS** / OK^{MENU}.

- To change PIN, registration handset, reset: ▲ or ▼ select **BS SETTINGS** / OK^{MENU}.

Answering machine setting

Answering machine operation by handset

Turn the answering machine on or off

- OK^{MENU} / ▲ or ▼ to select **ANS. MACHINE** / OK^{MENU} / ▲ or ▼ to select **TAM ON/OFF** / OK^{MENU} / ▲ or ▼ to select **ON** or **OFF** / OK^{MENU}.

Set the answer mode

- OK^{MENU} / ▲ or ▼ to select **ANS. MACHINE** / OK^{MENU} / ▲ or ▼ to select **TAM SETTINGS** / OK^{MENU} / to select **ANSWER MODE** / OK^{MENU} / ▲ or ▼ to select **ANSWER ONLY** or **ANS & REC** / OK^{MENU}.

Record a personalised outgoing message

- OK^{MENU} / ▲ or ▼ to select **ANS. MACHINE** / OK^{MENU} / ▲ or ▼ to select **TAM SETTINGS** / OK^{MENU} / to select **OGM SETTINGS** / OK^{MENU} / ▲ or ▼ to select **ANSWER ONLY** or **ANS & REC** / OK^{MENU} / ▲ or ▼ to select **RECORD MESS** / OK^{MENU} to start recording / OK^{MENU} to end recording.

Playback and delete messages

- OK^{MENU} / ▲ or ▼ to select **ANS. MACHINE** / OK^{MENU} / to select **MSG PLAYBACK** / OK^{MENU} to start playback.

- During message playback you can press OK^{MENU}, then ▲ or ▼ to select options to DELETE the current message.

Set ring delay

- OK^{MENU} / ▲ or ▼ to select **ANS. MACHINE** / OK^{MENU} / ▲ or ▼ to select **TAM SETTINGS** / OK^{MENU} to select **ANSWER DELAY** / ▲ or ▼ to select **2 -8 RINGS** or **TIME SAVER** / OK^{MENU}.

To check messages remotely

- Dial your home phone number/ while the answering machine playing greeting message, press * and enter remote access code (master PIN code 0000).

The remote feature lets you perform the following functions:

To	Press this button
Play back messages	5
Repeat message	4
Erase message	2 (during message playback)
Skip message	6
Turn on answerer	7
Turn off answerer	9

Set the OGM voice language

- OK^{MENU} / ▲ or ▼ to select **ANS. MACHINE** / OK^{MENU} / ▲ or ▼ to select **TAM SETTINGS** / OK^{MENU} / ▲ or ▼ to select **TAM LANGUAGE** / OK^{MENU} / ▲ or ▼ to select your preferred language / OK^{MENU}.

This telephone is built-in with Smart Call Block feature*. This feature will help you avoid nuisance calls by only allowing some numbers to make your phone ring.

Default setting of Smart Call Block in this telephone is **OFF** but you can enable it via your phone settings, as explained in the following paragraphs.

**This feature requires a subscription of Caller Line Identification service from your telephone service provider.*

Setting	Explanations
OFF	Call Block function (Block all call with numbers) is Disabled. This is the default mode.
ON	Call Block function is set to Manual. Numbers registered in the black list will not go through and the phone will ring silently. Numbers can be added to the list while the phone is ringing and / or after a call (to enable, see part 1).
CONTACTS	In this automatic mode, any number not registered to your phonebook will be automatically be blocked and not cause your phone to ring. All calls from contacts registered to your phonebook will proceed normally. When this mode is chosen, Contacts OK is displayed on LCD in idle mode unless you have unread messages/missed calls (to enable, see part 2.1).
VIPS	In this second automatic mode, only calls from contacts registered as VIP in your phonebook will go through and cause your phone to ring. Any other number will not ring. When this mode is chosen, VIPS OK is displayed on the LCD in idle mode unless you have unread messages / missed calls (to enable, see part 2.2)
ANONYME	This extra feature allows you to block call that do not have a number attached to them (ie private calls, international calls, etc). This option can be enabled on top of any of the previous four (to enable, see part 3)