





MaxxGarden

Model 20733 Manual Instruction

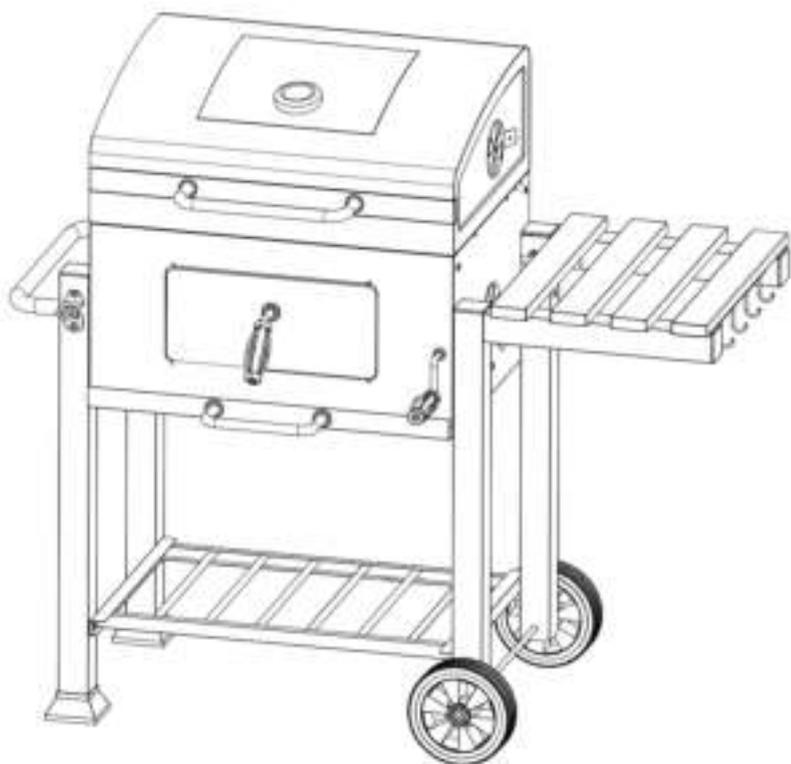

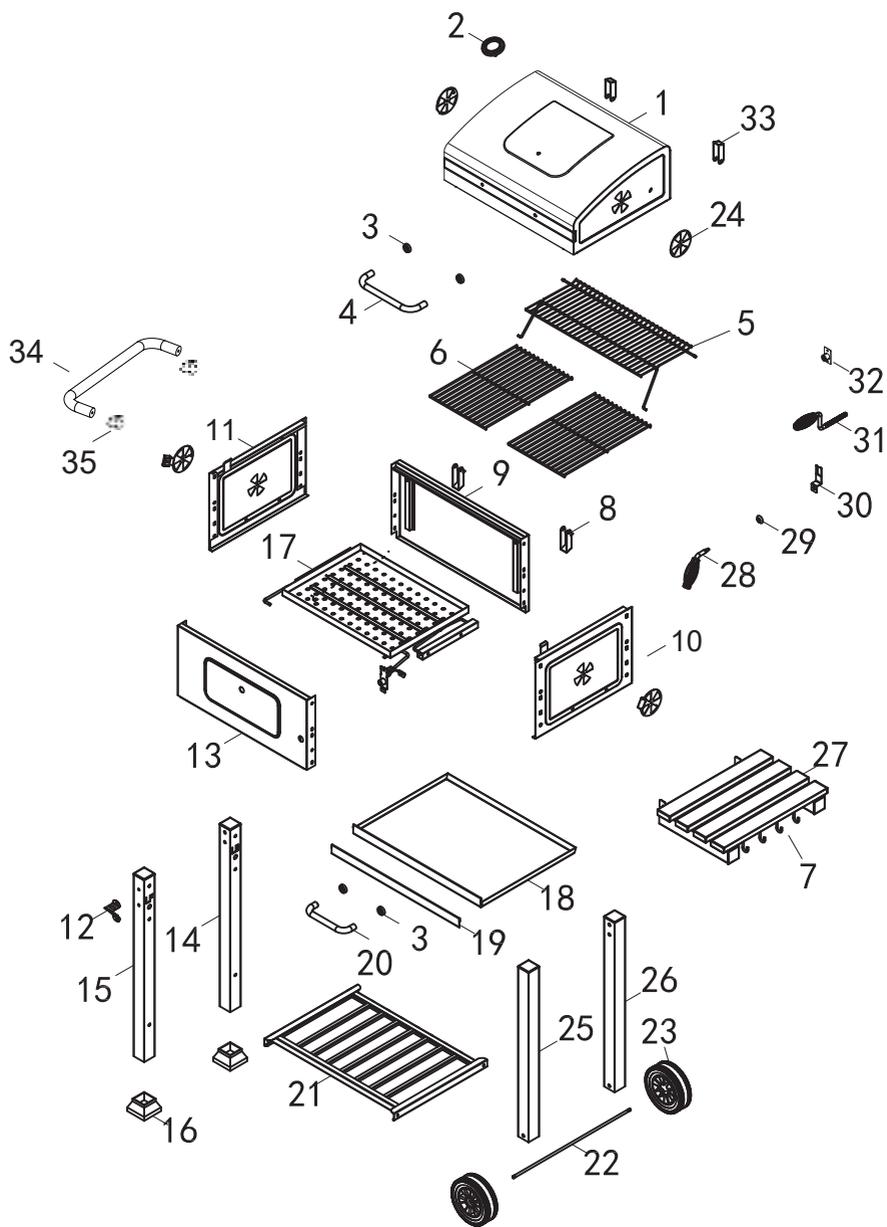

WARNINGS

- Outdoor use only. DO NOT use the grill indoors or in an enclosed or non-ventilated area.
- Keep a fire extinguisher near this product at all times.
- For household use only. DO NOT operate this grill for other than its intended use.
- Some parts of this grill have been re-oiled at the factory. Please burn off the oils before cooking
- Do not wear loose clothing when using the grill or allow hair to come in contact with the grill.
- Never use the grill on a wooden surface or other flammable surfaces. Use the grill only on a hard, stable surface that can support the grill weight.
- Keep 10 feet of clearance between grill and any combustible materials when grill is in use (including, but not limited to bushes, shrubs, trees, leaves, grass, wooden decks or fences, buildings, etc.)
- Keep the grill away from gasoline and/ or other flammable liquids, gases, vapors, or areas where these may be present. Do not store or use the grill in these areas.
- In windy conditions, place it in an outdoor area that is sheltered from the wind.
- Keep out of the reach of children and pets, store out of the reach of children when not in use.
- When moving or lifting the grill, use it cautiously to avoid back strains or injuries.
- Do not try to move the grill while it is in use.
- Don't place goods over 10kgs/22lbs on each side shelf. Do not use gasoline, kerosene, or alcohol to light charcoal. Using any of these products or similar products could cause a flare up, a flash fire or an explosion. Severe bodily injuries can be a potential result.
- If using a lighter fluid to start a fire, leave the roll top hood open until briquettes area has shed over and lighter fluid has burned off. Closing the hood too soon could cause fumes from the lighter fluid to accumulate inside the grill. This could cause a flare up or an explosion when the hood is opened.
- Do not add a lighter fluid to warm or hot coals. A flash fire may result that could cause bodily injuries.
- Do not add instant light charcoal briquettes to the existing fire. A flash fire may result that could cause bodily injuries.
- Do not light and operate the grill without the slide out ash pan in place.
- Do not leave grill or coals hot and ashes unattended.
- Do not remove or empty slide out ash pan until coals and ashes have completely cooled.
- Allow the unit to cool completely before conducting any routine cleaning or maintaining.
- "WARNING! This barbecue will become very hot, do not move it during operation""Do not use indoors!"
- "WARNING! Do not use spirit or petrol for lighting or re-lighting! Use only firefighters complying to EN1860-3!"

Parts List


No.	Desc.	Pic.	Qty	No.	Desc.	Pic.	Qty
1	Lid		1	21	Bottom shelf		1
2	Thermometer		1	22	Wheel shaft		1
3	Washer		4	23	Wheel		2
4	Handle for lid		1	24	Air door		4
5	Warming grid		1	25	Leg (Right front)		1
6	Cooking grid		2	26	Leg (Right back)		1
7	Hook		4	27	Side table		1
8	Lower hinge		2	28	Charcoal door handle		1
9	Back panel		1	29	Charcoal door handle washer		1
10	Side panel RH		1	30	Charcoal door locking part		1
11	Side panel LH		1	31	Lever handle		1
12	Bottle opener		1	32	Handle grip		1
13	Front panel		1	33	Upper hinge		2
14	Leg (Left Back)		1	34	Side handle		1
15	Leg (Left Front)		1	35	Side handle washer		2
16	Leg end cover		2	36			
17	Charcoal tray		1	37			
18	Ash tray		1	38			
19	Decorating strip		1	39			
20	Ash tray handle		1	40			
				41			

Part List

No.	Desc.	Pic.	Qty	No.	Desc.	Pic.	Qty
A	M6 Nut		9	G	R clip		2
B	M6*12 screw		34	H	M6*20 shoulder screw		5
C	M6*40 screw		10	I	M6*70 screw		2
D	M6*16 screw		2	J	M10 nut		2
E	Washer		0	K	M4*8 screw		4
F	Pin		2				


Assembly

Note: Please do not tight the screws and nuts till all assembly steps completed.

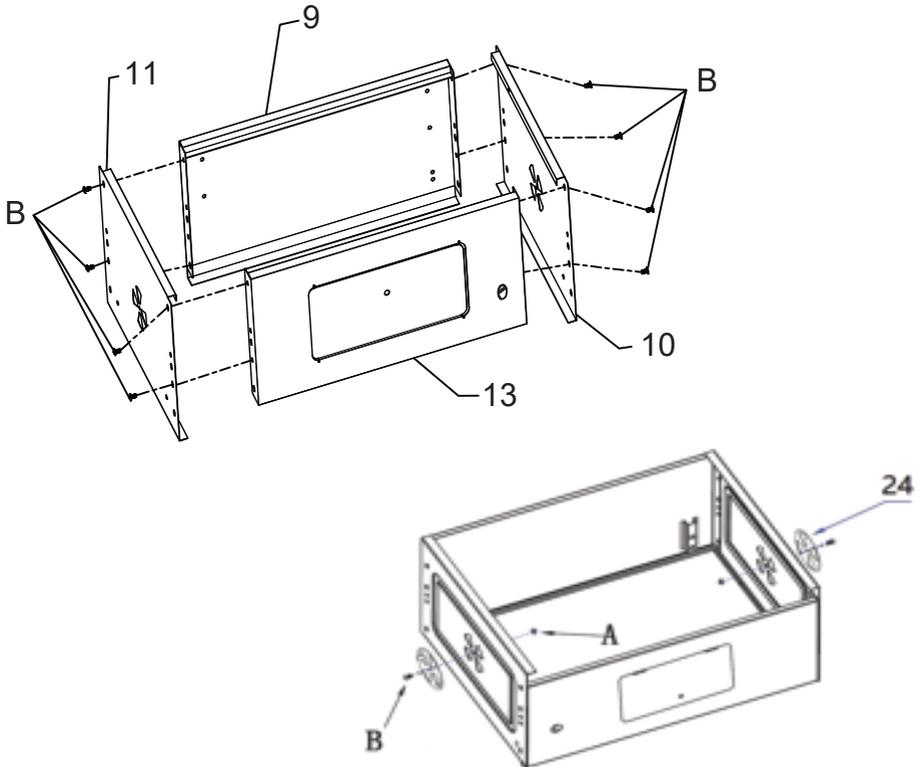


1. Fix side panels LH*RH (10, 11) with 8pcs M6x12 screws (B) to front panel (13) and rear panel (9).
Fix 2 pcs air vents (24) onto the side panels by 2pcs M6*12 screws (B) and 2pcs M6 nuts (A).

Assembly

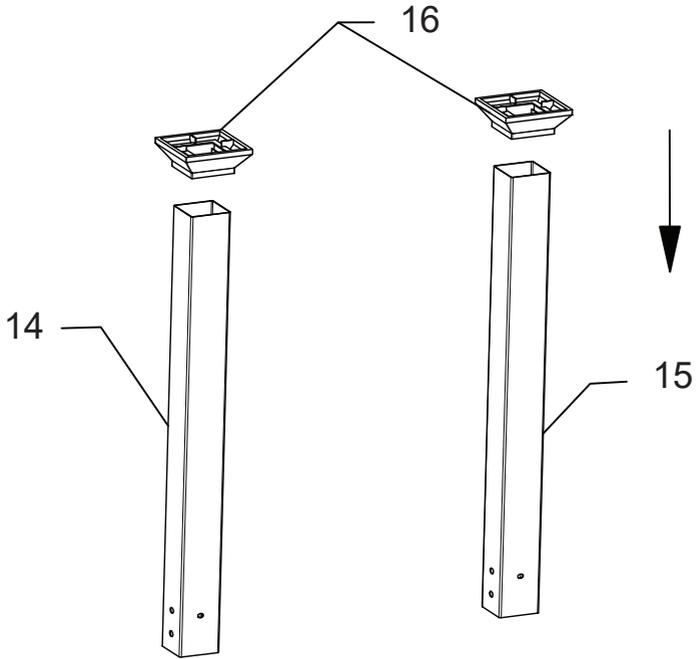


2. Fix leg end cover (16) on two of legs (14 & 15).

Assembly

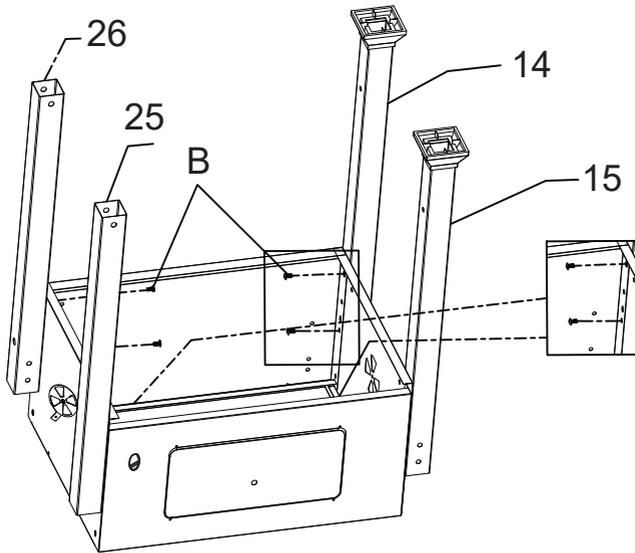


3. Fix two legs (14 & 15) with 4pcs M6x12 screws (B) to the left side panel.
Fix the two remaining legs (25 & 26) to the right side panel with 4pcs M6x12 screws (B) .

Assembly

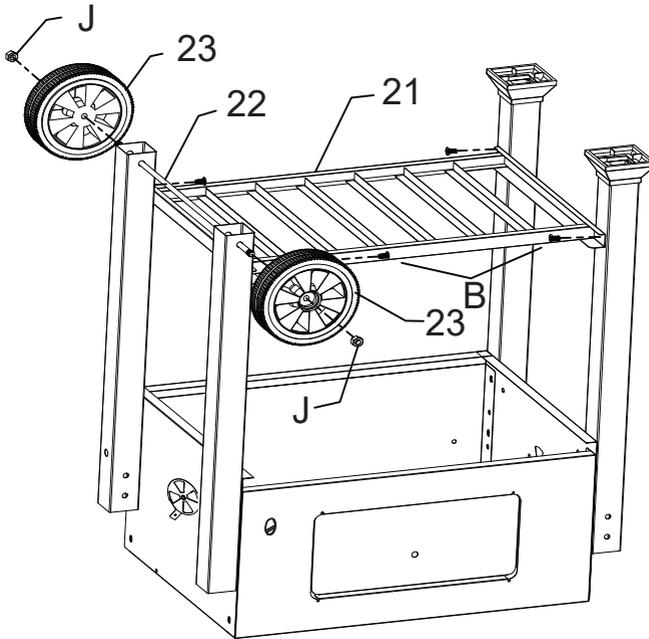


4. Fix bottom shelf (21) to the legs with 4pcs M6x12 screws (B).
Fix the wheel axle (22) into the legs (25&26).
Then fix the 2 wheels (23) by 2pcs M10 nuts (J).

Assembly

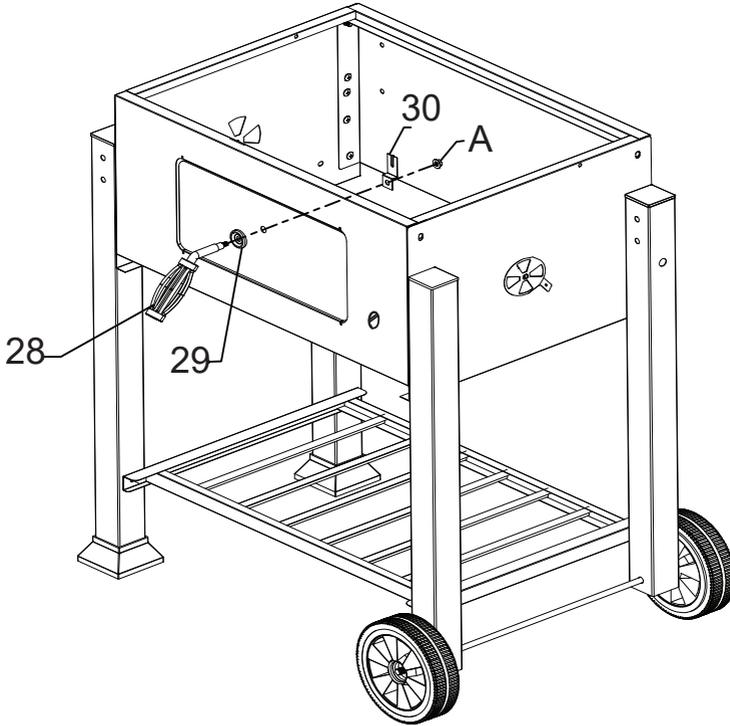

5. Fix the charcoal door handle (28), the charcoal door handle washer (29) and charcoal door locking part (30) to the front panel by 1pc M6 nut (A).


Assembly

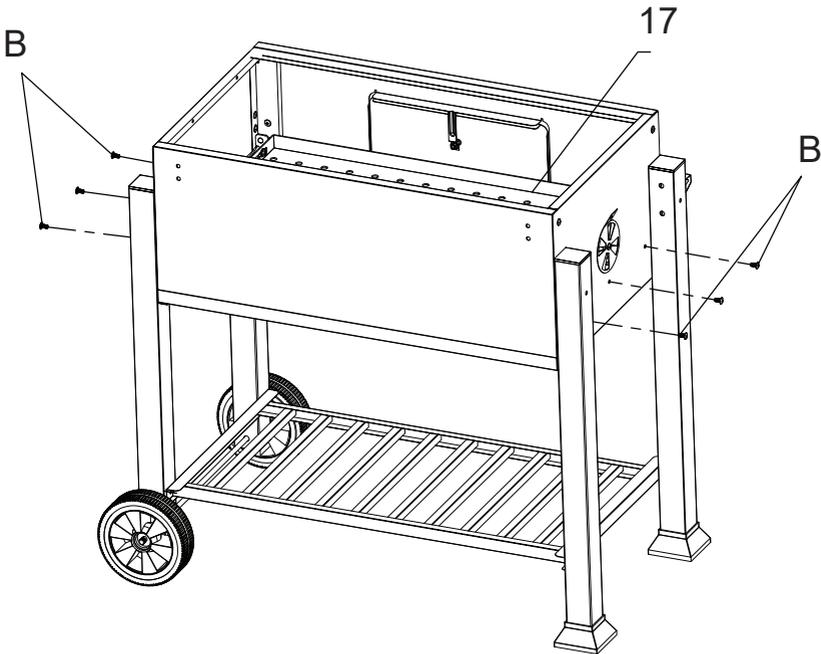

6. Charcoal pan (17) is fixed into the body with 6pcs M6*12 screws (B).


Assembly

17

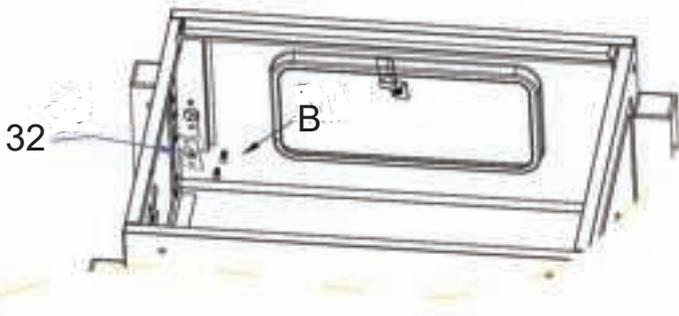


7. Handle grip (32) is fixed to the front panel (13) with 2 pcs M6*12 screws (B).

Assembly

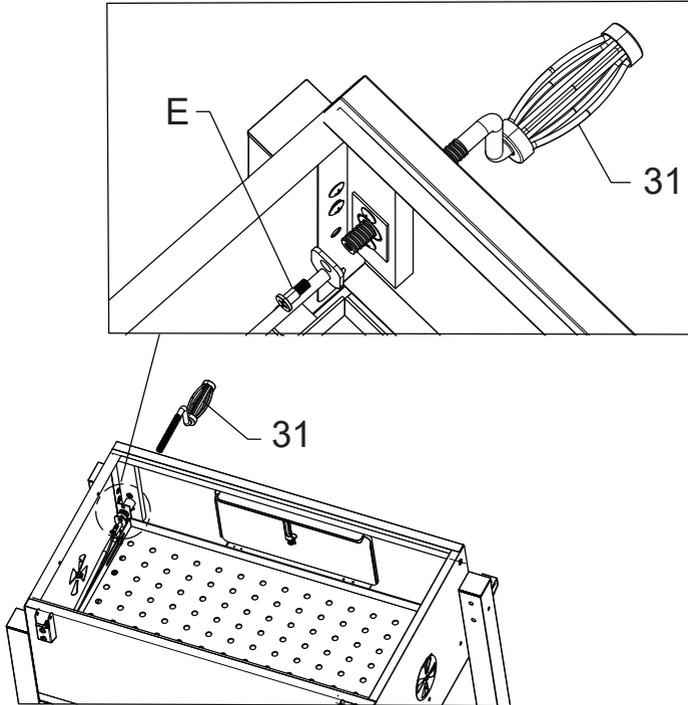


8. The lever handle (31) goes thru the front panel hole.
1pc M6*20 shoulder screw (H) goes thru charcoal tray connecting bar hole from inside, then fixed with lever handle thread hole at the top end.

Assembly

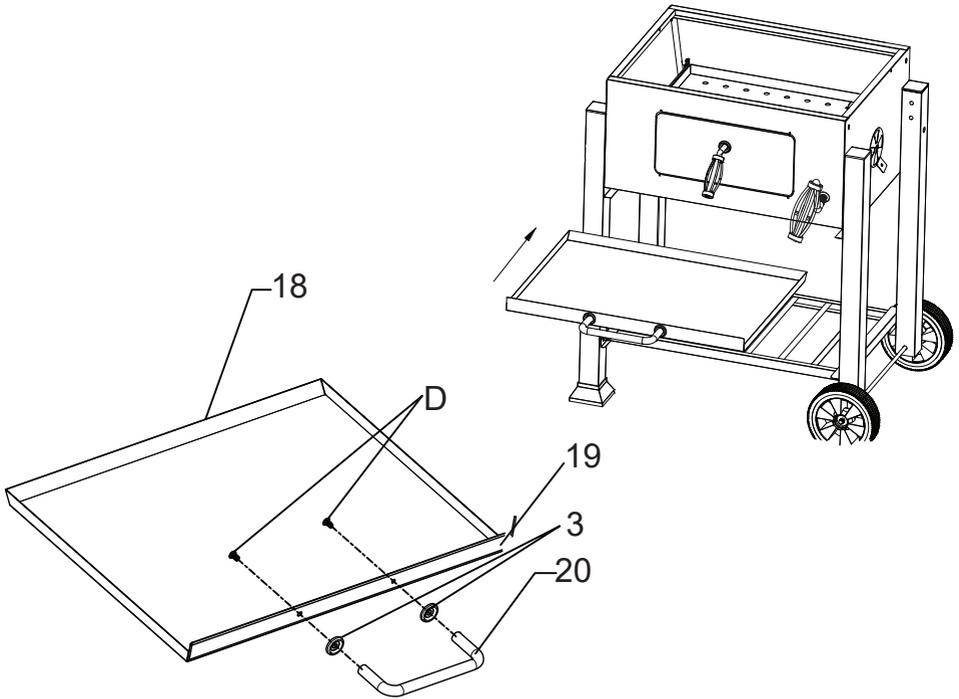


9. Fix Ash tray handle (20) and 2pcs washers (3) to Decorating strip (19) and ash tray (18) by 2pcs M6*16 screws (D).
Then fix the ash tray to the body.

Assembly

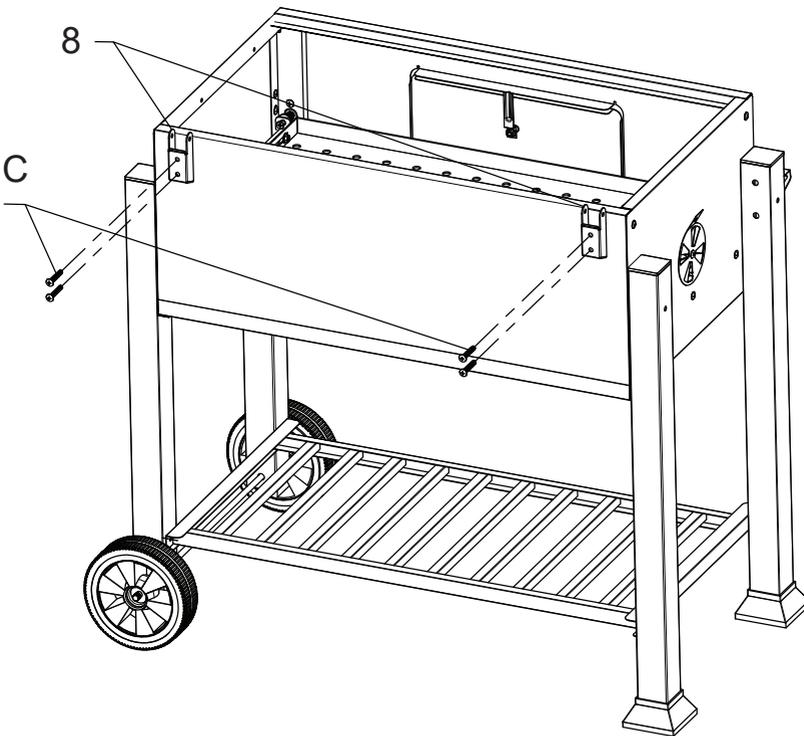


10. Lower hingers (8) are fixed to the back panel (9) with 4pcs M6*40 screws (C).

Assembly

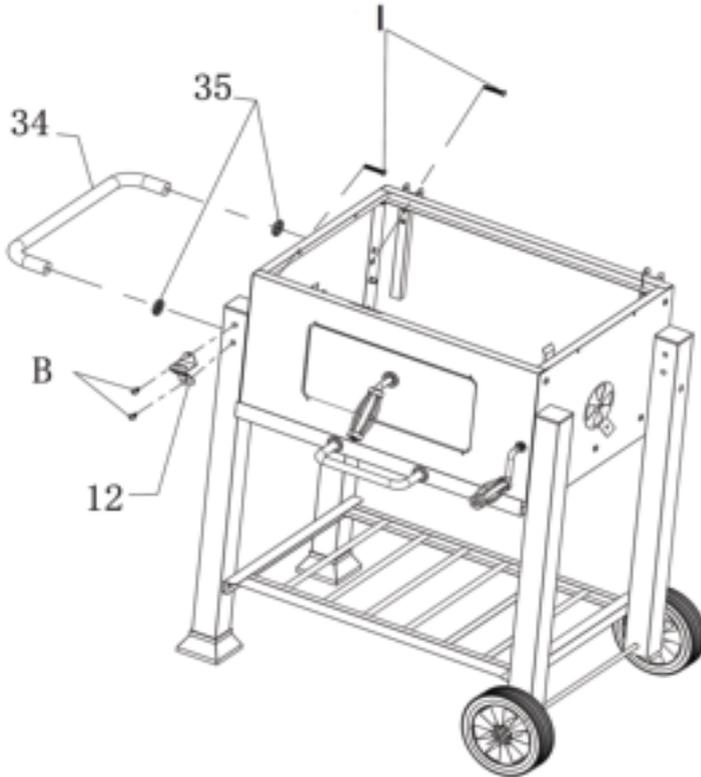


11. Bottle opener (12) is fixed on the left front leg with 2 pcs M6*12 screws (B). Fix side handle (34) and side handle washer (35) with 2 pcs M6*70 screws (I).

Assembly

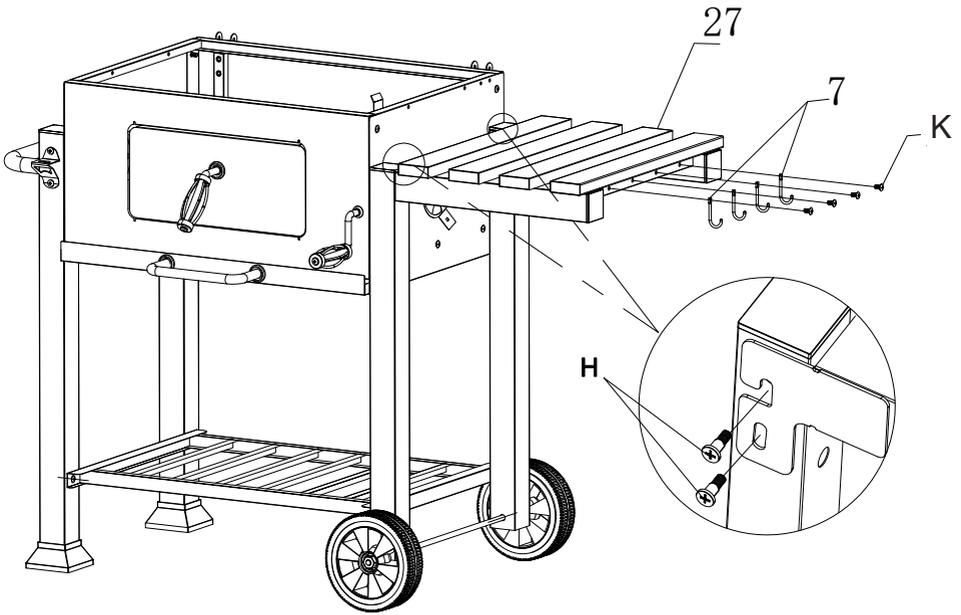


12. Fix side table (27) to right side by 4pcs M6*20 shoulder screws (H).
Fix the hooks (7) to end of side table which has thread holes already, using 4pcs M4*8 screws (K).

Assembly

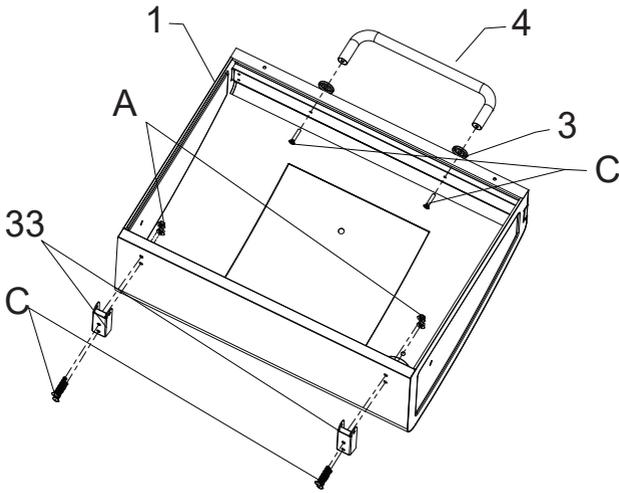


13. Fix handle for lid (4), handle washer (3) to lid (1) by 2pcs M6*40 screws (C).
Fix the upper hinges (33) to lid by 4pcs M6*40 screws (C) and 4pcs M6 nuts (A).

Assembly

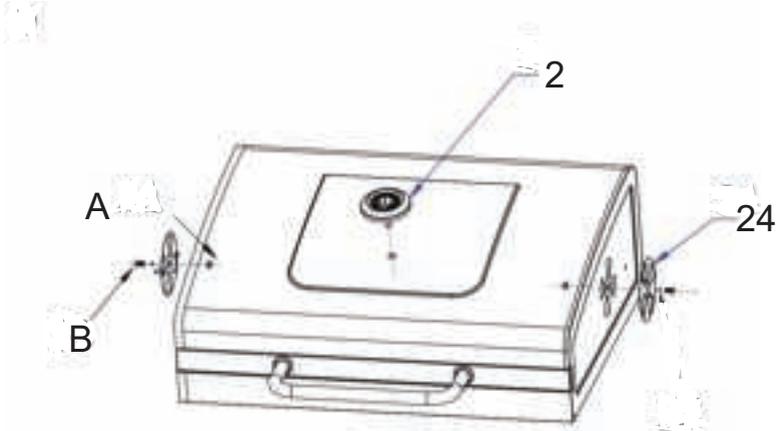


14. Fix the 2pcs air vents (24) to the lid by 2 pcs M6*12 screws (B) and 2pcs M6 nuts (A).
Fix the thermometer (2) on the top of lid by its own nut.

Assembly

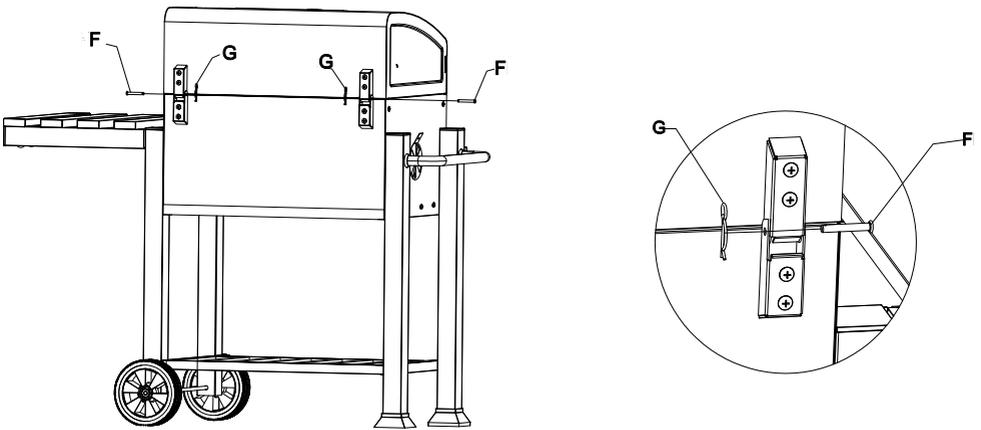

15. Lid is fixed to the body by locking the upper and bottom hinges by 2pcs pins (F) and 2pcs R clips (G).

Assembly

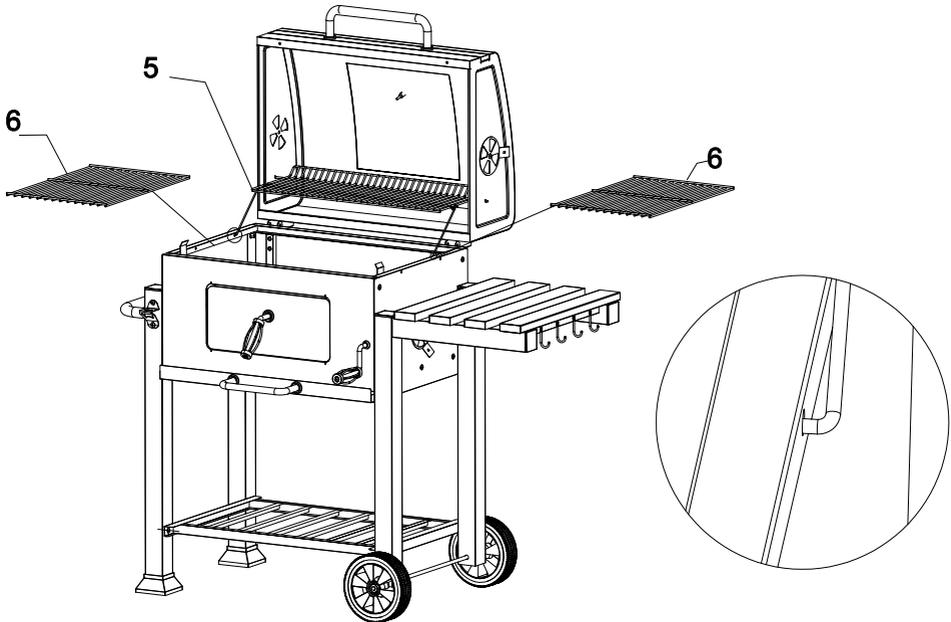

16. Fix the warming grid (5) into the lid and body. See detailed for fixing into the body.
Put the cooking grids (6) on and ready for cooking.

Tight all screws before use
Assembly completed