

MaxxHome AC8 Luchtkoeler 400ml 20748



SET UP





Fig 1

Fig 2

- 1. Place the cooler on a flat surface.
- 2. Open the water tank door and fill with water(see Fig 2).
- Insert the small head of USB cable to left back of the cooler, and another head to outer USB socket with power.

USAGE

- 1. Press On/Off Button to power on the cooler.
- Set the fan speed by pressing button. You can choose from Low, Medium and High mode. The indicator lights next to the button show you which speed is currently running.
- 3. There is light color by pressing but
- 4. When you're done, press the On/Off button again to turn off the cooler.

WARNINGS

- People with limited physical, visual or mental abilities or lacking proper experience and/or knowledge should never use the device without supervision of those responsible for their safety or those capable of assistance in using the device.
- The device can be switched off completely only when disconnected from the power supply.
- The manufacturer does not bear any responsibility for any damage from failure to comply with this product guide.

SET UP





Fig 1

Fig 2

- 1. Place the cooler on a flat surface.
- 2. Open the water tank door and fill with water(see Fig 2).
- Insert the small head of USB cable to left back of the cooler, and another head to outer USB socket with power.

USAGE

- 1. Press On/Off Button to power on the cooler.
- Set the fan speed by pressing button. You can choose from Low, Medium and High mode. The indicator lights next to the button show you which speed is currently running.
- 3. There is light color by pressing but
- 4. When you're done, press the On/Off button again to turn off the cooler.

WARNINGS

- People with limited physical, visual or mental abilities or lacking proper experience and/or knowledge should never use the device without supervision of those responsible for their safety or those capable of assistance in using the device.
- The device can be switched off completely only when disconnected from the power supply.
- The manufacturer does not bear any responsibility for any damage from failure to comply with this product guide.

- A replaceable water filter is designed specifically for this product. If your cartridge has been broken or damaged, you can purchase replacement.
- Do not carry the cooler when filled with water. Some water may remain in unit even if tank is empty.
- 6. Use only clean water. If needed, use distilled water.
- Please read and follow regular maintenance as recommended in 'Maintenance' section of this guide.
- The cooler works best in non-polluted areas, Large dust/dirt particles may reduce lifetime of unit.
- We recommend use only in dry locations. If using in a moist area or environment take care not to get water on external of the product.
- If a leak or spill occurs on the surface of device, unplug the cooler and let it dry for 24 hours. Then, use as normal.
- 11. Do not place in direct sunlight for extended periods of time.
- 12. If not using the cooler for extended periods of time, empty the water tank, turn unit on, and set to highest fan speed for at least 4 hours. This will dry out the filter and inside of your unit.
- 13. Only use the original USB cord supplied in package.
- 14. Do not touch the power supply or power cord with wet hands.
- Unplug the cooler when cleaning, removing/replacing filter, or moving the device.
- For best results, place the cooler on a higher surface like a table or countertop.
- 17. Do not place the cooler near a heater or any electrical equipment.
- 18. Do not place the device in passageways or high traffic areas where there is a possibility of tripping or knocking it over.
- 19. Do not allow any foreign objects inside the cooler.
- 20. Do not place items on top the cooler
- 21. Do not block the front and back grills of the device.
- 22. Do not turn the device upside and down.
- 23. Do not submerge the cooler under water or other liquids.
- 24. Do not place Arctic near open flames or fire sources.