

# Skipoo Drinkfontein

NL p.2-11  
EN p.12-21

## Handleiding



Lees deze instructies vóór gebruik om schade aan je nieuwe Skipoo product te voorkomen.

# Specificaties

**Productnaam:** Skipoo Drinkfontein

**Modelnummer:** DU3L-S

Inclusief 2 filters en een reinigingsborstel

**Gewicht per verpakking:** 1.2kg

**Lengte kabel:** 1.5m

**Vervanging filter:** om de 15 tot 30 dagen

**Pomp reinigen:** om de 2 weken

**Energie Input:** AC 100V-240V 50/60Hz

**Energie Output:** DC 5V 1A

**Materiaal:** milieuvriendelijk ABS kunststof

**RoHS**    



# Specificaties

-  Bovenste filterbak
-  Gaasrooster
-  Actieve koolstoffilter
-  Ionenwisselaarhars
-  Waterfilterbak
-  Filterbakhouder
-  Fonteinkop
-  Waterreservoir



SKIPOO

# Installatie

1.1

## Waterpomp installeren:

Plaats de waterpomp in het waterreservoir. Zorg ervoor dat de gaten aan beide zijden van de waterpomp olijnen met de bevestigingspunten in het reservoir. Druk aan zodat de waterpomp vastklikt.

Trek de kabel door het gat aan de zijkant en plaats de anti-lek deksel. Druk het deksel stevig aan op het reservoir zodat deze goed aansluit en er geen water meer door kan.

1.2

Vul het waterreservoir met water. Vul niet verder dan het aangegeven maximale waterniveau van 3 liter.



Trek de kabel eerst door het gat en plaats dan de anti-lek deksel.



plaats de waterbak op het waterreservoir.




Haal de 3-in-1 waterfilter uit de verpakking en spoel deze minimaal 30 seconden met koud water.

Zo kunnen kleine koolstofdeeltjes, die tijdens het transport zijn vrijgekomen, worden weggespoeld.



Plaats de met water afgespoelde filter op zijn kop in de waterfilterbak. Zorg ervoor dat de groeven in de filter zijn uitgelijnd met de groeven van de waterfilterbak.

Laat de groeven op elkaar aansluiten

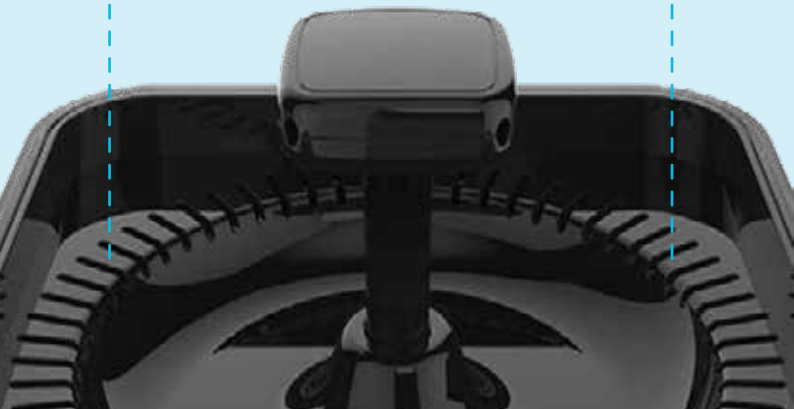



Na het plaatsen van het filter kun je de drinkwaterbak plaatsen. Het apparaat is nu klaar voor gebruik.

Je kunt het apparaat inschakelen door de USB-kabel aan te sluiten op een adapter en de adapter in het stopcontact te steken. De USB-kabel om het apparaat in te schakelen wordt meegeleverd.



## Goed om te weten!








Tijdens het gebruik van de drinkfontein kan het voorkomen dat het apparaat geluid gaat maken. Dit is een teken dat het apparaat schoongemaakt en doorgespoeld moet worden.

Verderop in de handleiding lees je wat je kunt doen om de waterpomp en de fontein te onderhouden. Het is aanbevolen het apparaat regelmatig te reinigen.

Zo blijft de werking optimaal en verleng je de levensduur van het apparaat.



# Waarschuwingen






-  Enkel geschikt voor gebruik binnenshuis.
-  Plaats de waterfontein altijd op een vlakke ondergrond, anders functioneert het apparaat mogelijk niet goed.
-  Zorg ervoor dat de elektrische onderdelen niet in contact met water komen.
-  De aansluiting van de adapter en het stopcontact dienen altijd hoger te zijn dan de waterfontein om te voorkomen dat er water in het stopcontact spettert.
-  Gebruik alleen de meegeleverde USB-kabel.
-  Sta niet toe dat je huisdier in de kabel bijt.
-  Het is aan te raden om het apparaat op een placemat te plaatsen om geluid en spetters te minimaliseren.





## Onderhoud

Voor een optimale werking dient je het de onderdelen regelmatig te reinigen:

-  Schakel de waterfontein uit voordat je begint.
-  Haal de delen uit elkaar en reinig met een schone spons en een oplossing van milde zeep in water.
-  De waterpomp reinigen met heet water (geen zeep) en met het schoonmaakborsteltje.
-  Gebruik geen brandstof, alcohol of sterke reinigingsmiddelen.
-  Alle onderdelen van dit product kunnen veilig in de vaatwasser met uitzondering van de elektrische waterpomp en de adapter.

## Duurzaamheid

De gebruikte materialen zijn milieuvriendelijk en gemakkelijk afbreekbaar. Zo zetten we ons écht in voor duurzaamheid en dragen we bij aan een betere, groenere wereld!

# Veelgestelde Vragen



## Hoe vaak moet de filter vervangen worden?

Dit is afhankelijk van de waterhardheid en waterkwaliteit. Meestal iedere 2 tot 4 weken.



## Waarom zitten er zwarte stukjes in de 3-in-1 waterfilter?

Dit is normaal, de geactiveerde carbon deeltjes komen soms los tijdens transport. Door deze weg te spoelen zullen deze deeltjes niet meer vrijkomen tijdens gebruik.



## Hoe vaak moet ik de drinkfontein schoonmaken/onderhouden?

Het is aan te raden om dit te doen tijdens het vervangen van de waterfilter. Ook dit hangt af van de waterhardheid (kalk).



## Wat is de levensduur van de waterpomp?

Deze drinkfontein is uitgerust met een waterpomp met een extra lange levensduur. De waterpomp gaat bij normaal gebruik zo'n 20.000 uur mee, ongeveer 2 jaar.



## Hoe lang heb ik garantie?

U heeft 1 jaar fabrieksgarantie op dit product op basis van normaal gebruik. Wij geven geen garantie bij schade door onjuist gebruik of gebrek aan onderhoud.



### **Verbruikt de drinkfontein veel stroom?**

De drinkfontein heeft een superzuinige pomp met een stroomverbruik van 1,5W. Uitgaande van 24/7 gebruik zal het maandelijks verbruik ongeveer 1kWh zijn en het totaal verbruik per jaar ongeveer 13 kWh.



### **Maakt de drinkfontein veel geluid?**

De waterpomp is ultra-stil. Bij normaal gebruik is de geluidsopbrengst ongeveer 35 dB.



### **Waarom maakt de drinkfontein een raar geluid?**

Dit is meestal een teken dat het apparaat onderhoud nodig heeft. Reinig het product. Controleer ook of er voldoende water in het apparaat zit en of deze gelijkvloers staat.



# Skipoo Pet Fountain

## User Manual



Please read these instructions before use to avoid damage to your new Skipoo product.

# Specifications

**Product name:** Skipoo Pet Fountain

**Model number:** DU3L-S

Includes 2 filters and a cleaning brush

**Weight per package:** 1.2kg

**Cable length:** 1.5m

**Filter replacement:** every 15 to 30 days

**Cleaning the pump:** every 2 weeks

**Energy Input:** AC 100V-240V 50/60Hz



**Energy Output:** DC 5V 1A

**Material:** eco-friendly ABS plastic

**RoHS**     



# Specifications

-  Upper filter bowl
-  Mesh grill
-  Activated carbon filter
-  Ion exchange resin
-  Water filter tray
-  Filter tray holder
-  Fountain head
-  Water tank



SKIPOO

# Installation

1.1

## Water pump installation:

Place the water pump in the water tank. Make sure that the holes on both sides of the water pump align with the the mounting points in the reservoir. Press down so the water pump snaps into place.

Pull the cable through the hole on the side and place the anti-leak lid. Press the lid firmly onto the reservoir so that it fits tightly and no more water can get through.

1.2

Fill the water tank with water. Do not fill beyond the indicated maximum water level of 3 liters.



Firstly pull the cable through the hole and then place the anti-leak lid.



Place the water tray on the water tank.




Remove the 3-in-1 water filter from the packaging and rinse it at least 30 seconds with cold water.

In this way, small carbon particles, which were released during transport, can be released and washed away.



Place the filter, rinsed with water, upside down in the water filter container. Make sure the grooves in the filter are aligned with the grooves in the water filter container.

Make the grooves fit together

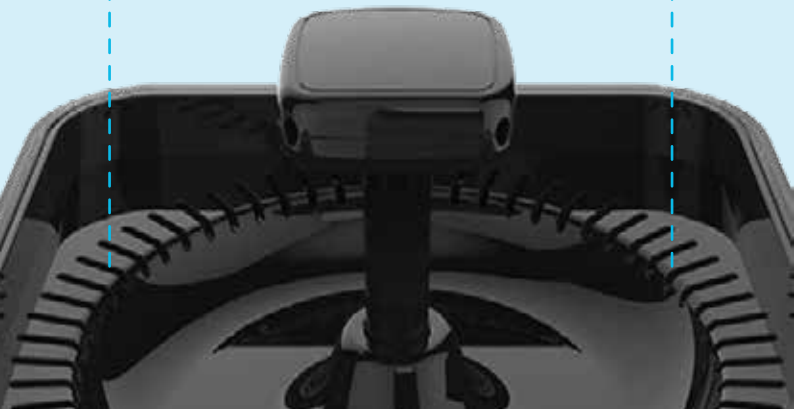





After placing the filter, you can place the drinking water bowl in place. The unit is now ready for use.

You can turn on the device by connecting the USB cable to an adapter and plug the adapter into a wall outlet. The USB cable to turn on the device is included.



## Good to know!








During the use of the drinking fountain, it is possible that the device may make a noise. This is a sign that the device has been cleaned and flushed.

Further on in the manual you will read what you can do to the water pump and the fountain maintenance. It is recommended to clean the device regularly.

This keeps the operation optimal and extends the life the life of the device.








## Warnings

-  Only suitable for use indoors.
-  Always place the water fountain on a flat surface, otherwise the device may not function properly.
-  Make sure that the electrical components do not come into contact with water.
-  The connection of the adapter and the wall socket should always be higher than the water fountain to avoid water from splashing into the outlet.
-  Use only the supplied USB cable.
-  Do not allow your pet to bite the cable.
-  It is recommended to place the device on a placemat to minimize noise and splashing.



## Maintenance

For optimal operation you should clean the parts  
clean the parts regularly:

-  Turn off the water fountain before you begin.
-  Disassemble the parts and clean with a clean sponge and a solution of mild soap in water.
-  Clean the water pump with hot water (no soap).
-  Do not use fuel, alcohol or strong cleaning agents.
-  All parts of this product are safe to put in the dishwasher with the exception of the electric water pump and the adapter.

## Sustainability

The materials used are environmentally friendly and easily degradable. This is how we really commit to sustainability and contribute to a better, greener world!

## Frequently Asked Questions (FAQ's)



### How often should the filter be changed?

This depends on the water hardness and water quality. Usually every 2 to 4 weeks.



### Why are there black pieces in the 3-in-1 water filter?

This is normal, the activated carbon particles sometimes come loose during transport. By rinsing them away these particles will no longer be released during use.



### How often should I clean/maintain?

It is recommended to do this during the replacement of the water filter. This also depends on the water hardness (lime).



### What is the life span of the water pump?

This pet fountain is equipped with a water pump with extra long life. The water pump lasts with normal use about 20,000 hours, about 2 years.



### How long do I have a warranty?

You have 1 year manufacturer's warranty on this product based on normal use. We give no warranty for damage by improper use or lack of maintenance.



### **Does the pet fountain consume a lot of power?**

The pet fountain has a super economical pump with a power consumption of 1.5W. Assuming 24/7 use, the monthly be about 1kWh per month and the total consumption per year about 13 kWh.



### **Does the pet fountain make a lot of noise?**

The water pump is ultra-quiet. In normal operation, the noise output is approximately 35 dB.



### **Why does the pet fountain make a strange noise?**

This is usually a sign that the unit requires maintenance. Clean the product. Also check that there is sufficient water in the appliance and whether it is at ground level.

